




Your Performance Partner

Assembly Instructions Class Piano Workstation

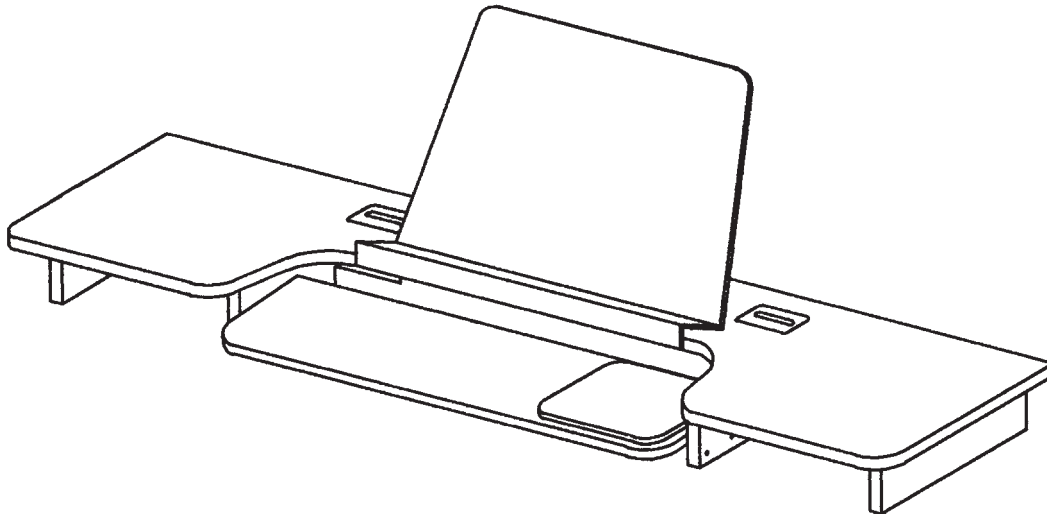

CONTENTS

Warranty	2
Important User Information	3
General	3
Manufacturer	3
Intended Use	3
Before You Begin	4
Required Tools	4
Replacement Parts List	4
Assembly	5

Please read and understand these Assembly Instructions before working with or using the Class Piano Workstation.

If you need additional information about the Class Piano Workstation, contact Wenger Corporation using the information below.

WARRANTY

The Class Piano Workstation is guaranteed free of defects in materials and workmanship for five full years.

Our guarantee assures you of either a full refund or repair or replacement of the defective materials or workmanship without charge, at the discretion of our Customer Service Department.

Just call a Customer Service Representative at 1-800-887-7145 and state the reason you are dissatisfied. If a product return is necessary, your representative will issue a return authorization. This is your sole remedy for breach of this warranty.

Should you have a question or problem with any Wenger product, don't hesitate to call, even if the product is past warranty. It's important to us that all our customers be satisfied.

This is the sole warranty made by Wenger. Wenger disclaims all other warranties, including the warranties of merchantability and fitness for a particular purpose, as well as all liability for incidental, consequential, special, and indirect damage. Wenger liability for direct damages shall be limited to the amount you paid for the product involved. Wenger reserves the right to make product changes without obligation to incorporate such changes into products previously sold.

Some states do not allow the exclusion or limitation of damages or warranties, so the above may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

IMPORTANT USER INFORMATION

GENERAL

Copyright® 2007 by Wenger Corporation

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, unless it is for the purchaser's personal use.

Printed and bound in the United States of America.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Wenger Corporation. Wenger Corporation does not assume any responsibility for any errors that may appear in this manual.

In no event will Wenger Corporation be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of this manual.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when assembling or installing Wenger Corporation products. If any questions or problems arise, call Wenger Corporation at 1-800-733-0393.

MANUFACTURER

The Class Piano Workstation is manufactured by:

Wenger Corporation
555 Park Drive
Owatonna, MN 55060
1-507-455-4100 • 1-800-733-0393
www.wengercorp.com

INTENDED USE

- This product is intended for indoor use in normal ambient temperature and humidity conditions — it must not be exposed to prolonged outside weather conditions.
- This product is intended to be assembled only as described in these instructions.

BEFORE YOU BEGIN

 
- Read the complete assembly procedure before you begin.
- Remove all items from the shipping carton and lay them out approximately in their final position.

REQUIRED TOOLS


- Phillips Head Screwdriver with a short shaft
- 4 mm hex wrench (supplied), if installing on a 76-key piano.

REPLACEMENT PARTS LIST

④

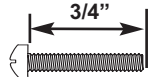


Machine Screw

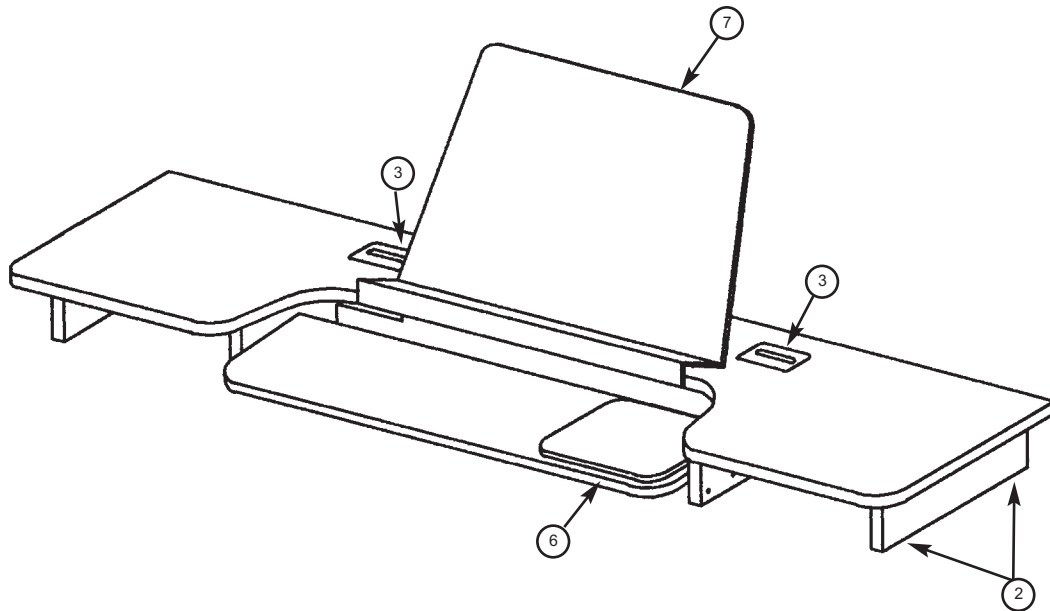


<u>Item</u>	<u>Qty</u>	<u>Description</u>
1	1	Cover, rear, plastic (not shown)
2	8	Foot, rubber
3	2	Grommet, wire
4	4	Screw, machine, 8-32X3/4" (oyster and black)
5	1	Strip, outlet (not shown)
6	1	Pad, mouse
7	1	Holder, music

ASSEMBLY


1. Screw the eight rubber feet (2) into the threaded inserts. Tighten securely.

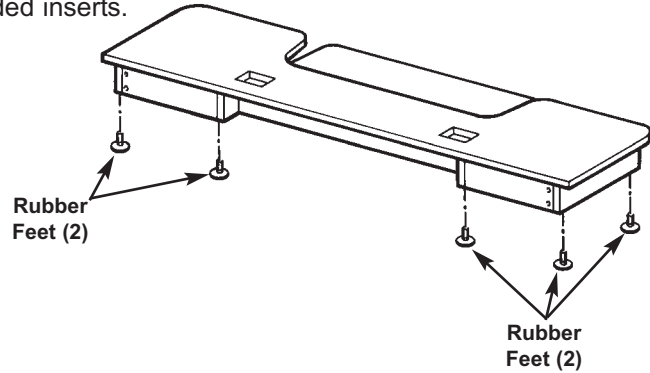


2. Press the wire grommets (3) into the precut holes.

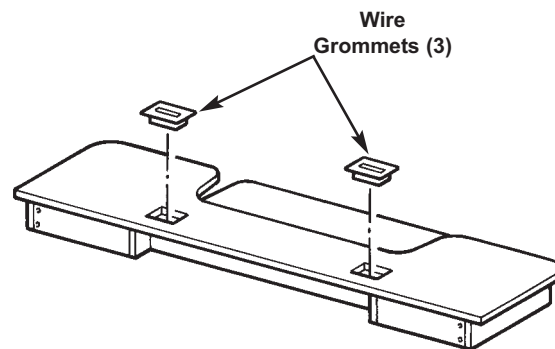

3. The Class Piano Workstation is shipped with the end support panels positioned for an 88-key piano. To install on a (narrower) 76-key piano:
 - a. Turn Workstation upside down.
 - b. With 4 mm hex wrench, unlock the two Minifix cam connectors on each end.
 - c. Remove the two screws from back panel.
 - d. Move Minifix bolts to inner sets of holes.
 - e. Reassemble unit.

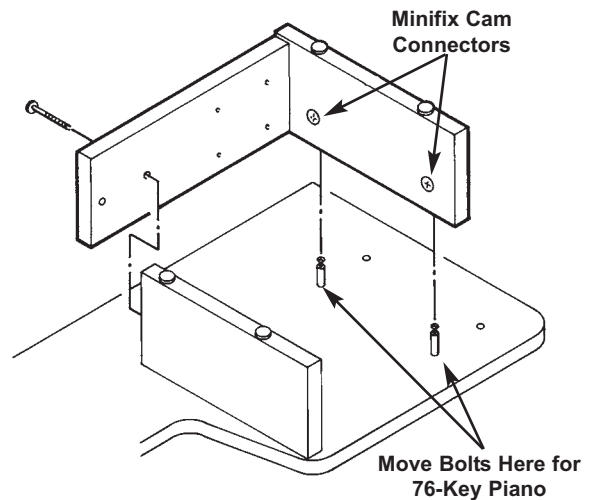


- f. Move both end support panels in as shown.

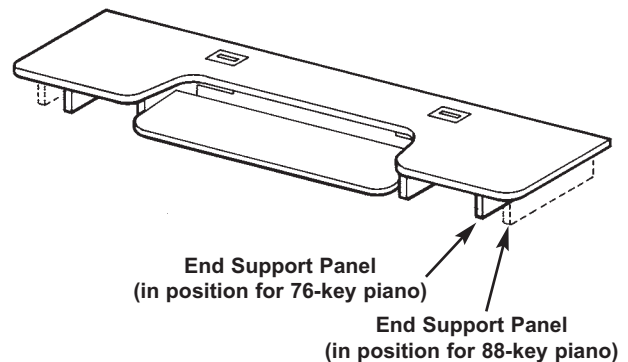


ASSEMBLY (CONTINUED)

4. Set the workstation on the piano.
Align the back of the workstation with the back of the piano.
Press down firmly to secure the rubber feet.
5. Set the computer or other equipment on top of the workstation.
6. Route all power cords and cables:
 - a. Route the computer power cord and cables, MIDI or audio cables, etc., down through the wire grommets.
 - b. Plug the outlet strip power cord into a 115V AC electrical outlet.
 - c. Plug any equipment power cords into the outlet strip.

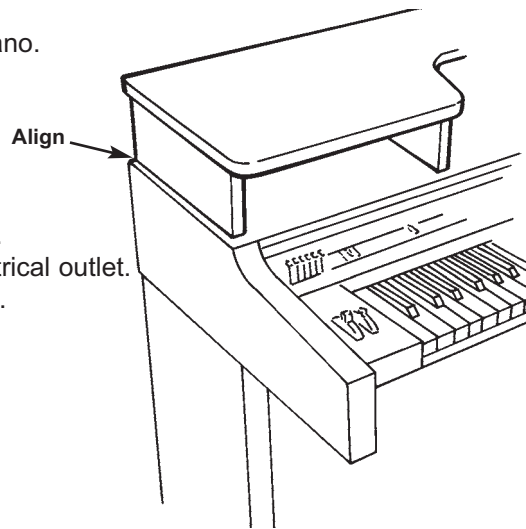


7. Attach the plastic cover (1) to the back of the workstation using four 3/4" machine screws (4).

Note: Use oyster screws with white back and black screws with black back.

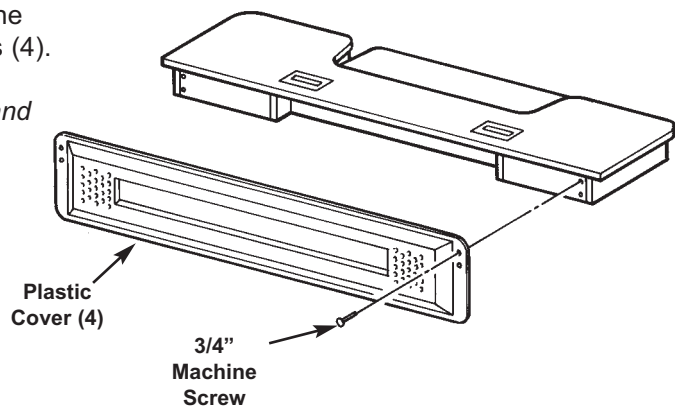

8. Install the music holder (7).
Slide it over the front edge of the workstation as shown.

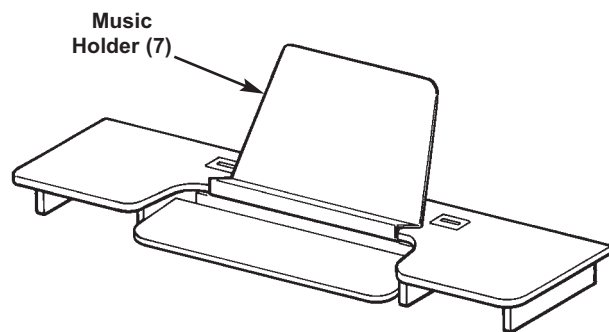

ASSEMBLY (CONTINUED)

9. Place the mouse pad (6) on either the left or right side of the pullout keyboard tray and remove the adhesive-backed paper to install.

