

# Unloading Instructions Legacy<sup>®</sup> Basic Acoustical Shell

## \*\*\*Assembly Instructions and Owner's Manual Inside\*\*\*

# 

Failure to follow these instructions could result in serious injury or damage to the shell.

# 

Read the Assembly Instructions before removing the pallet or unbanding the shell.

### DO NOT REMOVE OR DISASSEMBLE THE PALLET AT THIS TIME.

#### If There Is A Forklift and Loading Dock


Remove the shell from the truck upright as it was shipped.

### If There Is A Loading Dock, But No Forklift

Shells are top-heavy, Keep the shell upright. Slide it off the truck, leading with one of the narrow ends or move with a pallet jack.

#### If There Is No Loading Dock

The delivery truck is required to have a lift gate. CAREFULLY lower the pallet to the ground. DO NOT DROP!

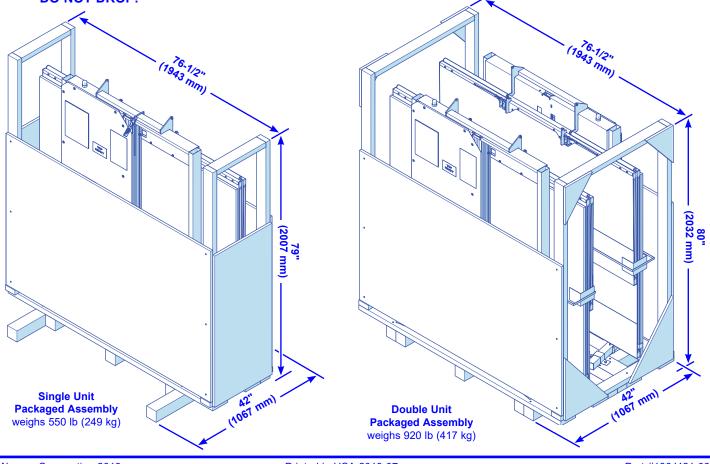

©Wenger Corporation 2019

Printed in USA 2019-07

Part #186J421-03

Wenger Corporation, 555 Park Drive, PO Box 448, Owatonna, Minnesota 55060-0448

Questions? Call.....USA: 800.4WENGER (493-6437) • Worldwide: +1.507.455.4100 • wengercorp.com