




Oblique File System Accessory for Music Library System

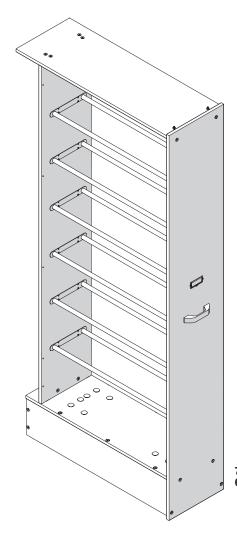

7-Shelf Oblique Unit is shown. 6-Shelf Oblique Unit assembly is the same.

Contents

Required Tools	2
Hardware Parts List	2
Oblique File System Components	3
Ohlique File System I Init Assembly	4



Visit the Music Library System web page at www.wengercorp.com for more details.

Note: Please read and understand the instructions before starting the assembly or installation. **Note:** If you need additional information, contact Wenger Corporation using the information below.

©Wenger Corporation 2016 Printed in USA 07/16 Part #173G319-02

Assemble the Guide Frames as indicated in "Guide Frame Assembly" of the original instructions before assembling the Shelf Units with the Oblique File System Accessory.

When finished, refer back to the last page of "Final System Assembly" in the original instructions to finish assembling the Music Library System.


These Assembly Instructions detail a 7-Shelf Oblique Unit assembly. The assembly of a 6-Shelf Oblique Unit is the same.

Required Tools

- Phillips Screwdriver or Drill Bit
- 7/16" Open End Wrench
- Hammer


- Power Drill with 1/8" Drill Bit
- 5/32" Hex Insert Bit (included in Hardware Pack)

Hardware Parts List

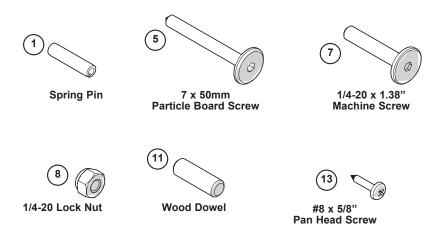


^{*}Fasteners applied to the Front Panel may be colored to match the edge banding of the system.


Shelf Unit Components

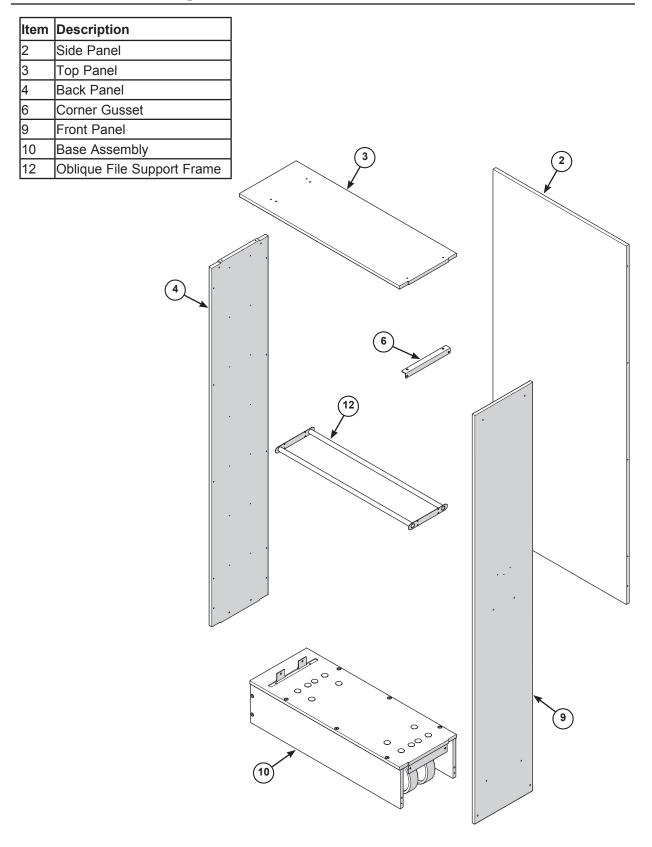

Oblique File System Unit Assembly Assembly

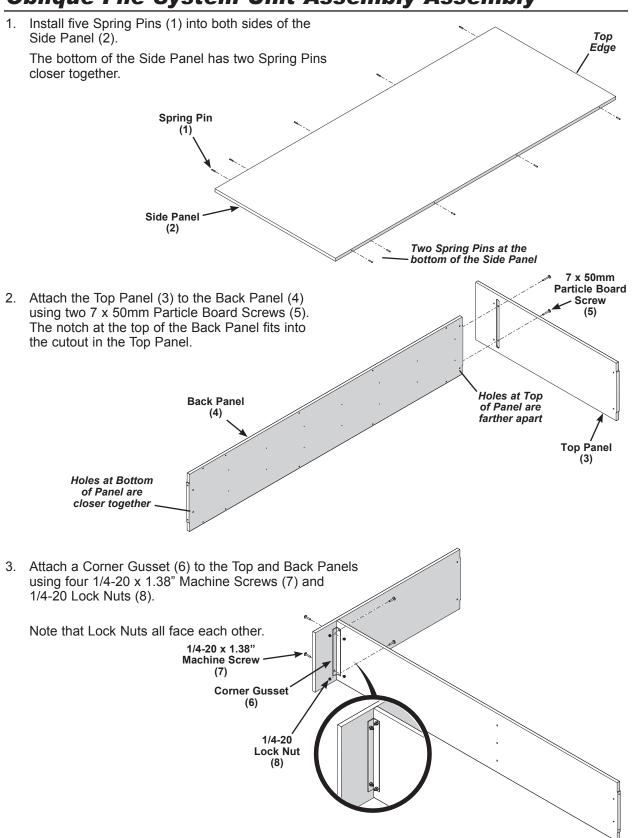


4. Determine if the Shelf Unit will be assembled for either Left Side Access or Right Side Access.

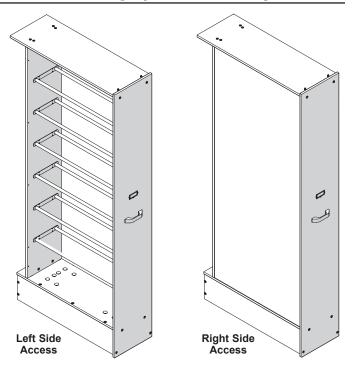

5. Align the double set of Spring Pins in the Side Panel with the double set of holes in the Back Panel and slide them together until all panels are touching.

Cardboard from the packaging may be placed under the Side Panel to elevate it high enough to align the Spring Pins with the holes in the Front Panel Slide the Spring Pins in the Side Panel into the holes in the Back Panel until all panels are touching.

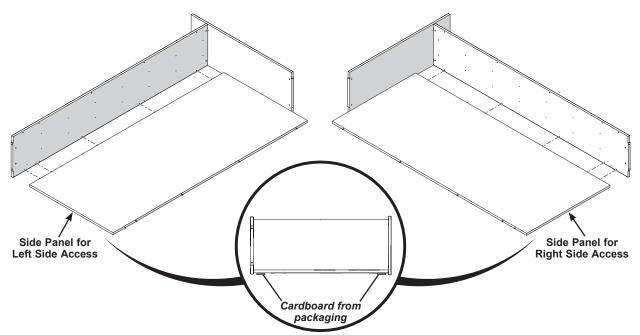

The remaining instructions detail the assembly for left side access. Right side access assembly is identical, just on the reverse side.

6. Attach the Front Panel (9) to the Side Panel by aligning the double set of Spring Pins in the Side Panel with the double set of holes in the Front Panel.

Cardboard from the packaging may be placed under the Side Panel to elevate it high enough to align the Spring Pins with the holes in the Front Panel.


Double sets of Spring Pins and holes


Spring Pins and holes

Front Panel (9)


7. Attach a Corner Gusset (6) to the Top and Front Panels using four 1/4-20 x 1.38" Machine Screws (7) and 1/4-20 Lock Nuts (8).

Note that Lock Nuts face inside on the Front Panel and face outside on the Top Panel.

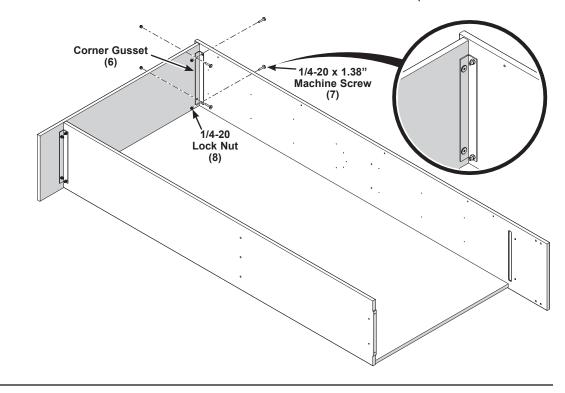

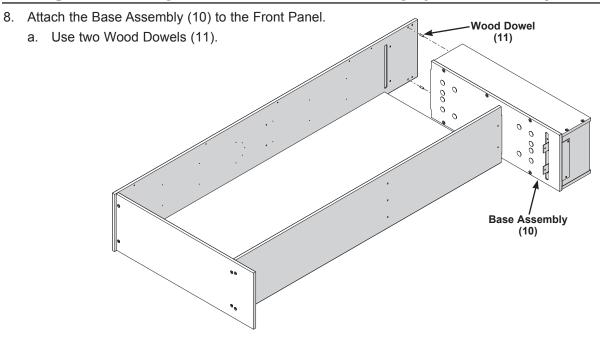


b. Attach the Base Assembly to the Front Panel using two 7 x 50mm Particle Board Screws (5) and two 1/4-20 x 1.38" Machine Screws (7) with 1/4-20 Lock Nuts (8).

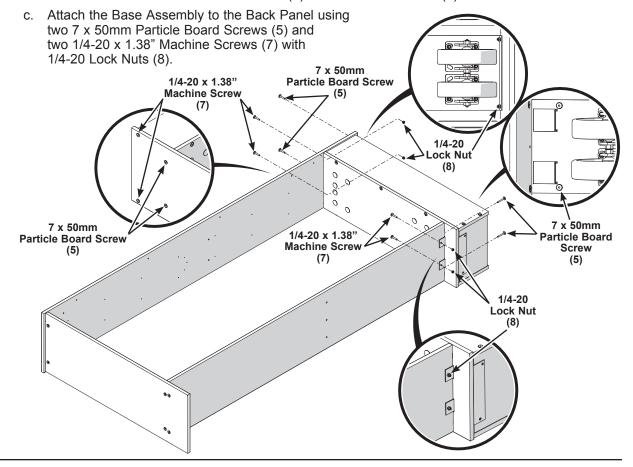

9. Attach the Oblique File Support Frames (12) to the Front and Back Panels using two #8 x 5/8" Pan Head Screws (13) in each side.

A CAUTION

Be careful not to scratch any of the panel surfaces when positioning the Oblique File Support Frames.

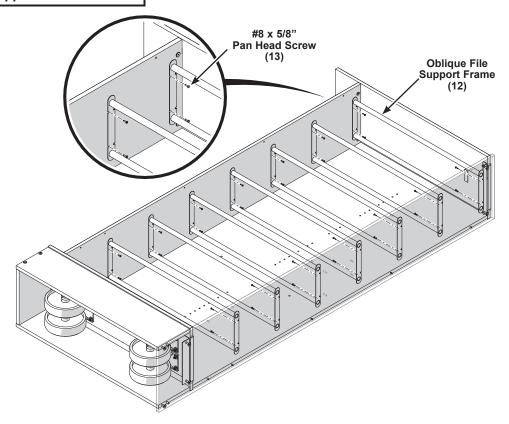

When finished, refer back to "Final System Assembly" in the original instructions to finish assembling the Music Library System.