



Assembly Instructions

Horizontal Storage Cart Accessory for StageTek® Staging System

Basic Instructions only!


For more detailed product information, refer to the
StageTek Staging System Owner's Manual 280A099.

CAUTION

*Make sure anyone assembling or
installing StageTek components has
read and understands the instructions.*

CAUTION

*Always comply with Warnings
or Cautions in the instructions
or posted on the equipment.*

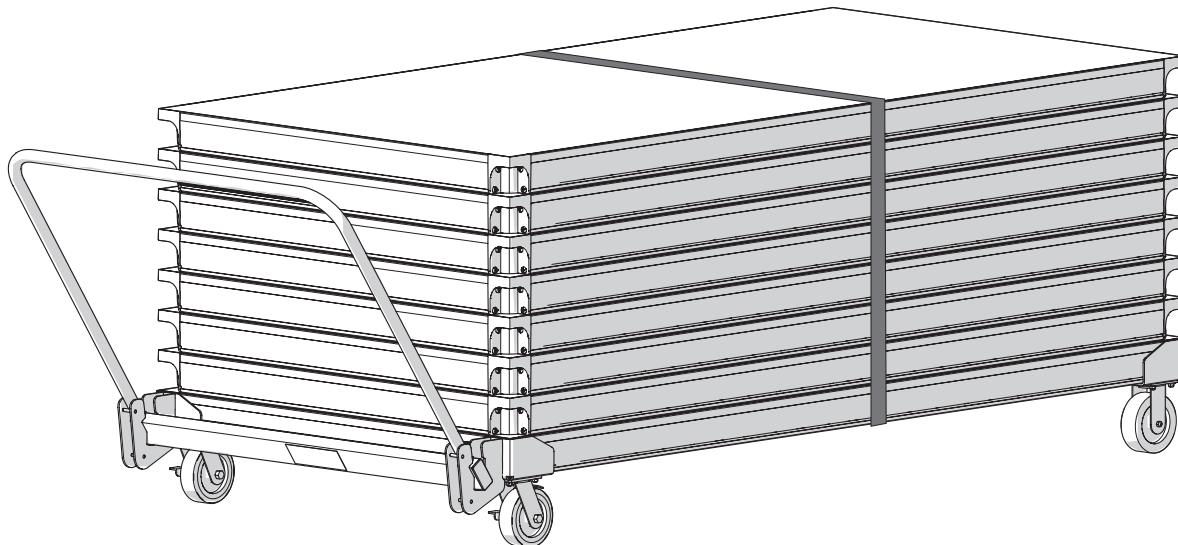

Visit the StageTek Staging System web page at wengercorp.com for more information.


Note: Please read and understand these instructions before assembling or setting up.

Note: If you need additional information, contact Wenger Corporation using the information below.


NOTICE

A 3/16" allen wrench and a 1/2" hex wrench or socket are required for assembly.


1. Attach one swivel caster (#6) to both of the rear corner weldments (#5) and one rigid caster (#7) to both of the front corner weldments (#5) using four 5/16-18 x 7/8" machine screws (#1), 5/16" ID flat washers (#2) and 5/16-18 lock nuts (#3) as shown.

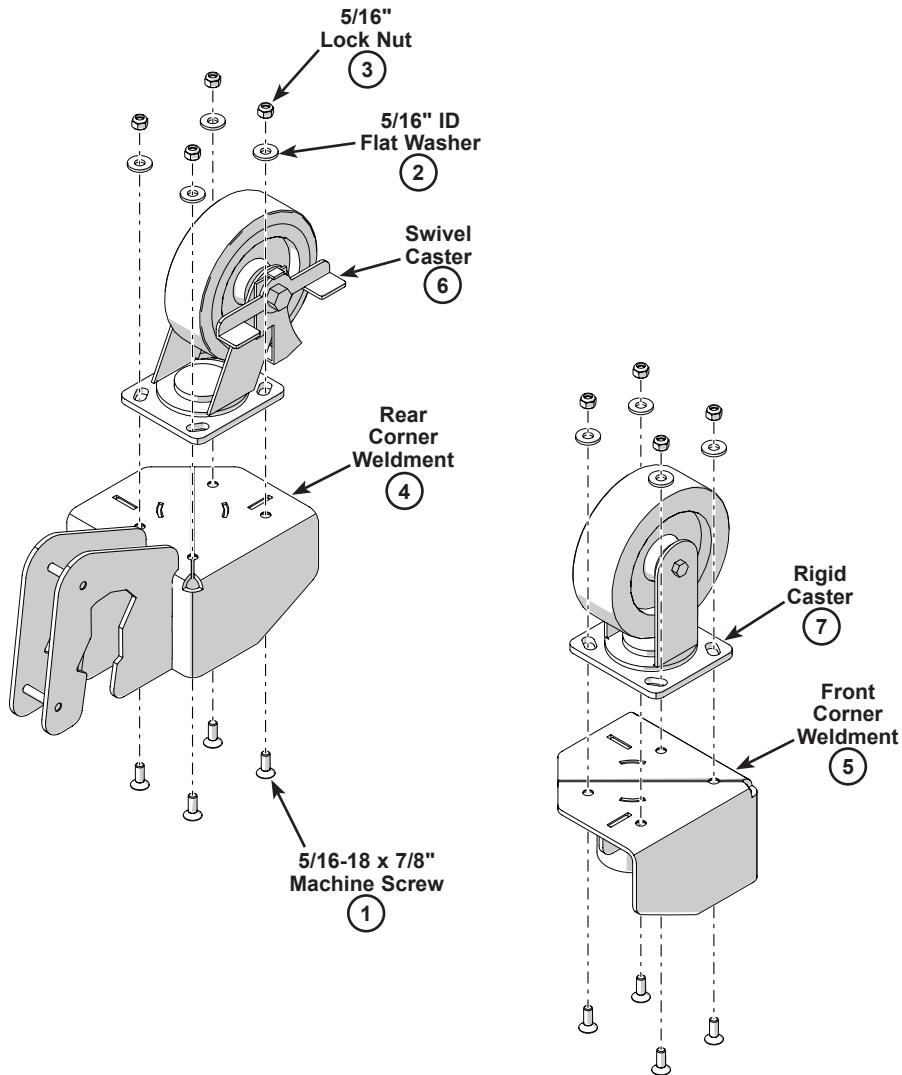


2. Attach each of the corner weldments to the underside of a StageTek rectangular deck.
 - a. Slide the corner weldments into the deck pocket assemblies.
 - b. Secure each corner weldment by hand tightening the knob on every pocket assembly.
No tools are required.

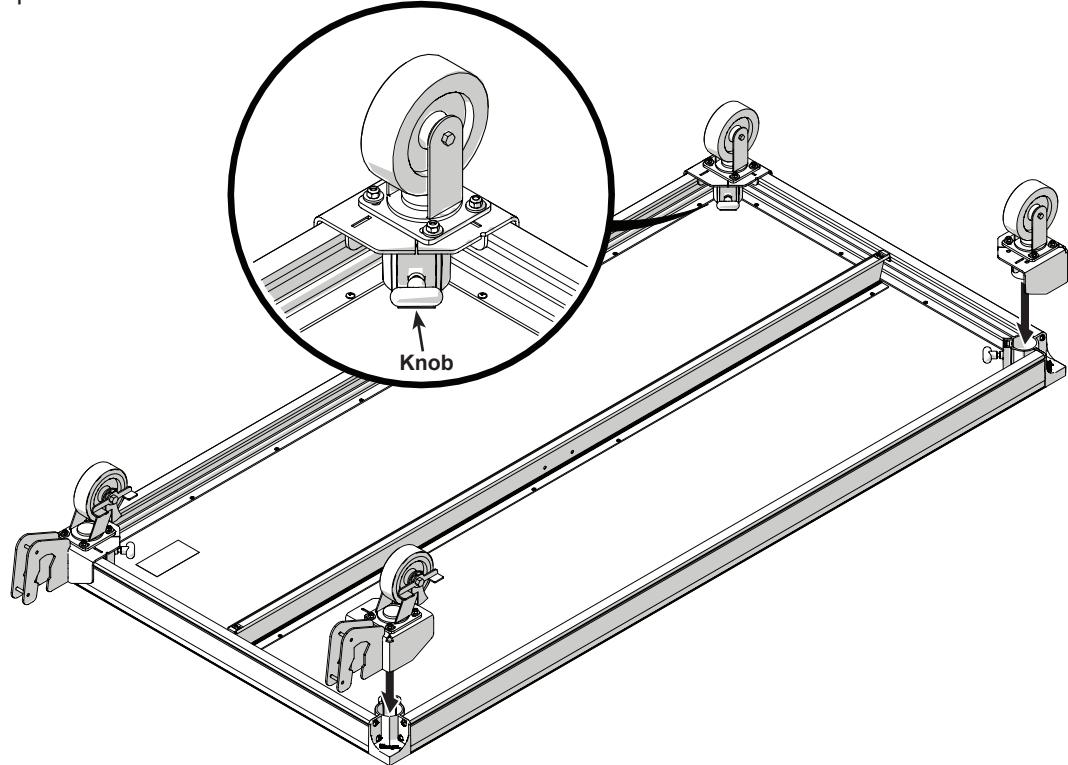


3. Turn the deck over onto the casters.
4. Insert the handle into the rear corner weldments and let it tip forward.

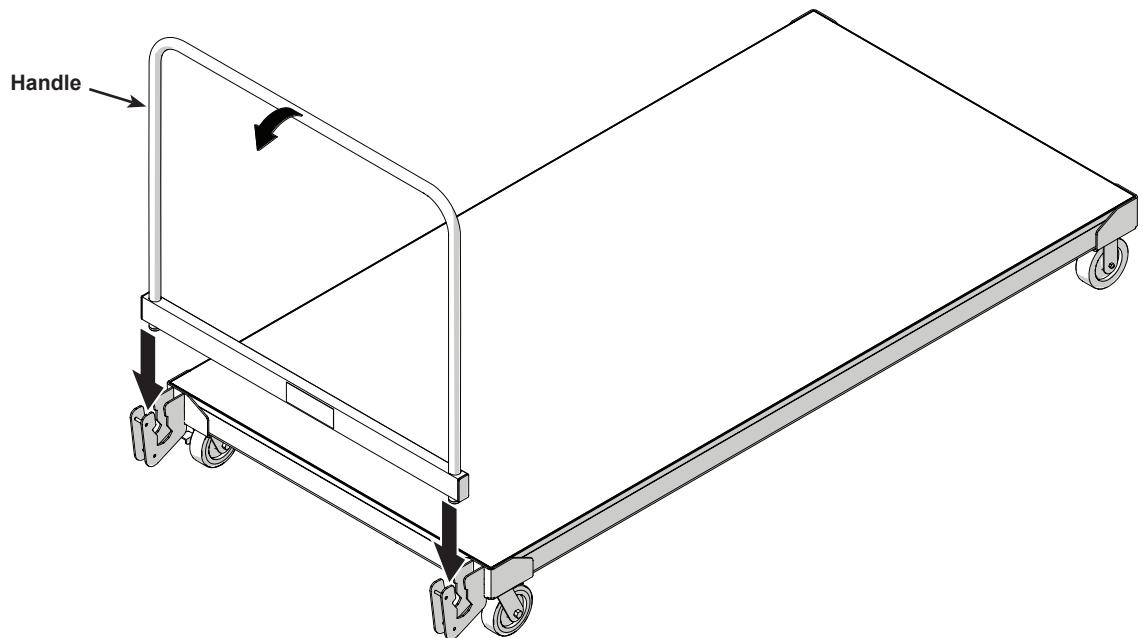

5. Apply the brake on both swivel casters before loading or unloading the cart.
6. Load up to ten additional decks onto the cart.

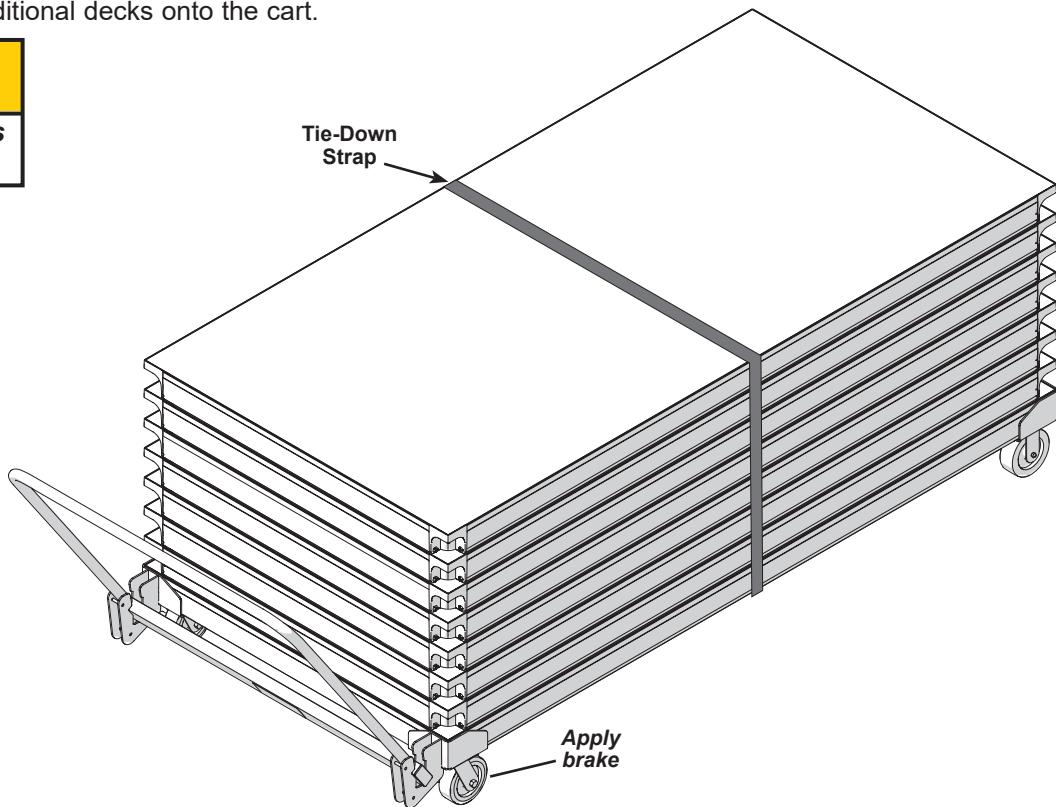

7. Secure the decks using the tie-down strap.
 - a. Pull the strap around the decks and back to the tie-down clamp.
 - b. Push on the ratchet clip and feed the strap end through as shown.
 - c. Release the ratchet clip and pull the strap end to be snug.

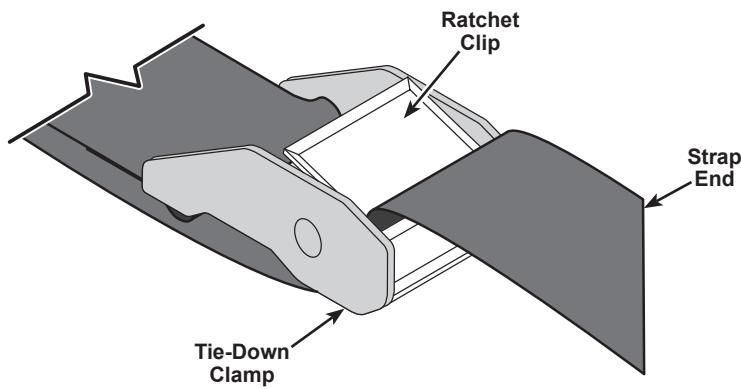

8. To release the strap, push on the ratchet clip and pull the strap loose.