



Owner's Manual

High Density Sports Storage

CONTENTS

Safety	2	Cart Assembly	14
General	2	Remove Parts from the Carton	14
Installation	2	Assemble the End Frames	15
Usage	2	Assemble Wire-grille End Panels	16
Moving Team Carts	3	Assemble Rear Wire-grille End Panel	18
Warranty	4	Assemble Handles	19
Important User Information	4	Top Panel Assembly	20
Installation	4	Place the Cart onto the Floor Track	21
Intended Use	4	Storage System Use	22
Required Tools	5	Moving Carts	22
Parts and Fasteners	5	Load Capacity	23
Fasteners	5	Maintenance	23
Cart Hardware Pack Parts List	6	Replacement Parts	24
Cart Parts List	6	X-Cart	24
Wire-grille End Panel	7	Team Cart	25
Floor Track and Hardware Parts List	7	End Frame	26
Description	8	Wire-grille End Panel	27
X Cart	8	Top Panel Assembly	28
Floor Track	9	Floor Track	29
Team Cart	9		
Installation	10		
Before Starting the Assembly	10		
Layout the Space	10		
Attach the Floor Track to the Floor	12		

Note: Please read and understand the High Density Sports Storage System Owner's Manual before attempting installation, assembly, or use.

Note: Remove all items from the shipping containers and sort the components by type, size, etc. Refer to the illustrations on the following pages. If you need additional information about your High Density Sports Storage System, write, email, or telephone Wenger Corporation at the number or address below.

Note: The High Density Sports Storage System always requires two or more people for installation.

SAFETY

Throughout this manual you will find **Cautions** and **Warnings** which are defined as follows.

- **Warning** means that failure to follow the instruction may result in serious injury or death.
- **Caution** means that failure to follow the instruction may result in injury or damage to property.

Note: Read all of these safety instructions before using or installing the High Density Sports Storage System.

GENERAL

Warning! *Installation and use of the Wenger High Density Sports Storage System must always comply with the information in the section Important End User Information, Intended Use on page 4 of this manual. Failure to observe this warning can result in damage to property or serious injury.*

Warning! *People using the Wenger High Density Sports Storage System must always observe and comply with warnings and cautions posted on the System equipment. Failure to observe this warning can result in damage to property or serious injury.*

INSTALLATION

Warning! *Always wear safety glasses and safety shoes when assembling the Wenger High Density Sports Storage System. Failure to observe this warning can result in damage to property or serious injury.*

Warning! *Make sure that anyone who helps assemble the Wenger High Density Sports Storage System has read and understands this manual. Failure to observe this warning can result in damage to property or serious injury.*

Warning! *Some assembly steps require that two or more persons work together. Some components are heavy and are difficult to handle alone. Failure to observe this warning can result in damage to property or serious injury.*

Warning! *A dangerous pinch point develops when assembling the End Frame to the Chassis. Always take care to keep fingers from the point of insertion when placing the End Frame into the Chassis. Failure to observe this warning can result in serious injury.*

Warning! *Installing the Wenger High Density Sports Storage System on floor surfaces that are not level or that have rough and uneven areas can result in a system not performing correctly. Failure to observe this caution can result in Carts not remaining in place, not being stable, and possibly not being safe when moving on the Floor Track.*

Warning! *Never stand on a Cart when working on it. Failure to observe this warning can result in serious injury or damage to property.*

GENERAL USAGE

Warning! *Do not place more than a 150 pound uniform load onto wire shelves. Placing a larger load or concentrating the load can cause permanent deformation or a total collapse of the shelf. Failure to observe this warning can result in damage to property or serious injury.*

Warning! *Never place the Team Cart sideways on an inclined ramp where Team Carts can tip over. Failure to observe this warning can result in damage to property or serious injury.*

SAFETY CONTINUED

GENERAL USAGE CONTINUED

- Warning!** *Always move Carts on the track at a slow walk or about one-foot per second. Moving the Cart rapidly on the track and striking an obstruction with heavy loading on the upper part of the Cart can result in tipping over. Failure to observe this warning can result in damage to property or serious injury.*
- Warning!** *Never place hands or feet onto the track when moving carts. Failure to observe this warning can result in damage to property or serious injury.*
- Caution** *Do not place more than 150 pounds onto the Cart Top Panel. Failure to observe this warning can result in a structural failure and inability to open and close bypass doors.*

MOVING TEAM CARTS

- Warning!** *Two people must always work together when moving a Team Cart (one person pushing at the rear and one person guiding the Cart at the front). Failure to observe this warning can result in damage to property or serious injury.*
- Warning!** *When moving the Cart, never allow people to ride on the Cart. Failure to observe this warning can result in serious injury.*
- Warning!** *Do not place hands or feet in the Cart pathway. Failure to observe this warning can result in serious injury.*

WARRANTY

The High Density Sports Storage System is guaranteed free of defects in materials and workmanship for five full years.

Our guarantee assures you of either a full refund or repair or replacement of the defective materials or workmanship without charge, at the discretion of our Customer Service Department. Just call a Customer Service Representative at 1-800-887-7145 and state the reason you are dissatisfied. If a product return is necessary, your representative will issue a return authorization. This is your sole remedy for breach of this warranty.

Should you have a question or problem with any Wenger product, don't hesitate to call, even if the product is past warranty. It's important to us that all our customers be satisfied.

This is the sole warranty made by Wenger. Wenger disclaims all other warranties, including the warranties of merchantability and fitness for a particular purpose, as well as all liability for incidental, consequential, special, and indirect damage. Wenger liability for direct damages shall be limited to the amount you paid for the product involved. Wenger reserves the right to make product changes without obligation to incorporate such changes into products previously sold.

Some states do not allow the exclusion or limitation of damages or warranties, so the above may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

IMPORTANT USER INFORMATION

INSTALLATION

- The Gearboss Shelf Divider Accessory installation must comply with local building regulations and codes.
- All personnel (including all temporary workers) installing the Wenger High Density Sports Storage System must read and understand this entire manual.
- Personnel installing the Gearboss Shelf Divider Accessory must comply with the Warnings and Cautions in the Safety Section.

INTENDED USE

- The Gearboss Shelf Divider Accessory is intended for indoor use in normal ambient temperature and humidity conditions — it must not be exposed to prolonged outside weather conditions.
- The Gearboss Shelf Divider Accessory is intended to be installed only as described in this manual.

REQUIRED TOOLS

The following tools must be supplied by the installer to assemble the High Density Sports Storage System.



Cordless Drill



Plumb Bob



9/16-inch Combination Wrench



Phillips Drive Bit




Number 2B Pencil



8-foot Tape Rule




50-foot Chalk Line

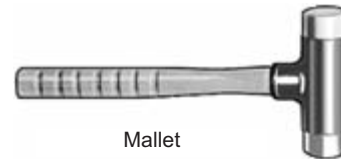

Mallet

PARTS LIST AND FASTENERS

 
FASTENERS




(9) Hex Nut Driver Bit, 3/8-inch



 
(11) Hex Insert Bit, 7/32-inch




(6) Acorn Nut, 3/8-16

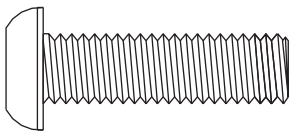


(8) Screw, Button Head, 3/8-16x1-1/4-inch

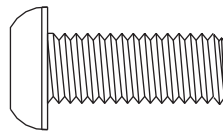


(10) Screw, Button Head, 3/8-16x7/8-inch

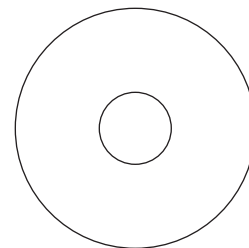

 (5) Flat Washer, 3/8 x 1-1/4-inch



 (7) Screw, Self-drill,
1/4-20x1-inch




(3) Screw, Self-drill, 8-18x3/4-inch,
Phillips Pan Head

Note: Fasteners shown above are full scale.

PARTS LIST AND FASTENERS CONTINUED

CART PARTS LIST


Note: Parts list applies to X-Carts (shown) and Team Carts, 32-inch and 48-inch.

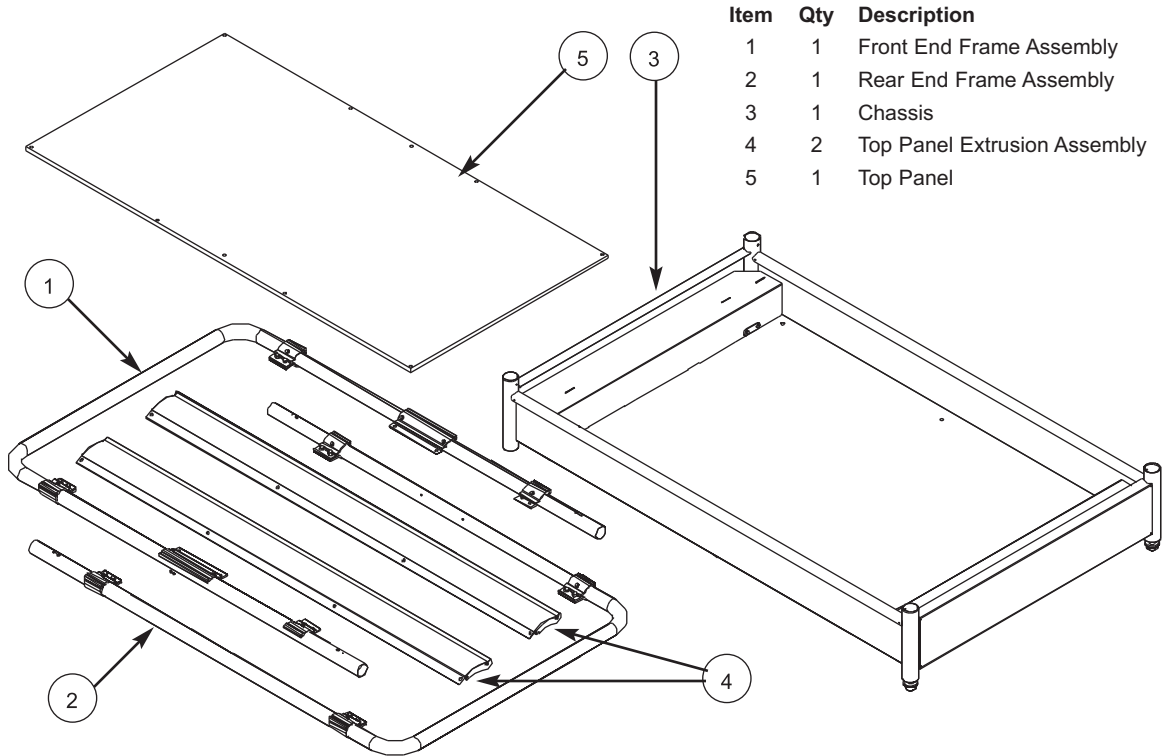

Item	Qty	Description
1	1	Front End Frame Assembly
2	1	Rear End Frame Assembly
3	1	Chassis
4	2	Top Panel Extrusion Assembly
5	1	Top Panel

CART HARDWARE PACK PARTS LIST

Note: Parts list applies to the Hardware Pack supplied with X-Carts and Team Carts.

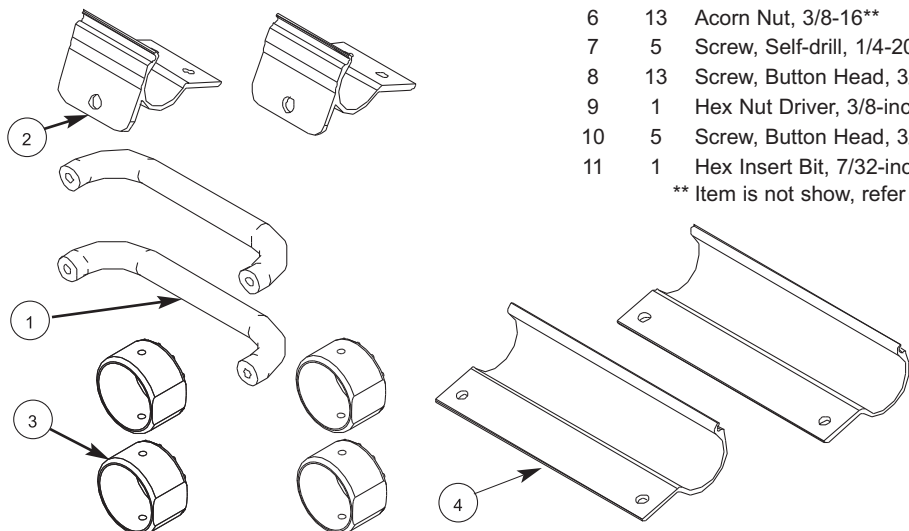

Item	Qty	Description
1	2	Handle
2	2	Handle Bracket Outside
3	4	Bumper
4	2	Lock Bracket, Outside
5	5	Flat Washer, 3/8x1-1/4**
6	13	Acorn Nut, 3/8-16**
7	5	Screw, Self-drill, 1/4-20x1-inch**
8	13	Screw, Button Head, 3/8-16x1-1/4-inch**
9	1	Hex Nut Driver, 3/8-inch**
10	5	Screw, Button Head, 3/8-16x7/8-inch**
11	1	Hex Insert Bit, 7/32-inch**


** Item is not show, refer to Fasteners**

PARTS LIST AND FASTENERS CONTINUED

FLOOR TRACK AND HARDWARE PARTS LIST

Note: Parts list applies to the parts contained in the Floor Track Carton which is used with the X-Carts and Team Carts.


<u>Item</u>	<u>Qty</u>	<u>Description</u>
1	1	Floor Track
2	2	Spring Pin, 1/8x2-inch
3	2	Screw, Self-drill, 8-18x3/4-inch
4	1	Floor Track End Cap

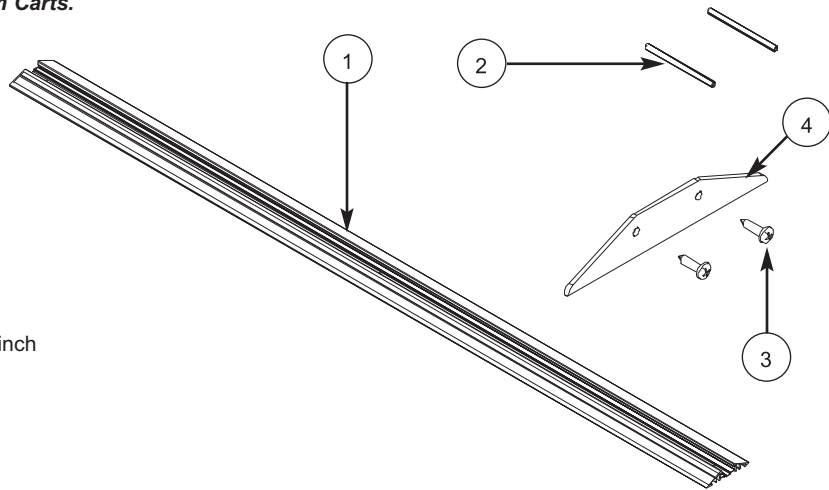


WIRE-GRILLE END PANEL

Note: Parts list applies to the parts contained in the Wire-grille End Panel Carton which can be 32-inch or 48-inch and used with an appropriate X-Cart or Team Cart.

<u>Item</u>	<u>Qty</u>	<u>Description</u>
1	2	Wire-grille End Panel

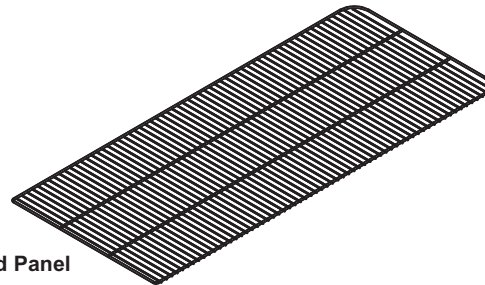

32-inch Wire-grille End Panel

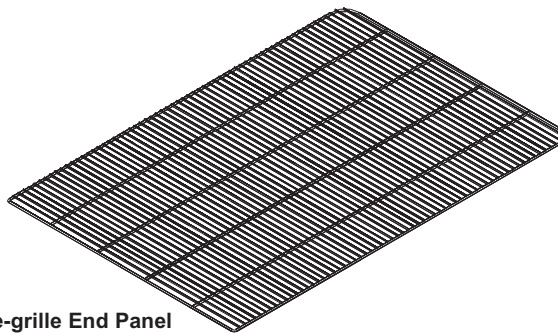


48-inch Wire-grille End Panel

DESCRIPTION

X-CART

Note: 48-inch X-Cart is shown below.

X-Cart — on-the-track-only storage cabinet mounted on wheels in 32-inch and 48-inch widths

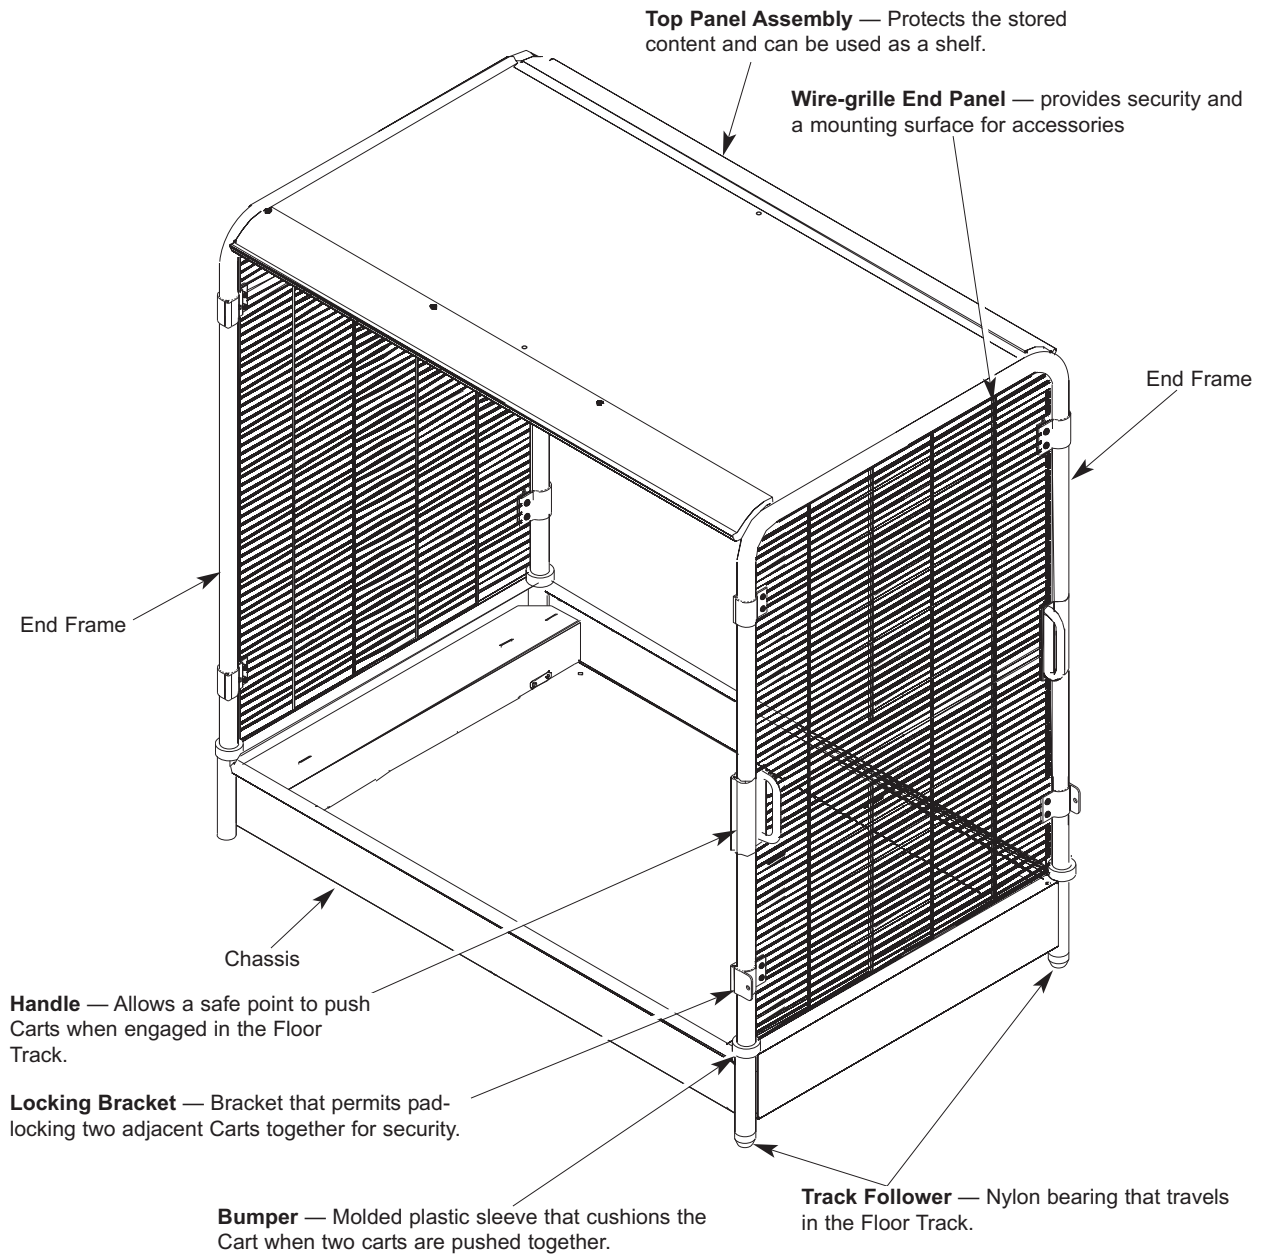


DESCRIPTION CONTINUED


TEAM CART

Team Cart — on-the-track and transport-to-the-event-location storage cabinet mounted on swiveling casters in 32-inch and 48-inch widths

Note: 32-inch Team Cart shown

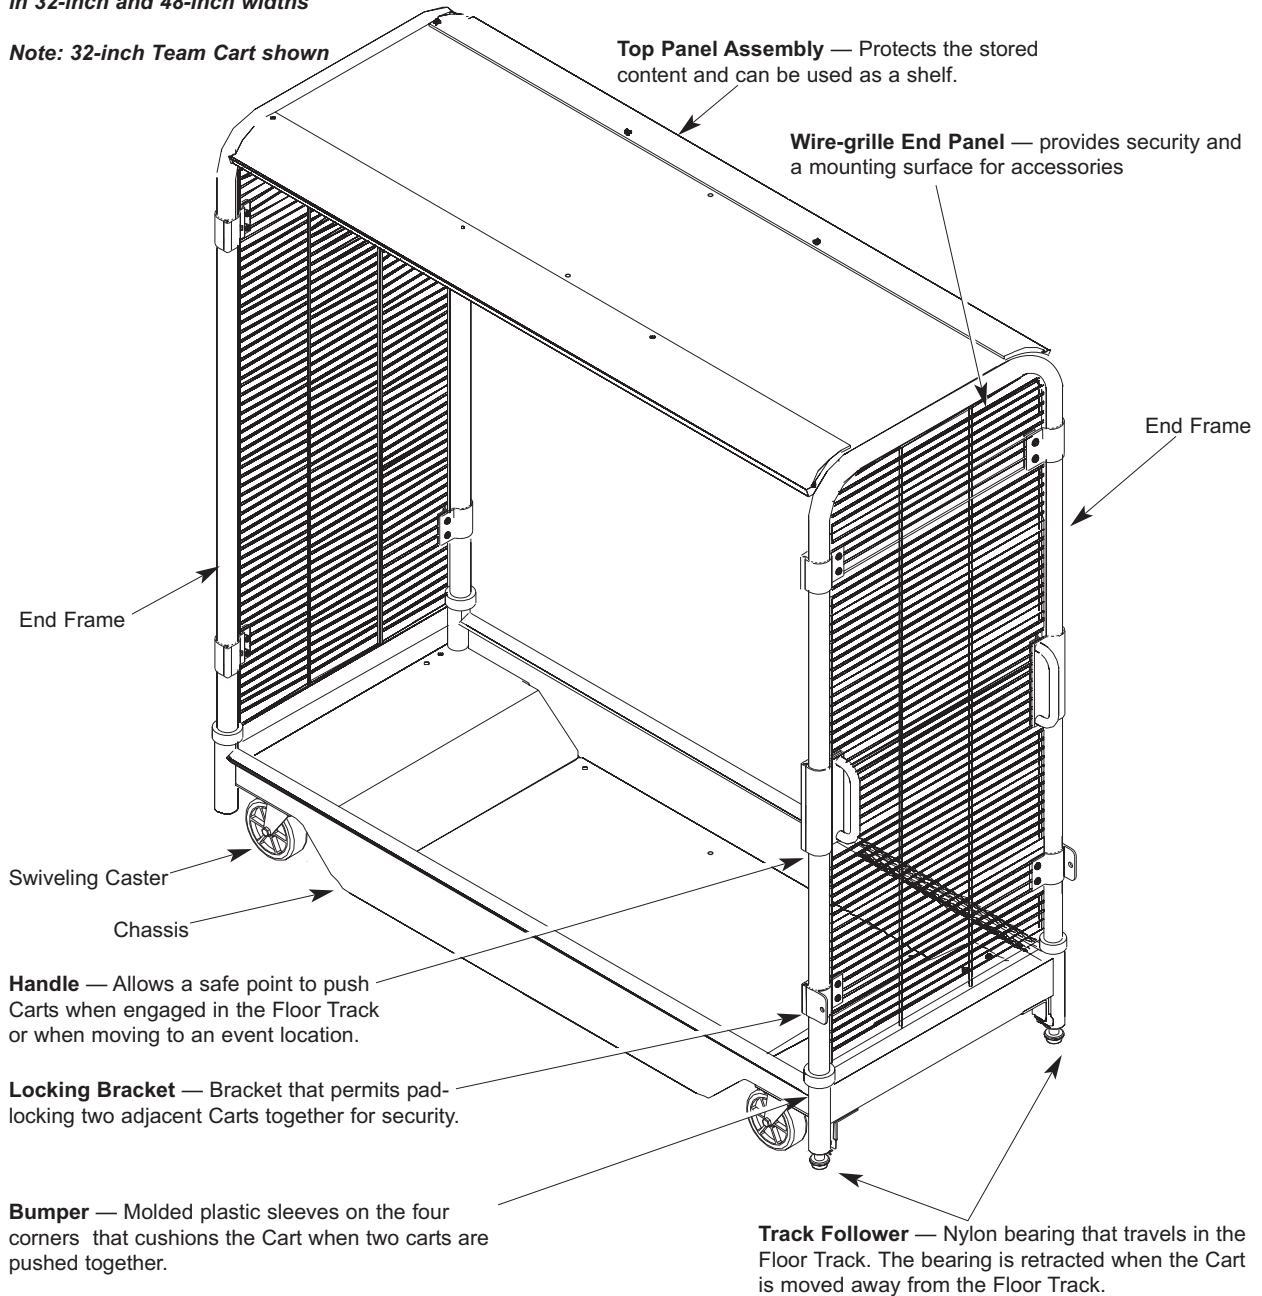

FLOOR TRACK

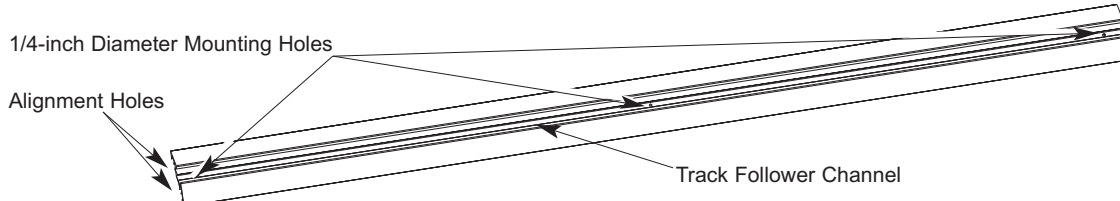

INSTALLATION

BEFORE STARTING THE ASSEMBLY

Before installing the High Density Sports Storage System, do the following.

1. All personnel, including temporary personnel, must read and understand this entire manual.
2. Inventory the cartons and make sure that all required components are present.
3. When each carton is opened, inventory the components and hardware package and make sure that everything is present.

Warning: *Personal injury or damage to property can happen if the instructions in this manual are not followed.*

Warning: *Some components are very heavy, large, and awkward to handle. Serious injury or property damage can happen if only one person attempts to move or lift some components such as a chassis. Two or more people must always work together when lifting or moving High Density Sports Storage System heavy components.*

Warning: *Always wear safety glasses and safety shoes when installing the High Density Sports Storage System. Failure to observe this precaution can result in serious injury.*

Note: Not all hardware items packed in the carton may be needed. When the assembly is complete, discard any hardware items not used.

LAYOUT THE SPACE

Note: Refer to the illustration on the next page.

1. Before starting the installation, move the cartons close to the location where the High Density Sports Storage System will be installed. Refer to any architectural drawings that were supplied by Wenger or a contractor.
2. Strike a chalk line on the floor that will locate the centerline of the Floor Track as follows.

Note: When locating the Floor Track Centerline, always make sure there will be one-inch of clearance on the rear side of the Cart. With one-inch clearance, the Floor Track Centerline should be located 78-inches from the wall or an obstruction.

Make sure that no obstructions lower than the top of the Cart plus one-inch (80-inch for the Cart without an Attic Accessory, 106-inches for a Cart with a Short Attic Accessory, and 118-inches for a Cart with a Tall Attic Accessory) are within the perimeter of the Floor Track, Side Walls, and Rear Wall. If an obstruction is within this perimeter and is lower than the top of cart assembly, movement will be impaired and the Floor Track placement must be adjusted.


When obstructions prevent full cart movement within the perimeter, use a plumb bob to mark the rear position of the Cart movement area. Refer to the illustration on the next page. Measure 78-inches from these rear marks to locate the Floor Track Centerline.

If more than one-inch of clearance is desired, move the Floor Track Centerline further from the Wall.

- a. Using a Tape Rule, measure from the Rear Wall or obstruction and make a mark on the Floor 78-inches from the Rear Wall or obstruction and several feet from a Side Wall.
- b. Make another mark on the Floor 78-inches from the Rear Wall or obstruction and several feet from the opposite Side Wall.
- c. Strike a Chalk Line through the two Floor Marks from one Side Wall to the opposite Side Wall.

INSTALLATION CONTINUED

LAYOUT THE SPACE CONTINUED

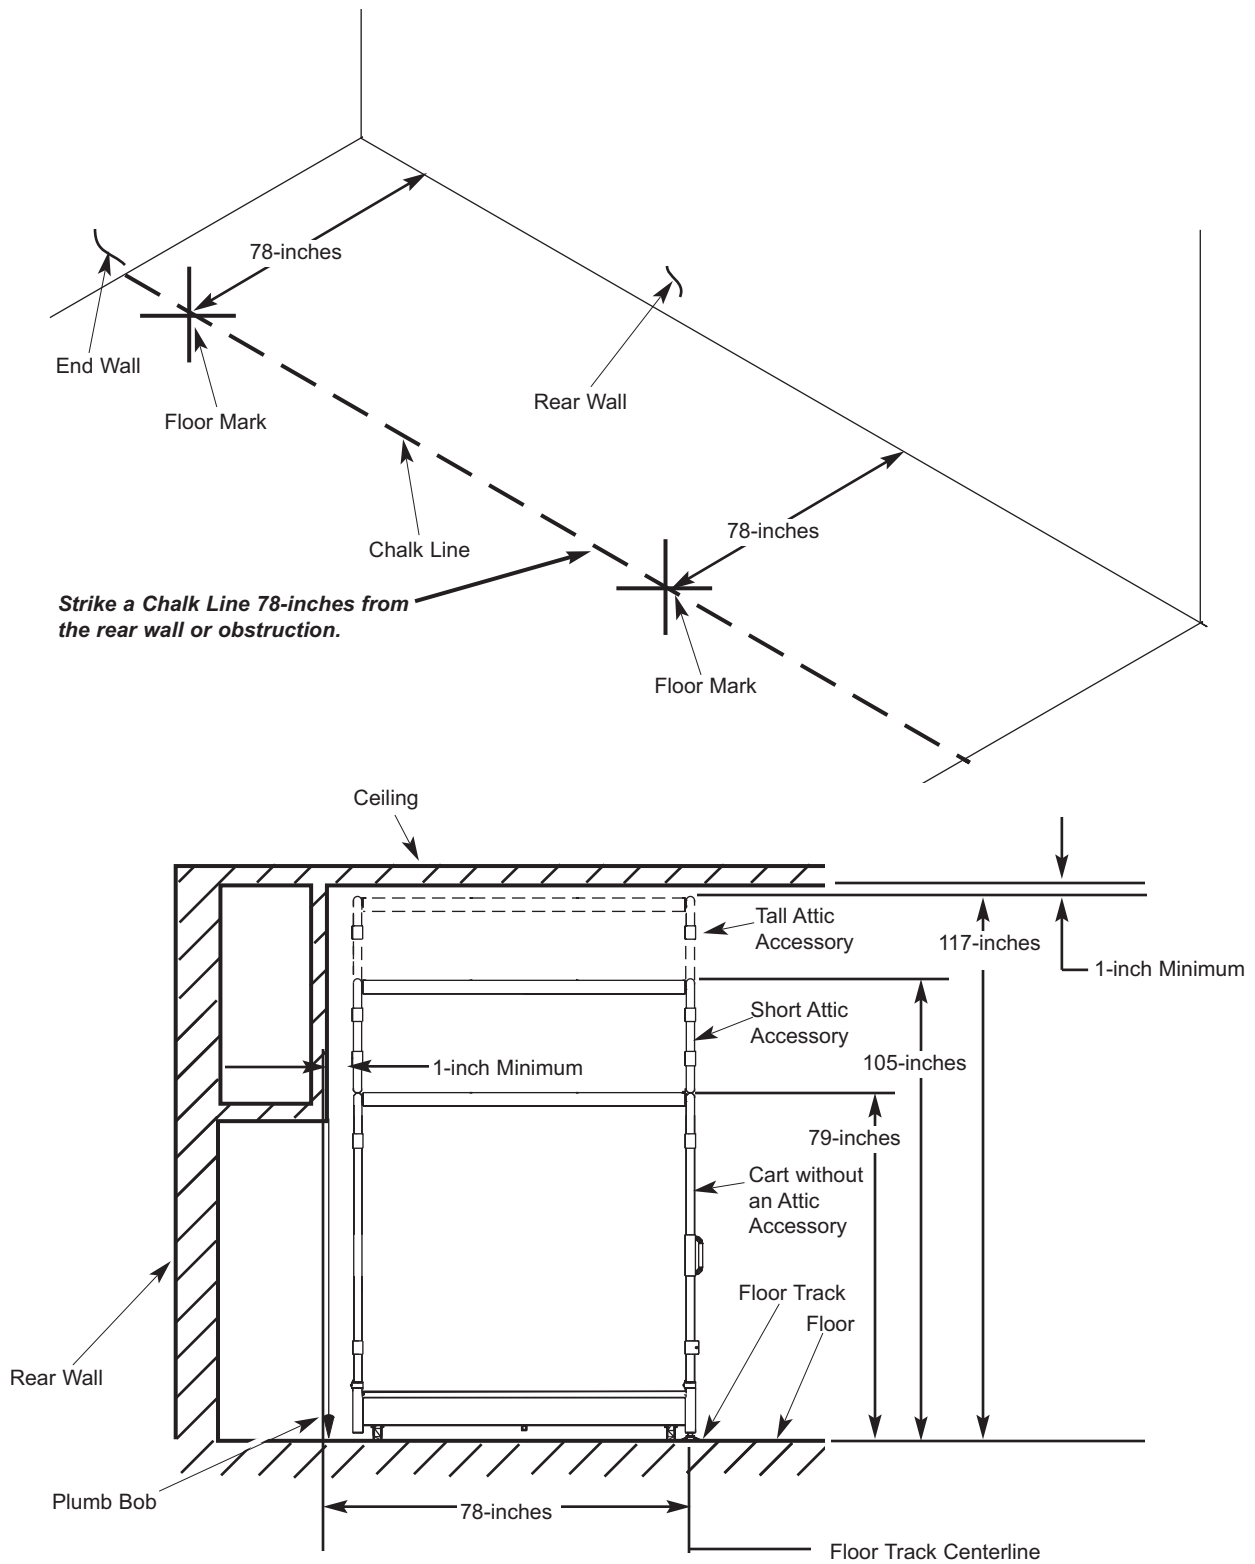




INSTALLATION CONTINUED

ATTACH THE FLOOR TRACK TO THE FLOOR

The Floor Track is attached to the floor surface by anchoring it with the appropriate fasteners at the three 1/4-inch clearance holes in the Floor Track.

To attach the Floor Track, do as follows.



1. If a Floor Track end will be butted against the wall, discard the End Cap and Self-drill Screws.
2. If the end of the Floor Track will be exposed, assemble the End Cap to the exposed end of the Floor Track.
 - a. Use a cordless drill and a phillips drive bit and attach the End Cap with two Self-drill Screws, 8-18x3/4-inch, to the two Floor Track Screw Channels as shown at the right.
3. Place a Floor Track onto the Chalk Line with one end against the Side Wall.
4. Align the three Clearance Holes so that the Chalk Line is visible through each hole.
5. Use the Floor Track as a template and mark the location of the three holes with a pencil.
6. Using the appropriate fasteners, anchor the Floor Track at the three marks.

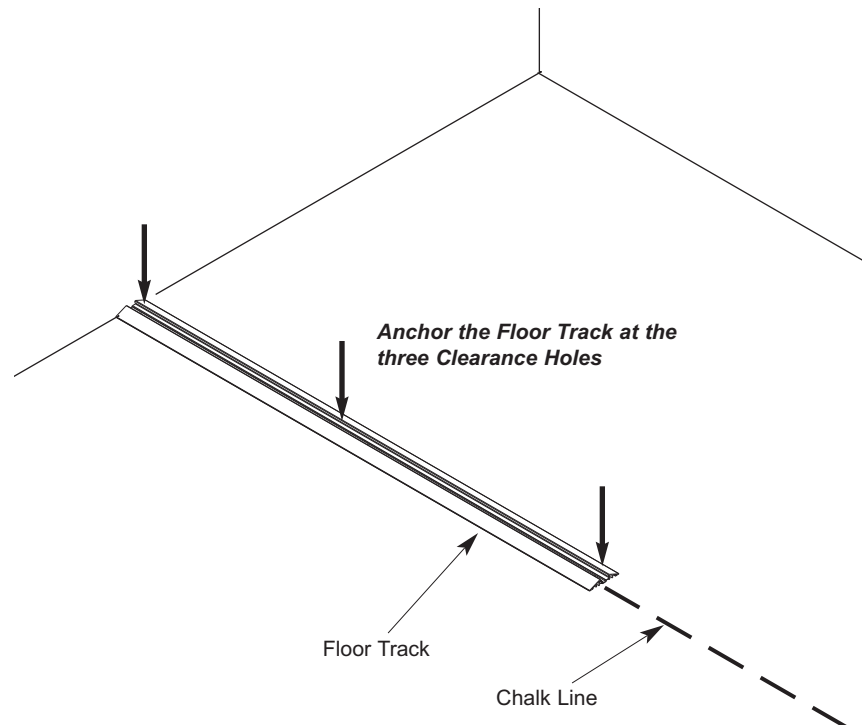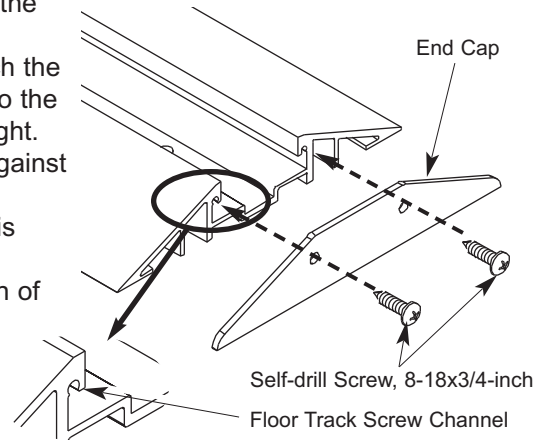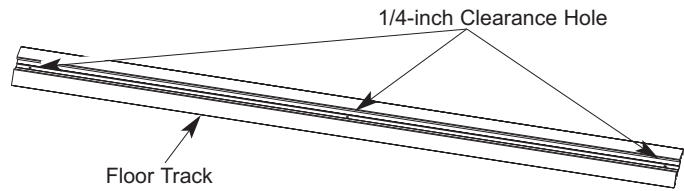

INSTALLATION CONTINUED

ATTACH THE FLOOR TRACK TO THE FLOOR CONTINUED

7. Anchor the second Floor Track as follows.
 - a. Using a mallet, drive two Spring Pins half way into the two Floor Track Screw Channels on the end of the anchored Floor Track.

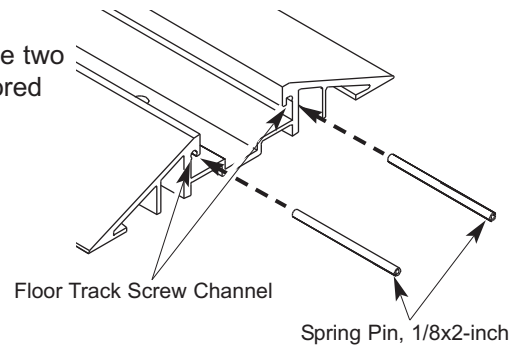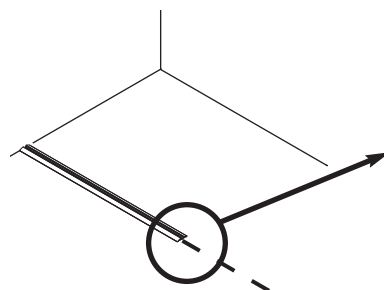


- b. Place the second Floor Track onto the floor and align the Floor Track Screw Channels to the Spring Pins in the Anchored Floor Track.

Note: Each Floor Track has a set of warning decals on one end. Always place the Floor Track end **with a warning decal** next to the Floor Track end **without a warning decal**.

- c. Use a mallet and a block of wood and tap the second Floor Track onto the Anchored Floor Track Spring Pins.

Note: Take care to not bend the Spring Pins when driving the Track onto the Pins.

- d. Anchor the second Floor Track to the floor as done in steps 3, 4, and 5.

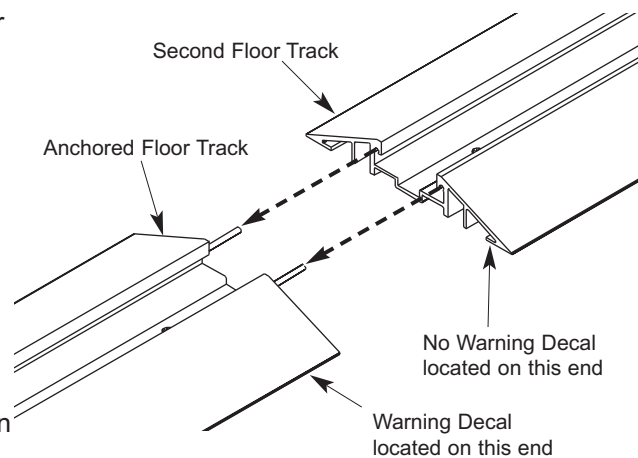

8. Anchor additional Floor Tracks as required. If the last Floor Track to be anchored is too long to fit in the room, use a circular saw with an all-purpose blade to cut the Floor Track to the correct length. Discard the unused piece of track and use a file to remove any burrs from the cut end of the Floor Track.

CART ASSEMBLY

The following assembly procedures are the same for the 32 and 48-inch X-Carts, and the 32 and 48-inch Team Carts.

REMOVE PARTS FROM THE CARTON





1. Using a wheeled dolly, move the carton to the installation site or to an area where the cart will be assembled.

Warning! Always use a wheeled dolly to move the skid and carton. If an X-Cart is assembled in an area different than the installation site, always use a wheeled dolly to move the X-Cart to the Floor Track. Failure to observe this warning can result in serious injury or damage to property.

Warning! All personnel must wear safety glasses and safety shoes when assembling High Density Sport Storage components. Failure to observe this warning can result in serious injury.

2. Cut the plastic banding, remove the carton top, and discard the packing material on top of the Chassis. The Carton Top can be used as a work surface on the floor or on a table to prevent scratching components during assembly.


3. Place the Chassis onto the floor as follows.
 - a. With two or more people working together, lift the Chassis from the Carton.
 - b. Carefully turn the Chassis over so that the Wheels face downward.
 - c. Place the Chassis onto the floor with the Wheels resting on the floor surface.
4. Remove and inventory the Hardware Pack. Refer to the *Cart Hardware Pack Part List* on page 6 for a list of items and part quantities. Place the loose hardware onto the Chassis bottom.

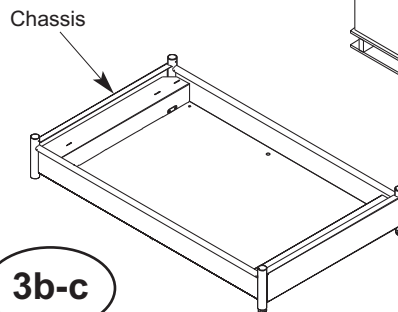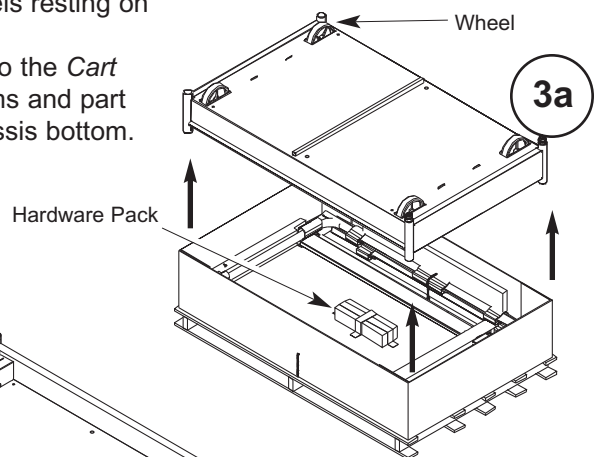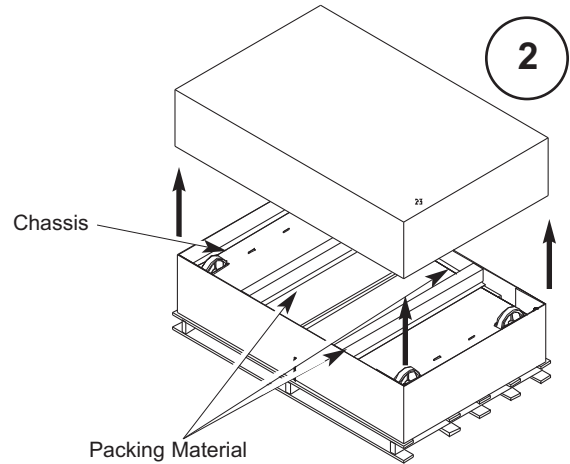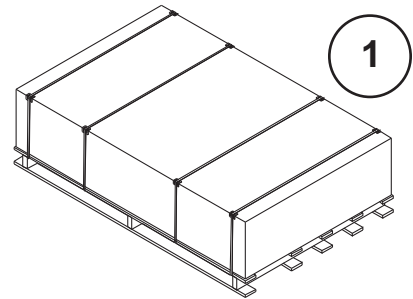

CART ASSEMBLY CONTINUED

ASSEMBLE THE END FRAMES

1. Attach four Bumpers to the four Chassis End Frame Posts. Make sure that the Clearance Hole in each Bumper aligns with the Clearance Hole on each Chassis End Frame Post and that the ***flat surface faces to the inside***.


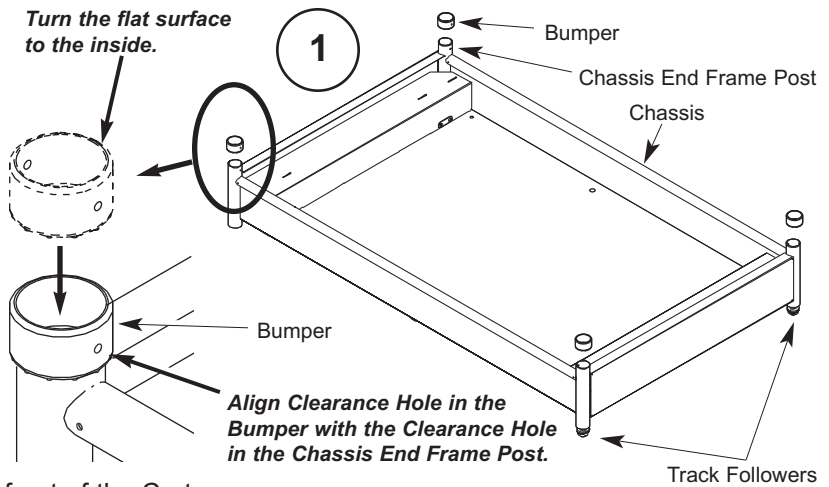


Note: Track Followers are on the front of the Cart.

2. Insert the Rear End Frame into the two rear Chassis End Frame Posts.

Warning! A dangerous pinch point develops when inserting an End Frame into the Chassis. Always take care to keep fingers from the point of insertion. Failure to observe this warning can result in serious injury.

- a. Make sure that the two Screw Heads on the lower part of the Rear End Frame face the inside and are pushed down onto the Chassis End Frame Posts.
 - b. Using a 3/8-inch hex nut drive bit and a cordless drill, attach two Screws, Self-drill (1/4-20x1-inch) to the Bumper and Rear End Frame as shown below.
3. Insert the Front End Frame into the two front Chassis End Frame Posts.
 - a. Make sure that the two Screw Heads and the Handle Brackets on the Front End Frame face the inside.
 - b. Make sure the Screw Heads are pushed down onto the Chassis End Frame Posts as shown below.
 - b. Using a 3/8-inch hex nut drive bit and a cordless drill, attach two Screws, Self-drill (1/4-20x1-inch) to the Bumper and Front End Frame as shown below.

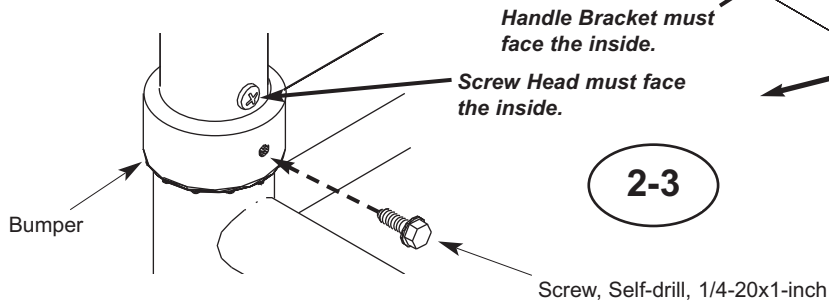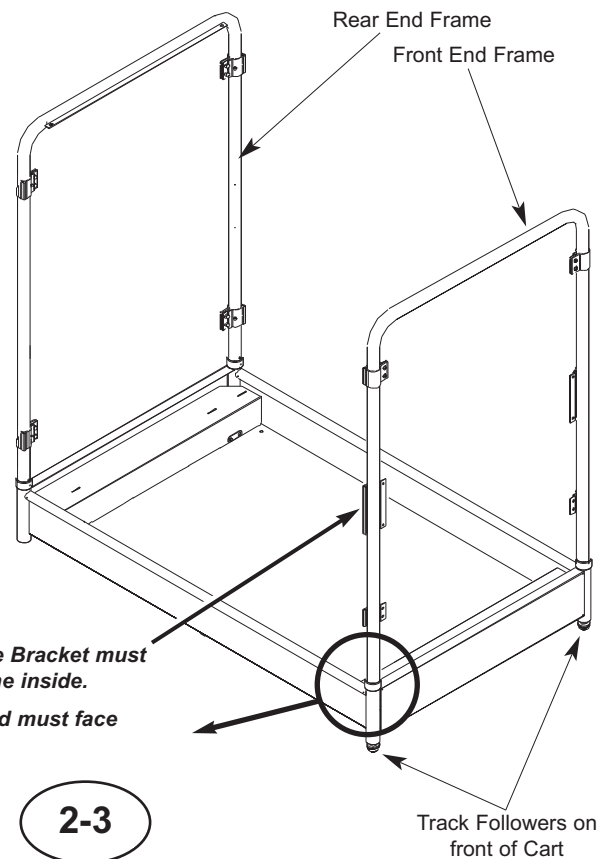


CART ASSEMBLY CONTINUED

ASSEMBLE FRONT WIRE-GRILLE END PANELS


Attach the two Wire-grille End Panels to the Cart as follows.

Note: Wire-grille End Panels are shipped in a separate carton.

1. Using a cordless drill with a 9/16-inch combination wrench and a 7/32-inch hex bit, remove the four Acorn Nuts and Button Head Screws from the **Front** End Frame Upper End Panel Bracket Assemblies. Set aside and save the Acorn Nuts and Button Head Screws.

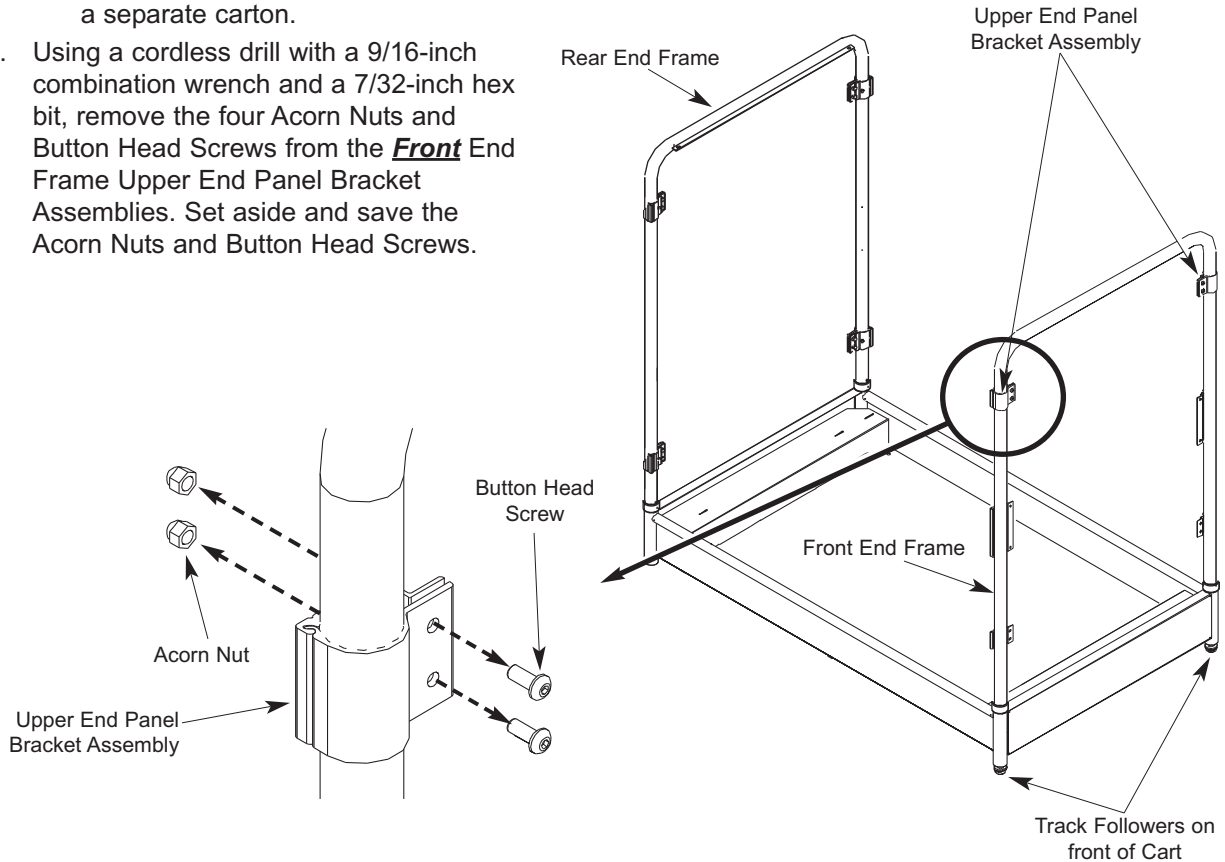

2. Twist or pivot the Upper End Panel Outside Bracket outward as shown in the illustration below. Do not disengage the Bracket from the Upper End Panel Inside Bracket.

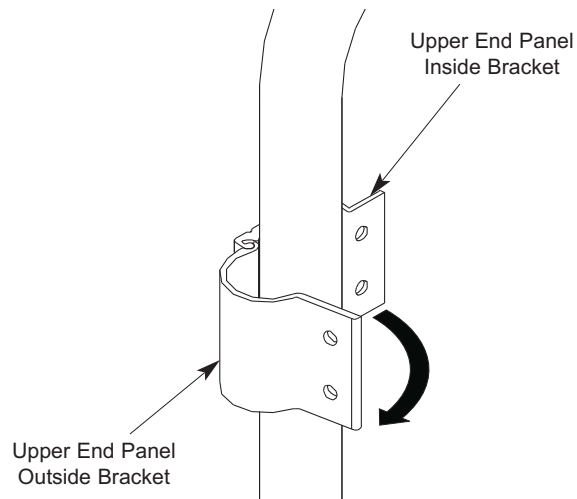


CART ASSEMBLY CONTINUED


ASSEMBLE FRONT WIRE-GRILLE END PANEL CONTINUED

3. Hold the Wire-grille End Panel against the Upper End Panel Inside Brackets and Lower End Panel Inside Brackets. Make sure that the horizontal wires face the outside of the End Frame.


Note: The top wire of the Wire-grille End Panel is about 1/4-inch from the End Frame horizontal tube when correctly positioned.

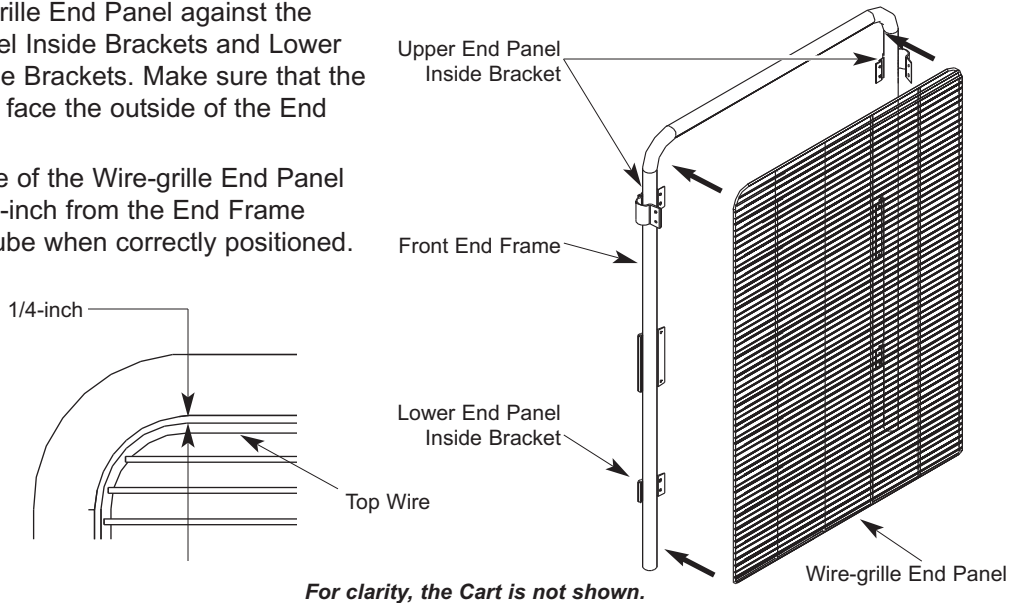

4. With another person holding the Wire-grille End Panel in place, re-install the Button Head Screws and Acorn Nuts removed in step 1. Make sure that the horizontal wires are aligned above and below the holes before inserting the Button Head Screws.

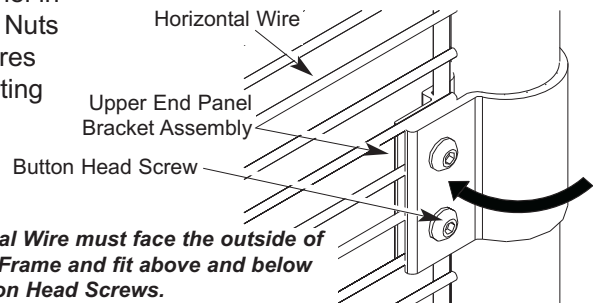

5. Attach two Outside Lock Brackets to the two Lower End Frame Inside Brackets with four Button Head Screws, 3/8-16x7/8-inch, and four Acorn Nuts, 3/8-16, on the Front End Frame as shown at the right.

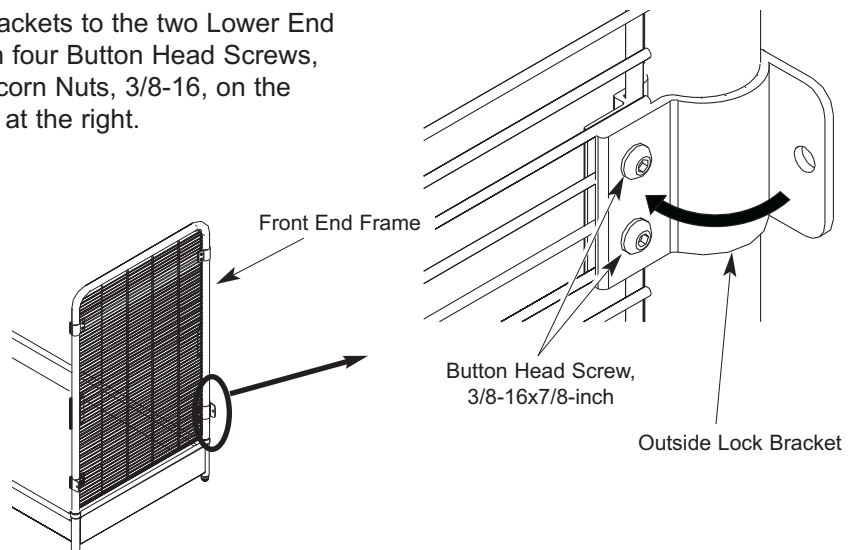


CART ASSEMBLY CONTINUED

ASSEMBLE REAR WIRE-GRILLE END PANEL

Attach a Wire-grille End Panel to the Rear End Frame in the same manner as steps 1 to 4 on the previous two pages.

1. Using a cordless drill and a 7/32-inch hex bit with a 9/16-inch combination wrench, remove the eight Acorn Nuts and Button Head Screws from the **Rear** End Frame Upper End Panel Bracket Assemblies and Lower End Panel Bracket Assemblies. Set aside and save the Acorn Nuts and Button Head Screws.
2. Twist or pivot the Upper and Lower End Panel Outside Bracket outward. Do not disengage the Outside Bracket from the End Panel Inside Bracket.
3. Hold the Wire-grille End Panel against the Upper End Panel Inside Brackets and Lower End Panel Inside Brackets. Make sure that the horizontal wires face the outside of the End Frame.
4. With another person holding the Wire-grille End Panel in place, re-install the Button Head Screws and Acorn Nuts removed in step 1. Make sure that the horizontal wires are aligned above and below the holes before inserting the Button Head Screw.


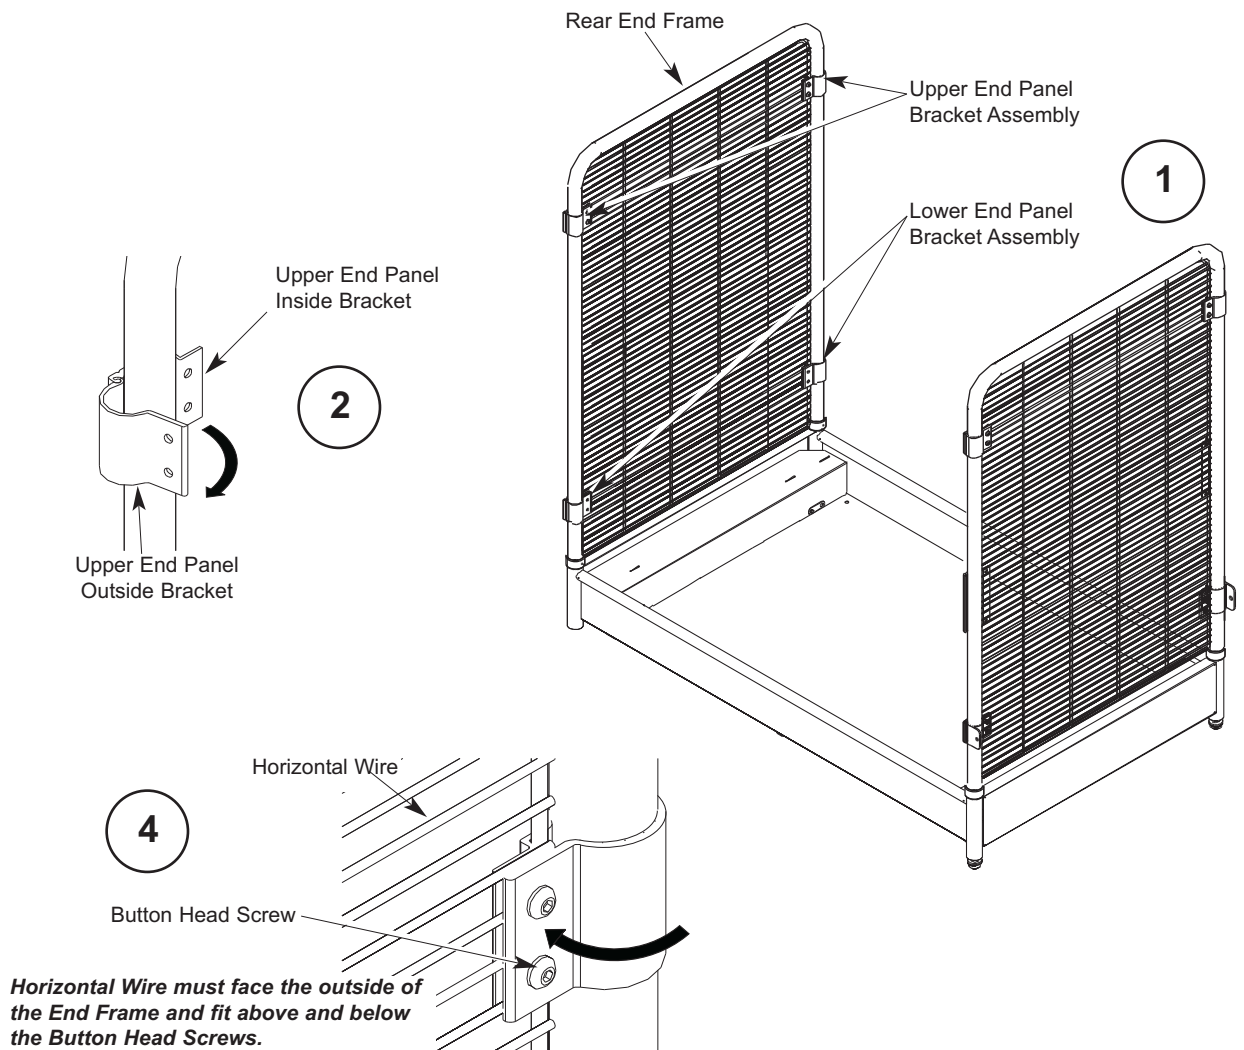


CART ASSEMBLY CONTINUED

ASSEMBLE HANDLES

Attach two Handles to the Cart Front End Frame as follows.

1. Engage the slot in an Inside Handle Bracket with an Outside Handle Bracket.
2. Pivot the Outside Handle Bracket to a closed position.
3. Attach the Handle to the Inside and Outside Handle Brackets with two Button Head Screws, 3/8-16x1-1/4-inch.
4. Attach the other Handle to the opposite side of the Front End Frame in the same way as done in steps 1 to 3.

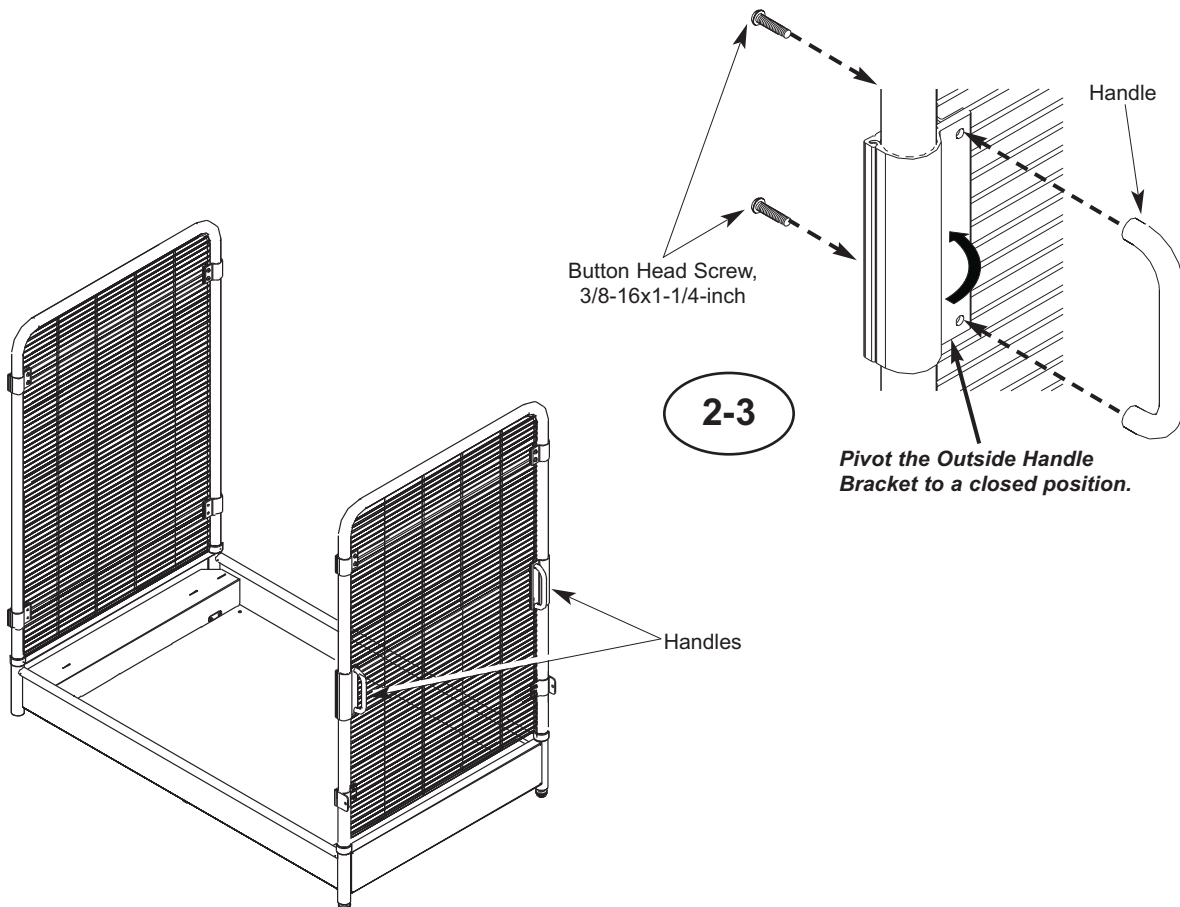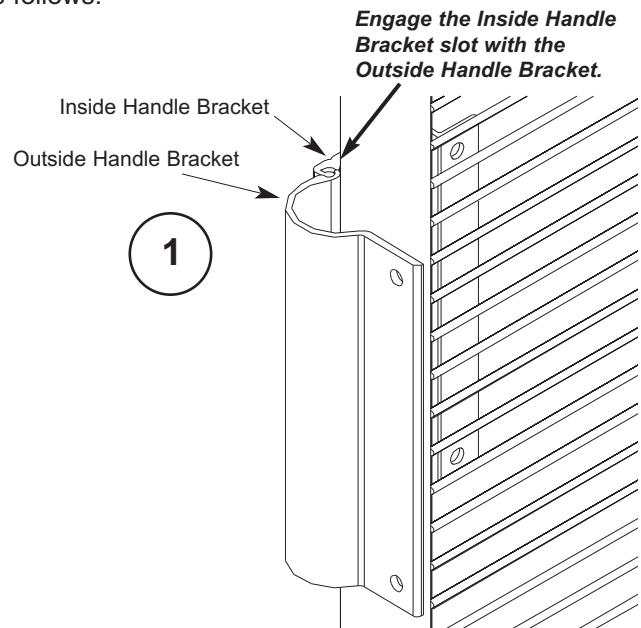

CART ASSEMBLY CONTINUED


TOP PANEL ASSEMBLY

Assemble the two Top Panel Extrusions and the Top Panel to the Cart as follows.

Note: To prevent damage, use a table or box as a work surface to support the Top Panel.

1. Attach two Top Panel Extrusions to the Top Panel with four Button Head Screws, 3/8-16x1-1/4-inch, four Flat Washers (3/8-inch by 1-1/4-inch outside diameter), and four Acorn Nuts, 3/8-16. **Do not tighten the fasteners.**

Note: Black side of Top Panel faces upward.

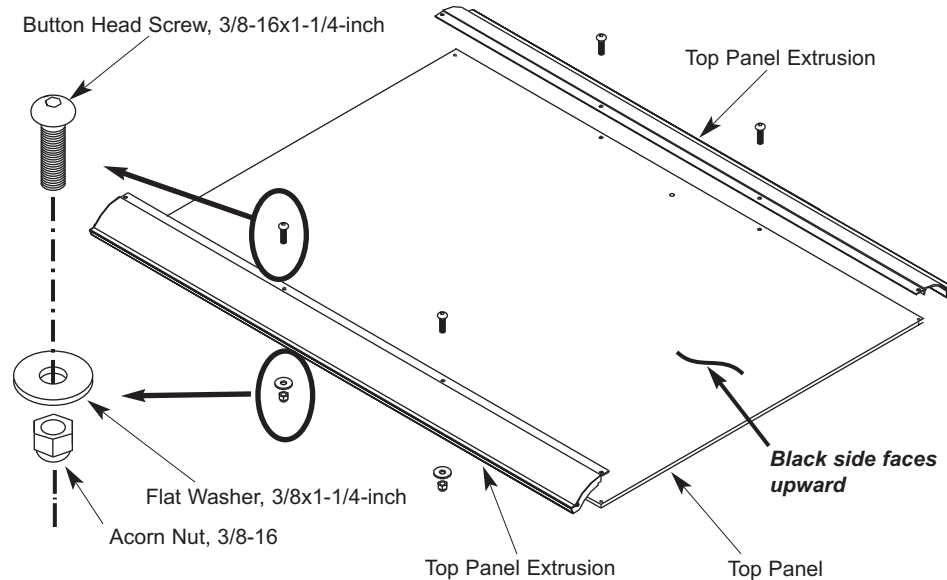


2. With two people working together, lift the Top Panel Assembly and place it onto the top of the Front and Rear End Frame Support Brackets.
3. Make sure that the Clearance Holes in the Top Panel and the End Frame Support Brackets are aligned.

Note: It may be necessary to use a step stool to reach the screws.

Warning! *Never stand on a Cart when working on it. Failure to observe this warning can result in serious injury or damage to property.*

4. Using a cordless drill and a 7/32-inch hex bit with a 9/16-inch combination wrench, attach two Button Head Screws, 3/8-16x1-1/4-inch, and two Acorn Nuts, 3/8-16, on each end of the Top Panel as shown at the right.
5. Tighten the four Button Head Screws and four Acorn Nuts assembled in step 1.
6. Make sure that all fasteners on the Cart are tight.

The Cart assembly is complete.


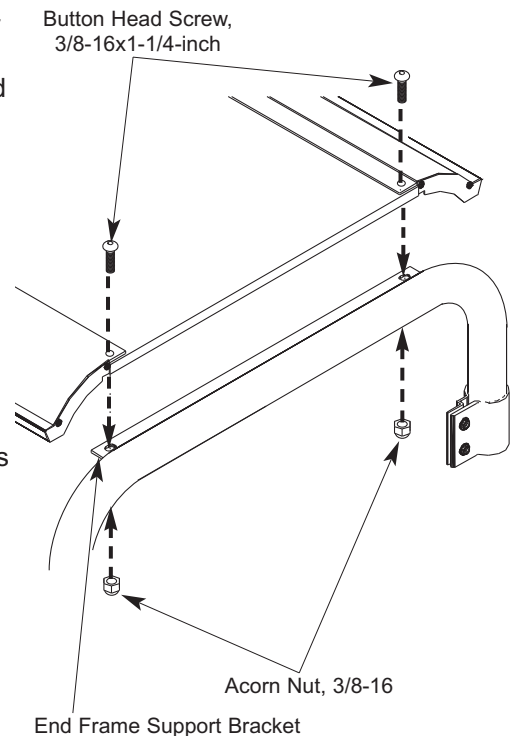


CART ASSEMBLY CONTINUED

PLACE THE CART ONTO THE FLOOR TRACK

1. Move the Cart to the Track. Two or more people must work together when moving an X Cart or if a Cart must be lifted over a Floor Track
 - a. Place the Track Followers into the Track Follower Channel.
 - b. To remove a Team Cart from the Track, retract the Track Followers by pulling each one upward until it locks in place. Release the Track Follower by pulling the locking lever away from the Follower.

Warning! *When moving a cart, observe all Warnings and Cautions listed in the Safety Section. Failure to observe this warning can result in serious injury or damage to property.*

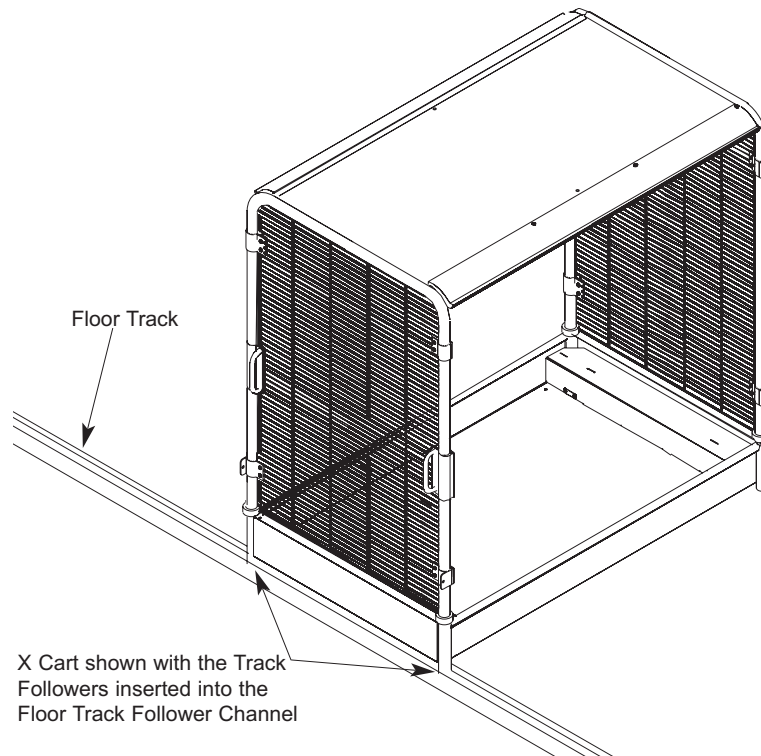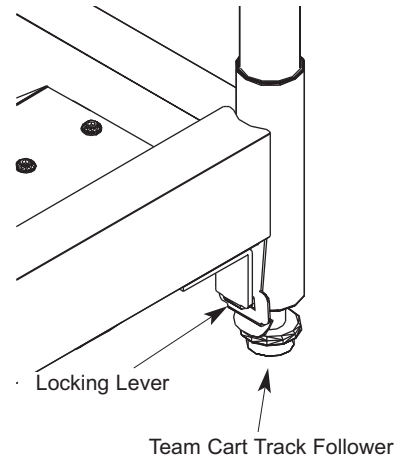


STORAGE SYSTEM USE

MOVING CARTS

Warning! When moving X-Carts or Team Carts, always observe all Warnings and Cautions listed in the Safety Section. Failure to observe this warning can result in serious injury or damage to property.

1. Always move X-Carts or Team Carts slowly when engaged in the Floor Track — **not more than one foot per second** (slow walk).
2. When moving any Cart (engaged in the Floor Track or disengaged from the Floor Track), make sure that people do not have hands or feet in the Cart pathway.

To lock the Track Follower on a Team Cart, lift the Track Follower upward until it engages the Locking Lever.

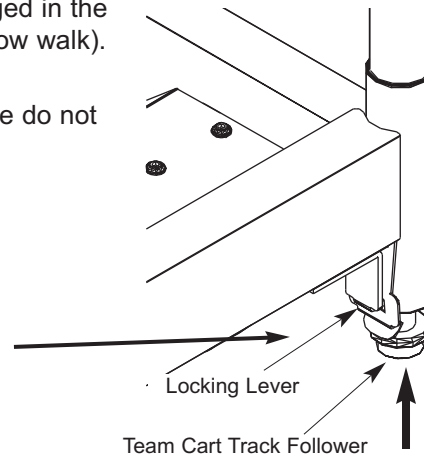

Warning! Do not place more than a 150 pound uniform load onto wire shelves. Placing a larger load or concentrating the load can cause permanent deformation or a total collapse of the shelf. Failure to observe this warning can result in damage to property or serious injury.

Warning! Never place the Team Cart sideways on an inclined ramp where Team Carts can tip over. Failure to observe this warning can result in damage to property or serious injury.

Warning! Always move Carts on the track at a slow walk or about one-foot per second. Moving the Cart rapidly on the track and striking an obstruction with heavy loading on the upper part of the Cart can result in tipping over. Failure to observe this warning can result in damage to property or serious injury.

Warning! Never place hands or feet onto the track when moving carts. Failure to observe this warning can result in damage to property or serious injury.

Caution! Do not place more than 150 pounds onto the Cart Top Panel. Failure to observe this warning can result in a structural failure and inability to open and close bypass doors.

Warning! Two people must always work together when moving a Team Cart (one person pushing at the rear and one person guiding the Cart at the front). Failure to observe this warning can result in damage to property or serious injury.

Warning! When moving the Cart, never allow people to ride on the Cart. Failure to observe this warning can result in damage to property or serious injury.

Warning! Do not place hands or feet in the Cart pathway. Failure to observe this warning can result in damage to property or serious injury.

STORAGE SYSTEM USE CONTINUED

LOAD CAPACITY


<u>Item</u>	<u>Capacity</u>
Cabinet Top Panel, uniform static load	150 pounds
32-inch or 24-inch Shelf, uniform static load	150 pounds
32-inch Shelf	18 Helmets
24-inch Shelf	12 Helmets
Helmet Hanger	8 Helmets
Shoulder Pad Stacker	22 Shoulder Pads

MAINTENANCE

1. Keep the Floor Track clear of dirt and trash.
2. Keep the floor area between the Floor Track and the Rear Wall clear of clothing, equipment, and trash.
3. Clean High Density Sports Storage System component surfaces with a mild detergent. Do not use harsh abrasive cleaning products.
4. Make sure that all fasteners are tight.
5. Replace any damaged parts such as wheels, casters, or track followers immediately.

REPLACEMENT PARTS

X CART

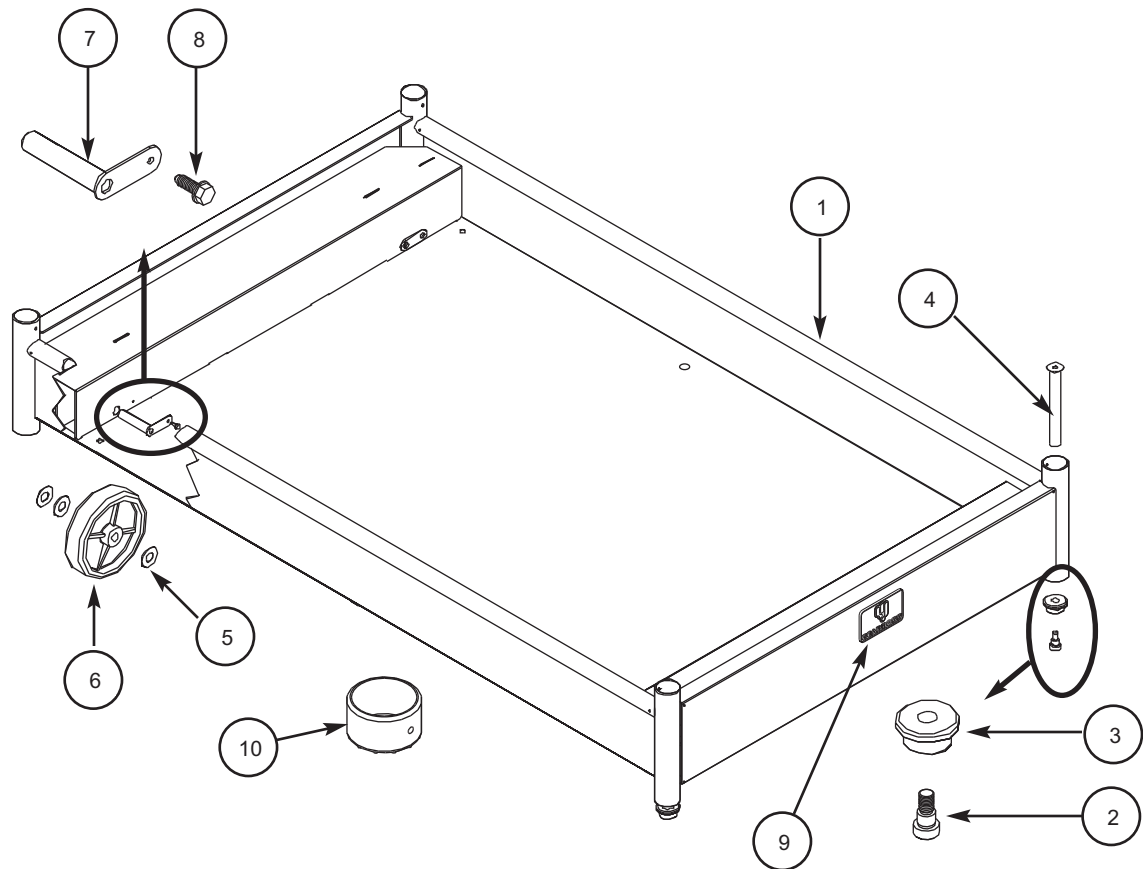


Note: When ordering parts, specify whether 32-inch or 48-inch Cart

Item	Description
1	X Cart Chassis
2	Shoulder Bolt, Track Follower
3	Roller
4	Plunger
5	Washer, Self-adhesive
6	Wheel, Poly, 3/4-inch Bearing
7	Axle Pin
8	Screw, Self-drill, 1/4-14x3/4-inch
9	Logo Plate with retainers
10	Bumper

REPLACEMENT PARTS CONTINUED

TEAM CART

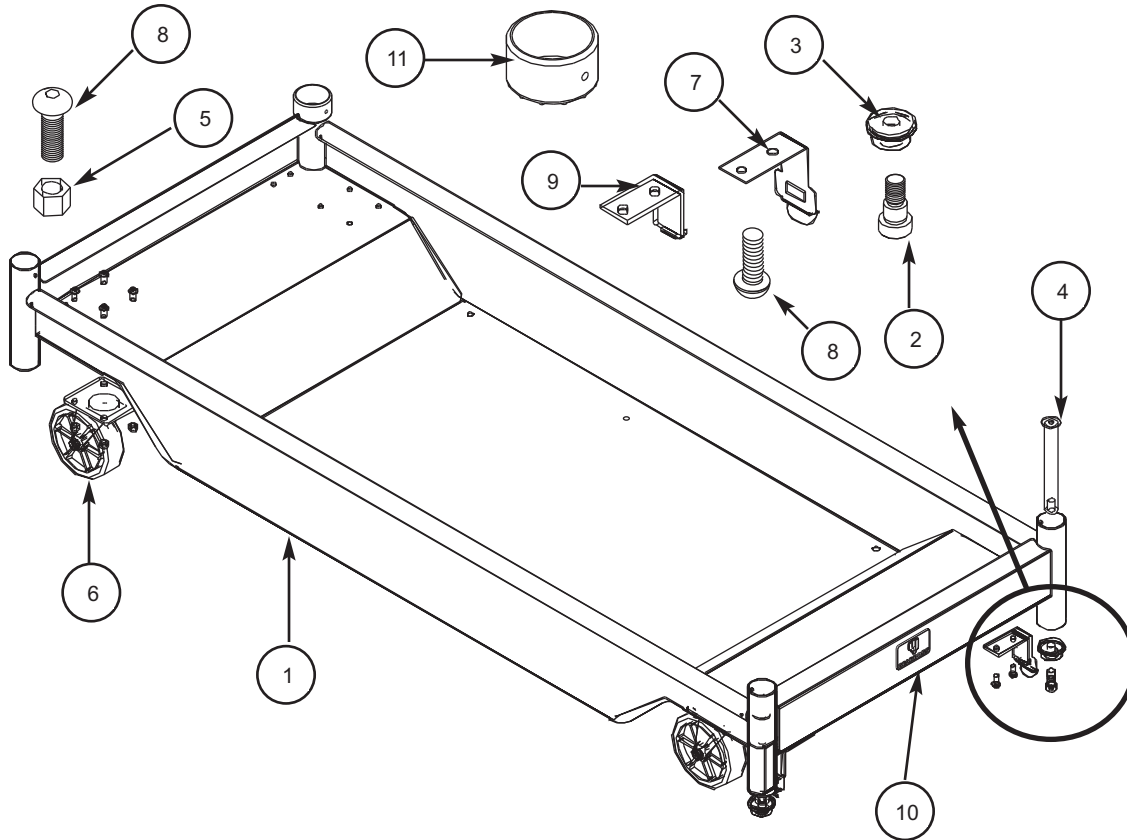


Note: When ordering parts, specify whether 32-inch or 48-inch Cart

Item	Description
1	Team Cart Chassis
2	Shoulder Bolt
3	Track Follower
4	Plunger Shaft
5	Locknut, 3/8-16
6	Caster Swivel, 6-inch Diameter
7	Plunger Clip
8	Screw, Button Head, 3/8-16x3/4-inch
9	Backer, Plunger Clip
10	Logo Plate with retainers
11	Bumper

REPLACEMENT PARTS CONTINUED

END FRAME

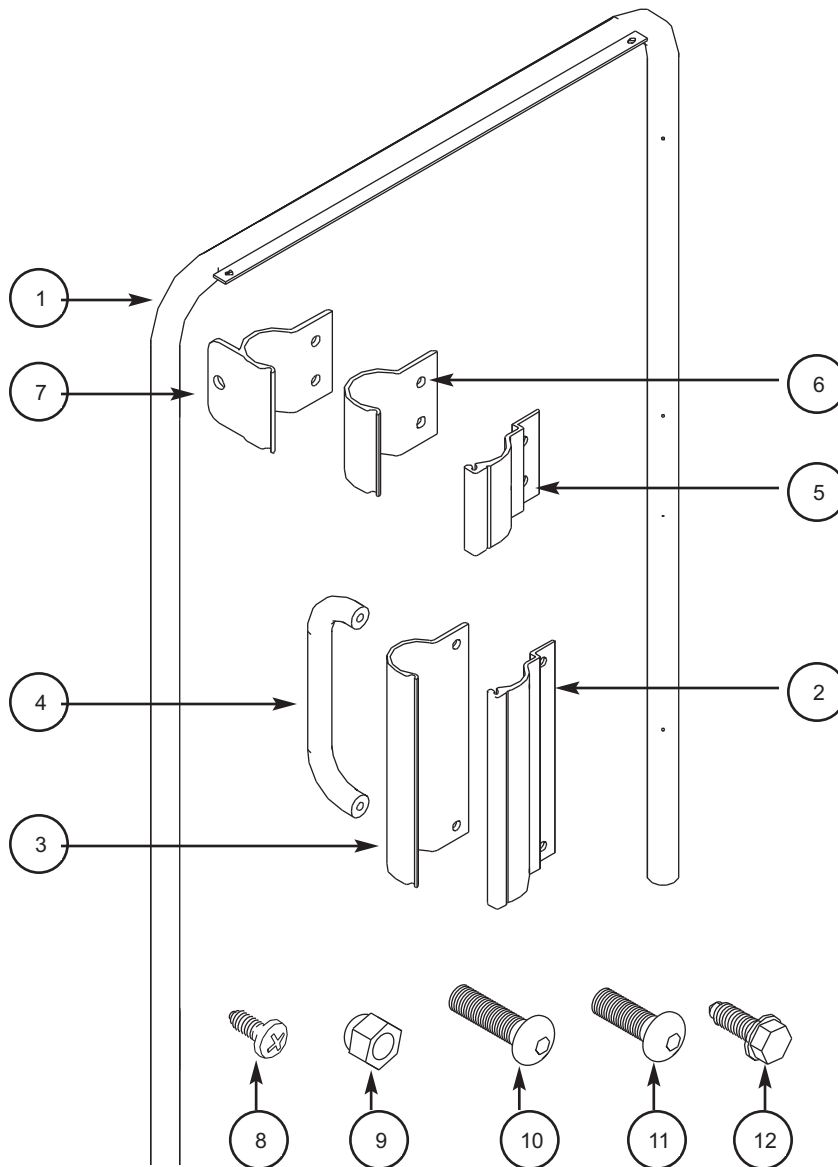

Item	Description
1	End Frame
2	Inside Handle Bracket
3	Outside Handle Bracket
4	Handle
5	Inside Bracket
6	Outside Bracket
7	Lock Bracket
8	Screw, Sheet Metal, 10-16x3/4-inch
9	Acorn Nut, 3/8-16
10	Button Head Screw, 3/8-16x1-1/4-inch
11	Button Head Screw, 3/8-16x7/8-inch
12	Screw, Self-drill, 1/4-14x1-inch


Note: When ordering, specify whether 32-inch or 48-inch Cart

REPLACEMENT PARTS CONTINUED


WIRE-GRILLE END PANEL

Note: When ordering, specify whether 32-inch or 48-inch Cart

32-inch Wire-grille End Panel

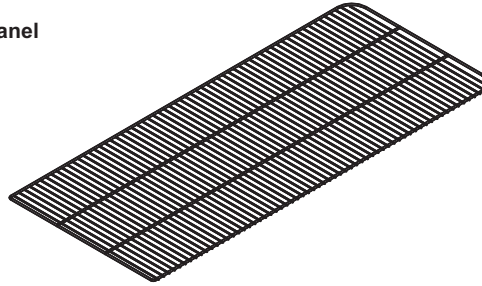


48-inch Wire-grille End Panel

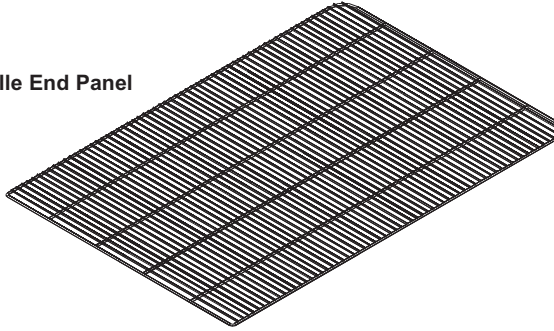

Item	Description
1	Wire-grille End Panel

REPLACEMENT PARTS CONTINUED

TOP PANEL ASSEMBLY

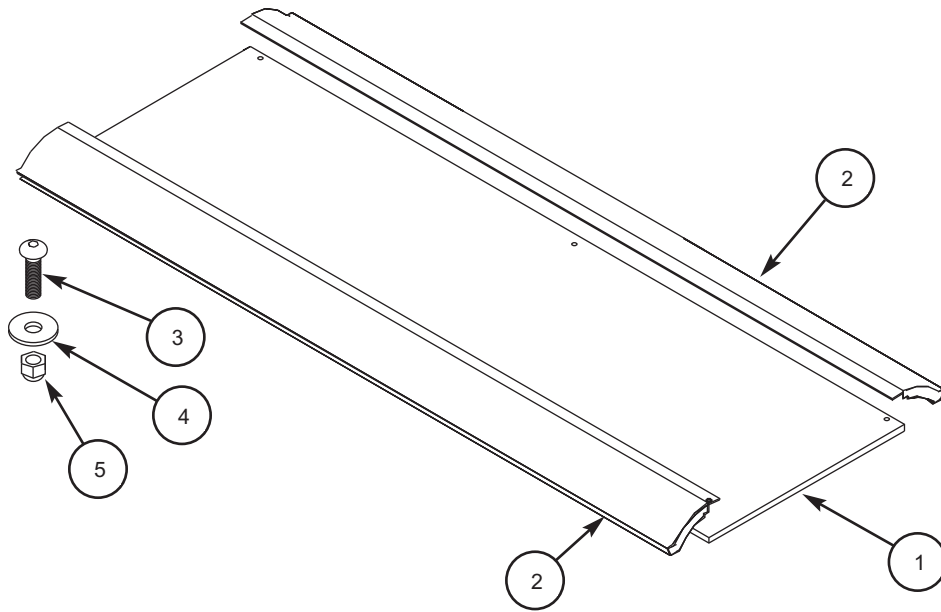


Note: Specify whether 32-inch or 48-inch Cart

Item	Description
1	Top Panel
2	Top Panel Extrusion Assembly
3	Screw, Button Head, 3/8-16x1-1/4-inch
4	Flat Washer, 3/8x1-1/4**
5	Acorn Nut, 3/8-16**

REPLACEMENT PARTS CONTINUED

FLOOR TRACK

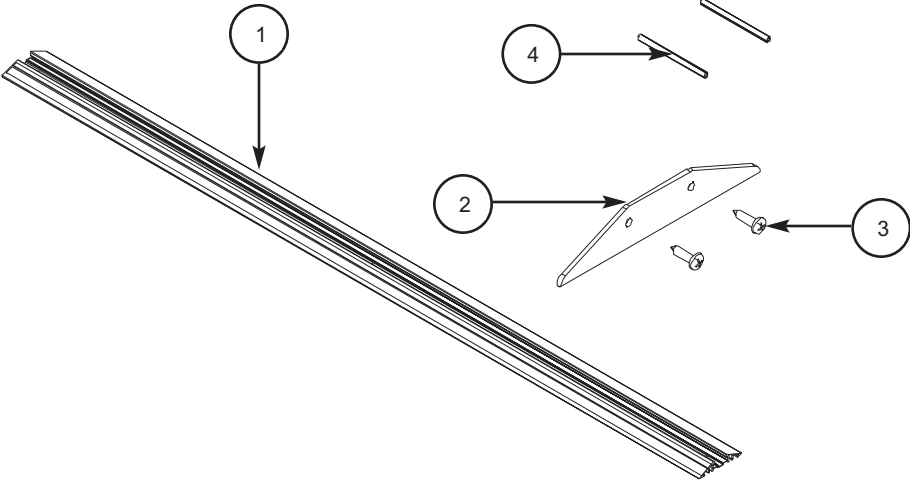

Item	Description
1	Floor Track
2	End Cap
3	Screw, Self-drill, 8-18x3/4-inch
4	Spring Pin, 1/8x2-inch