




Assembly Instructions Drapery Backdrop Support

for Wenger Versalite®, Trouper®, Stagehand®
and STRATA® Event Staging and Tent Floor Platform Systems

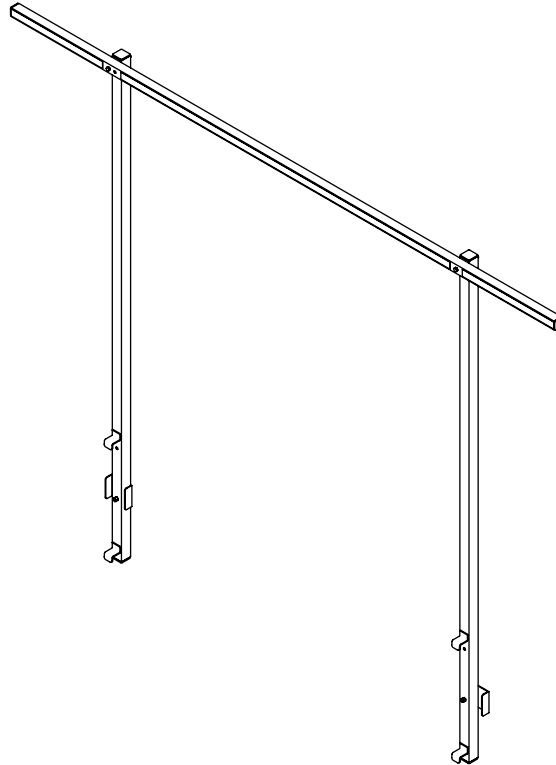

CONTENTS

Warranty	2
Important User Information	2
General	2
Manufacturer	2
Intended Use	2
Before You Begin	3
Required Tools	3
Fastener Parts List	3
Replacement Parts List	4
Assembly	5
Setup	6
Disassembly	7

Note: Please read and understand the Drapery Backdrop Support Assembly Instructions before attempting installation or use.

Note: Remove all items from the shipping containers and sort the components by type, size, etc. Refer to the illustrations on the following pages. If you need additional information about your Drapery Backdrop Support, write, email, or telephone Wenger Corporation at the number or address below.

WARRANTY

The Drapery Backdrop Support is guaranteed free of defects in materials and workmanship for five full years.

Our guarantee assures you of either a full refund or repair or replacement of the defective materials or workmanship without charge, at the discretion of our Customer Service Department. Just call a Customer Service Representative at 1-800-887-7145 and state the reason you are dissatisfied. If a product return is necessary, your representative will issue a return authorization. This is your sole remedy for breach of this warranty.

Should you have a question or problem with any Wenger product, don't hesitate to call, even if the product is past warranty. It's important to us that all our customers be satisfied.

This is the sole warranty made by Wenger. Wenger disclaims all other warranties, including the warranties of merchantability and fitness for a particular purpose, as well as all liability for incidental, consequential, special, and indirect damage. Wenger liability for direct damages shall be limited to the amount you paid for the product involved. Wenger reserves the right to make product changes without obligation to incorporate such changes into products previously sold.

Some states do not allow the exclusion or limitation of damages or warranties, so the above may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

IMPORTANT USER INFORMATION

GENERAL

Copyright® 2006 by Wenger Corporation

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, unless it is for the purchaser's personal use.

Printed and bound in the United States of America.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Wenger Corporation. Wenger Corporation does not assume any responsibility for any errors that may appear in this manual.

In no event will Wenger Corporation be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of this manual.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when assembling or installing Wenger Corporation products. If any questions or problems arise, call Wenger Corporation at 1-800-733-0393.

MANUFACTURER

The Drapery Backdrop Support is manufactured by:

Wenger Corporation
555 Park Drive
Owatonna, MN 55060
1-507-455-4100 • 1-800-733-0393
www.wengercorp.com

INTENDED USE

- This product is intended for indoor use in normal ambient temperature and humidity conditions — it must not be exposed to prolonged outside weather conditions.
 - This product is intended to be assembled only as described in these instructions.
-

BEFORE YOU BEGIN


- Read the complete assembly procedure before you begin.
- Remove all items from the shipping carton and lay them out approximately in their final position.
- Remove all items from the hardware bag and determine where all of the fasteners will be used.

REQUIRED TOOLS


The following tools must be available to assemble the Percussion Cabinet:

- Two 1/2" Open-End or Socket Wrenches


FASTENER PARTS LIST

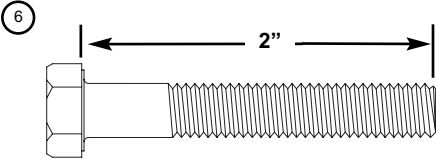


6
Capscrew 2"

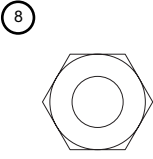

8
Lock Nut

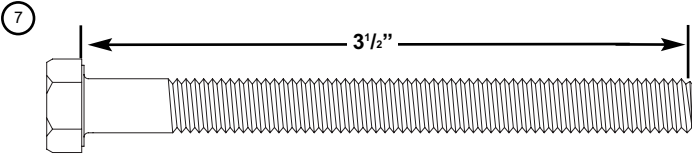


7
Capscrew 3 1/2"

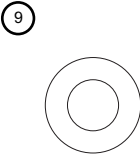

9
Washer


REPLACEMENT PARTS LIST

Item	Qty	Description
1	2	Upright weldment
2	1	Tube, support
3	2	Bracket
4	4	Plug, 1 1/2" square
5	2	Plug, 1 1/4" square
6	2	Capscrew, 5/16 -18 x 2"
7	2	Capscrew, 5/16 -18 x 3 1/2"
8	4	Nut, lock 5/16-18
9	2	Washer, flat, nylon, 5/16" ID
10	-	Hook-and-loop strip, 101" long

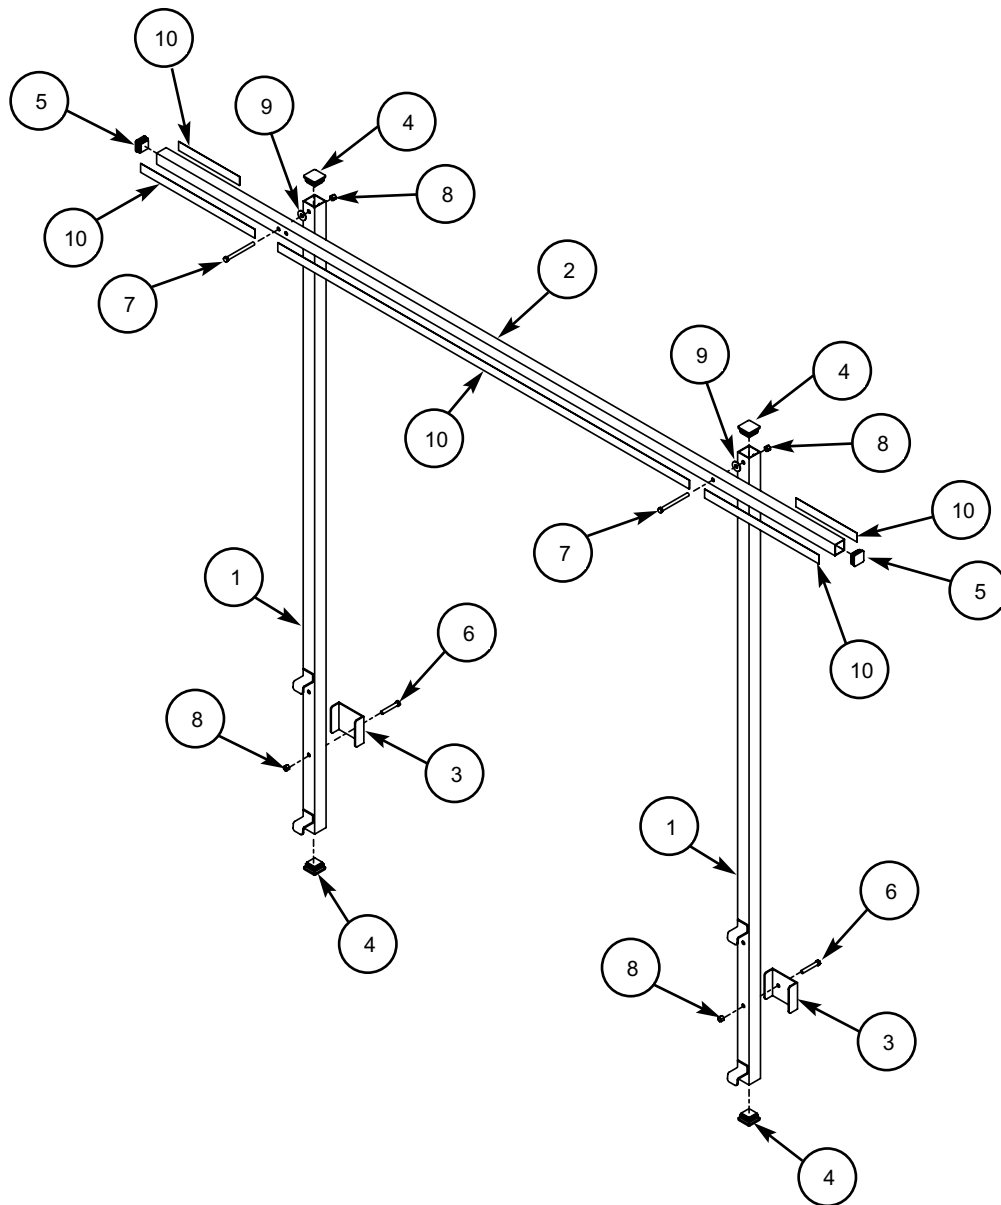



ASSEMBLY

1. Lay the Uprights (1) on a flat surface, with the Support Brackets facing up.

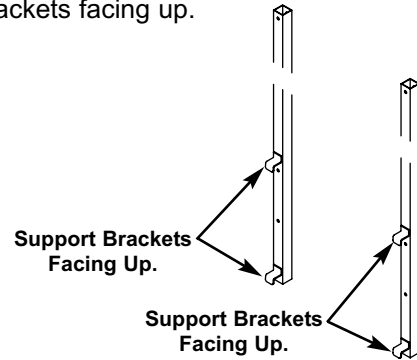


2. Attach a Side Bracket (3) to each Upright using a $\frac{5}{16}$ "-18 x 2" Capscrew (6) and a Lock Nut (8).

The Side Brackets must extend to the outside of the Upright.

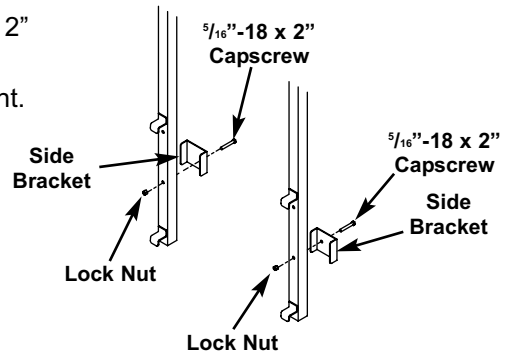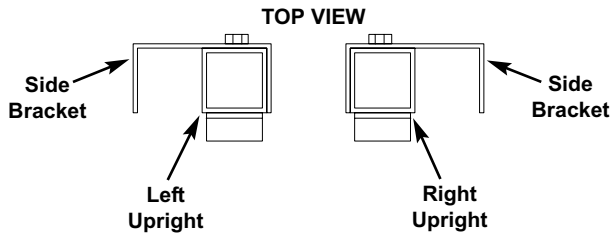

3. Attach the Drapery Support Tube (2) to the Uprights using a $\frac{5}{16}$ "-18 x 3 $\frac{1}{2}$ " Capscrew (7), a Flat Washer (9) and a Lock Nut (8).


There are two adjacent holes in one side of the drapery Support Tube. The first hole is used to assemble Versalite®, Trouper® and Stagehand® systems. The second hole is to assemble STRATA® systems.

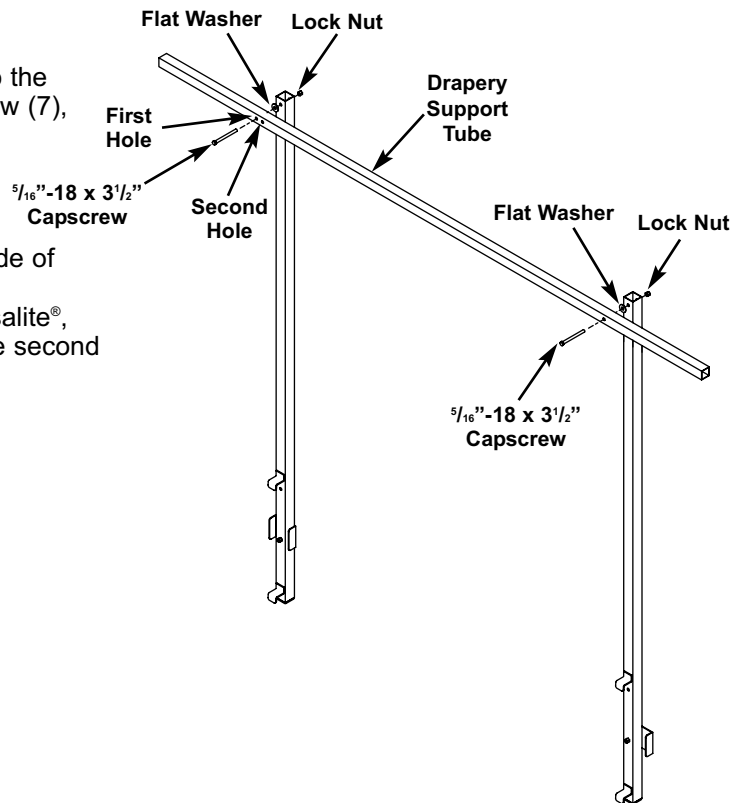


SETUP

1. Unfold the Backdrop Support and set it on an installed Guard Rail as shown.

NOTE: Two people are required to install the Backdrop Support.

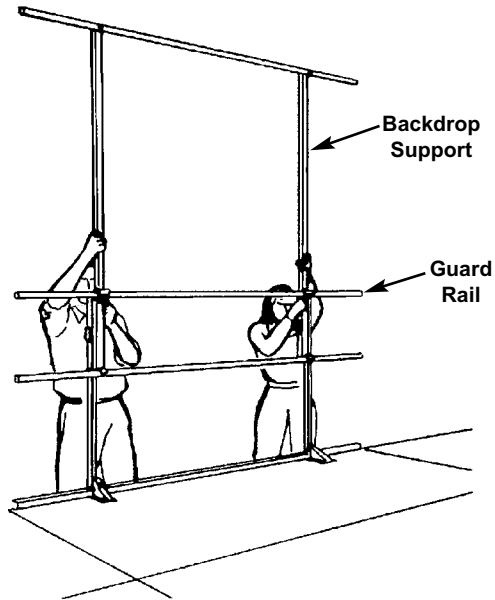

Side Bracket of the Backdrop Support fits around the outside edge of the upright on the Guard Rail.

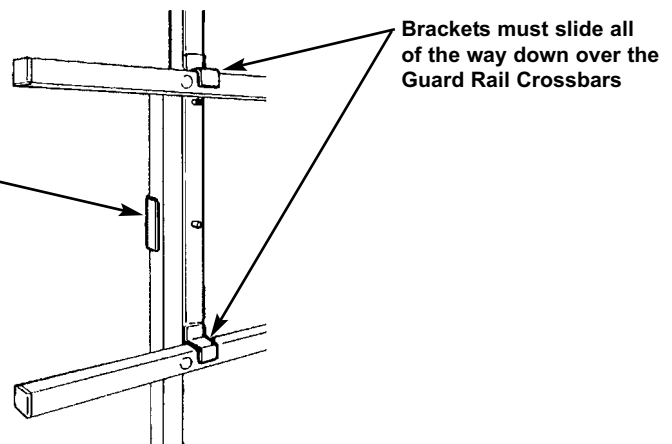

2. Refer to the Owner's Manual for instructions on attaching the drapery to the support.

DISASSEMBLY

1. Refer to the Owner's Manual for instructions on removing and storing the drapery from the backdrop support.
2. Press the button on each upright, and lift the Backdrop Support from the Guard Rail.

