


Basic Instructions only!
For more detailed product information, refer to the
Fixed Media Cabinets Owner's Manual 258A999.

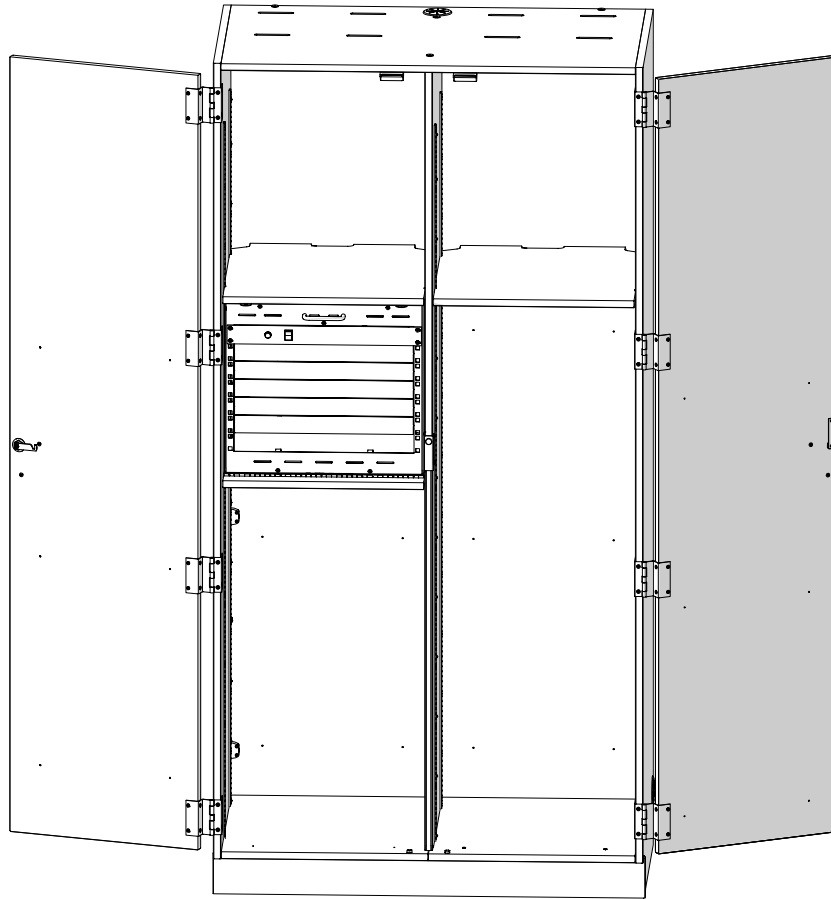

Contents


Hardware Parts List 2 Operation 7
Installation 3



Visit the Media Storage Cabinet web page at www.wengercorp.com.

Note: Please read and understand these instructions before starting the installation.
Note: Examine the illustrations on the following pages. If you need additional information, contact Wenger Corporation using the information below.

Hardware Parts List

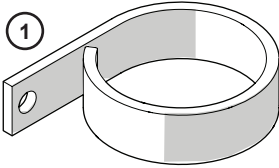


X003600
Wire Clamp
and
X000482
#8 x 5/8
Truss Head Screw




X003599
Shelf Clip



X001746
#7 5/8
Flat Head Screw

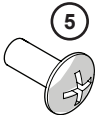

X003067
1/4-20 x 5/8
Truss Head Screw

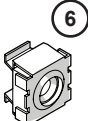

X003632
Cage Nut

**Quantities may vary, extras can be discarded.*

Installation


IMPORTANT: The following procedure is shown using the 2-Column Fixed Media Cabinet, the procedure for all other Media Cabinets are similar unless indicated otherwise.

1. Remove the existing Standard Fixed Shelf and replace it with the Rackmount Top Shelf.
 - a. Remove the screws that attach the bottom of the Fixed Shelf to the installed Shelf Clips.
 - b. With the Nut Inserts facing down, place the Rackmount Fixed Shelf onto the Shelf Clips at the same location.
 - c. Reattach the screws to secure the Fixed Shelf to the Shelf Clips.

Fixed Shelves and Rackmounts may be repositioned, but require that the screws also be removed. Always reattach the screws after repositioning.


Fixed Shelves help maintain the width of each column and ensure that the locks function properly. Keep the location of the Fixed Shelves within the middle-third portion of the Cabinet.

2. Attach two Wire Clamps (#1) to the bottom of the Rackmount Fixed Shelf using one #8 x 5/8 Truss Head Screw (#2) in each of the pilot holes as shown.

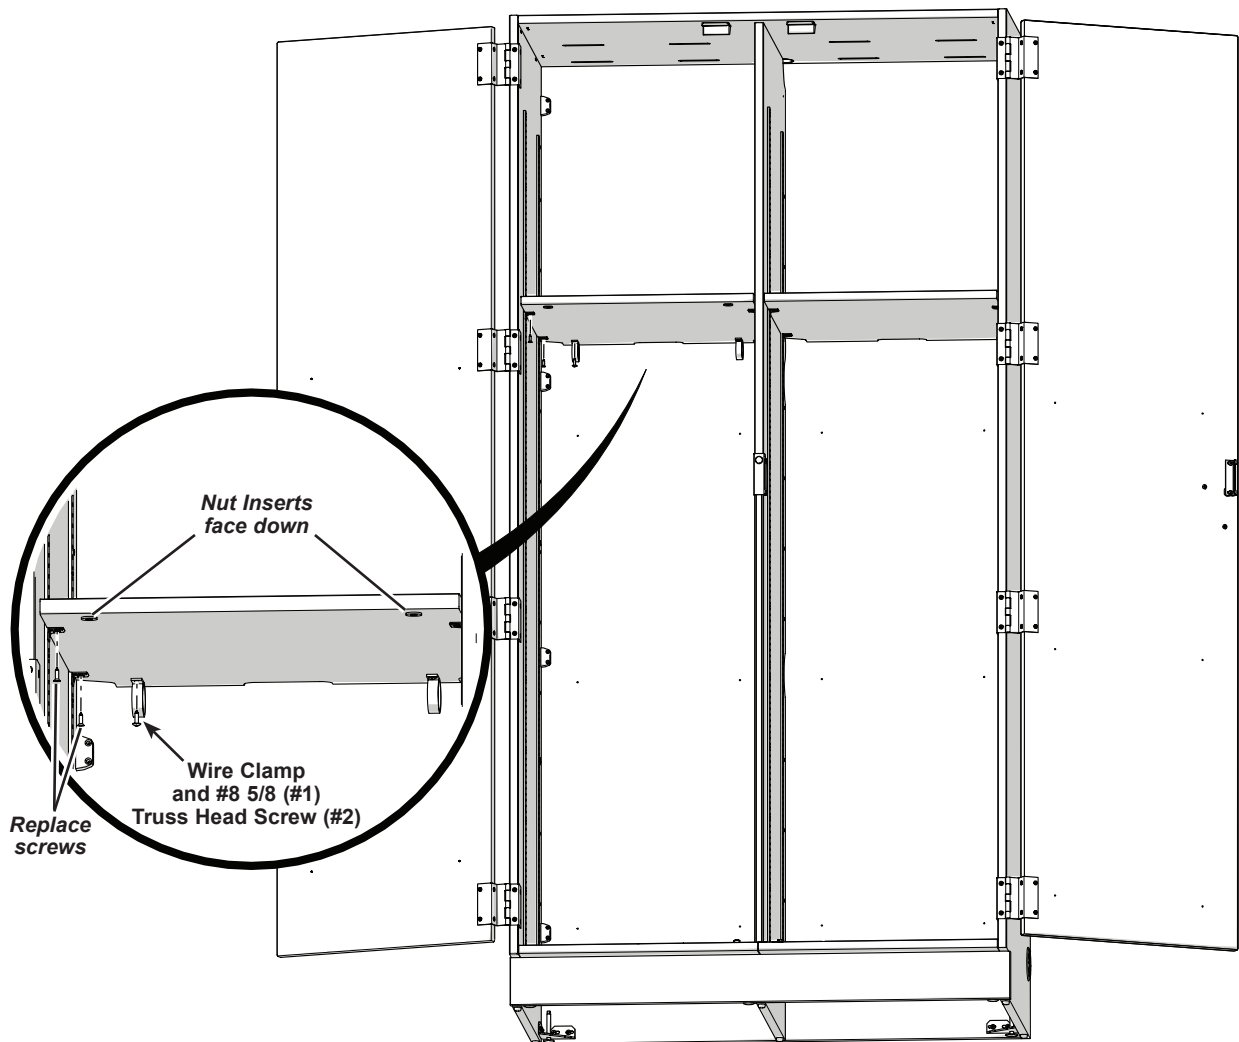


Installation (continued)

3. Install the Bottom Fixed Shelf so the bottom surface is **18-1/2" (47 cm)** below the bottom surface of the Top Fixed Shelf as shown.
 - a. Position one Shelf Clip (#3) at even elevations on each of the four Rails.
 - b. With the Rackmount Pilot Holes facing up, fit the grooves in the shelf over the Rails, tilt the Shelf into position to rest on the Shelf Clips.
 - c. Be sure that the Rackmount Component will fit between the two fixed Shelves before securing it to the Shelf Clips.
 - d. Secure the Bottom Fixed Shelf to each Shelf Clip using a #7 5/8 Flat Head Screw (#4).

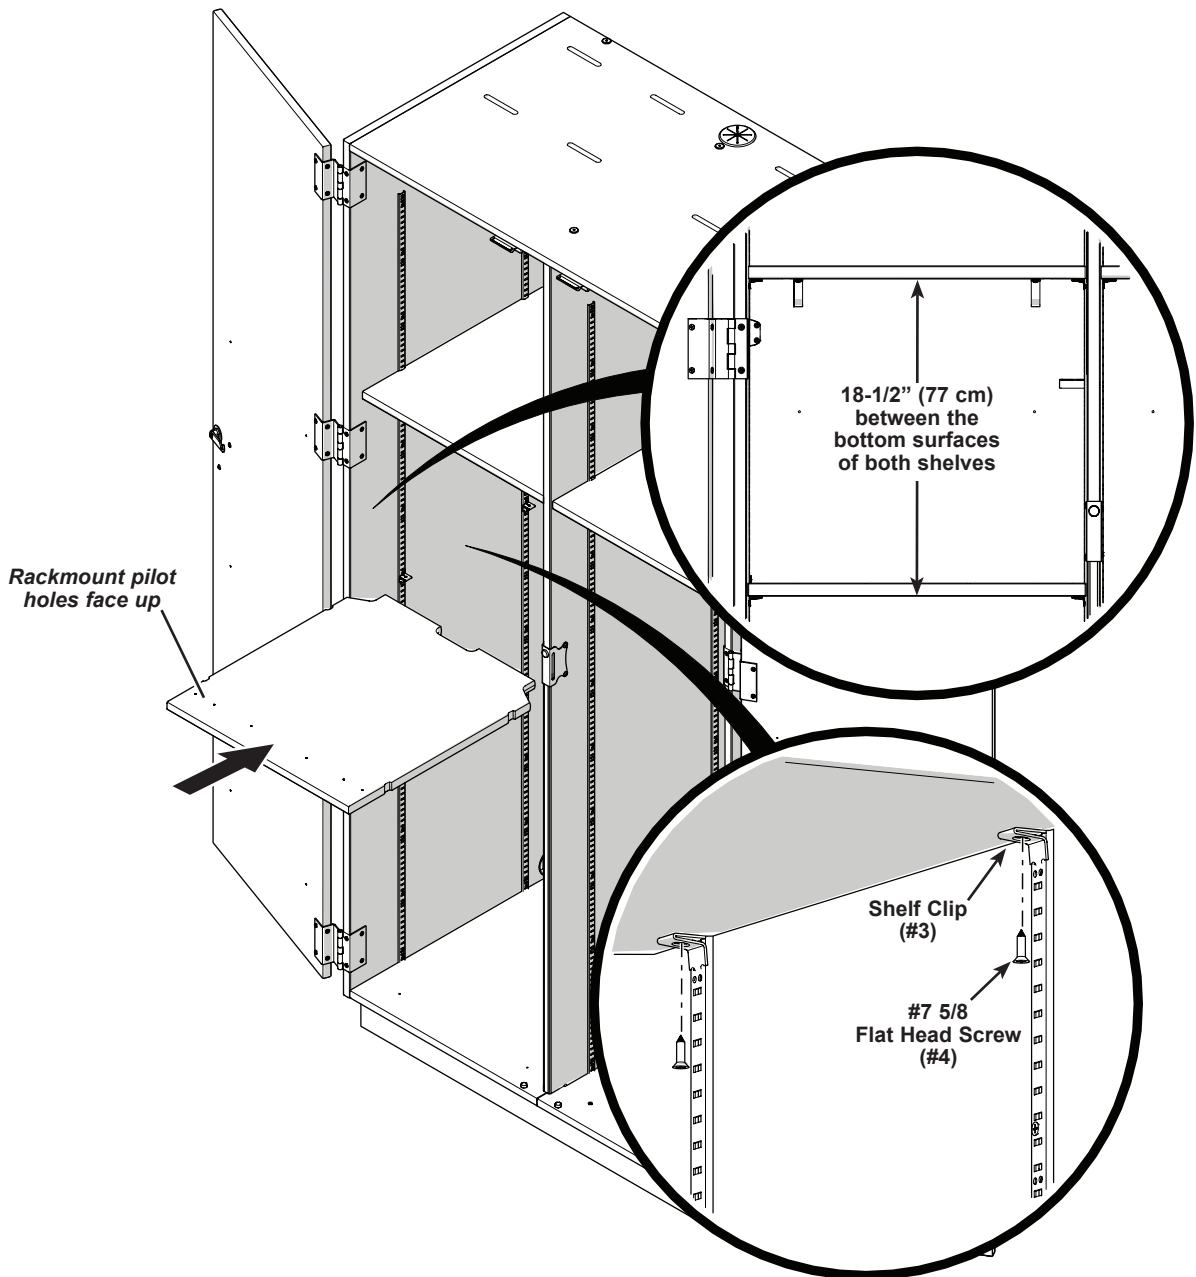


Installation (continued)

4. Attach the Rackmount to the Bottom Fixed Shelf using #8 x 5/8 Truss Head Screws (#2) in each of the pilot holes as shown.

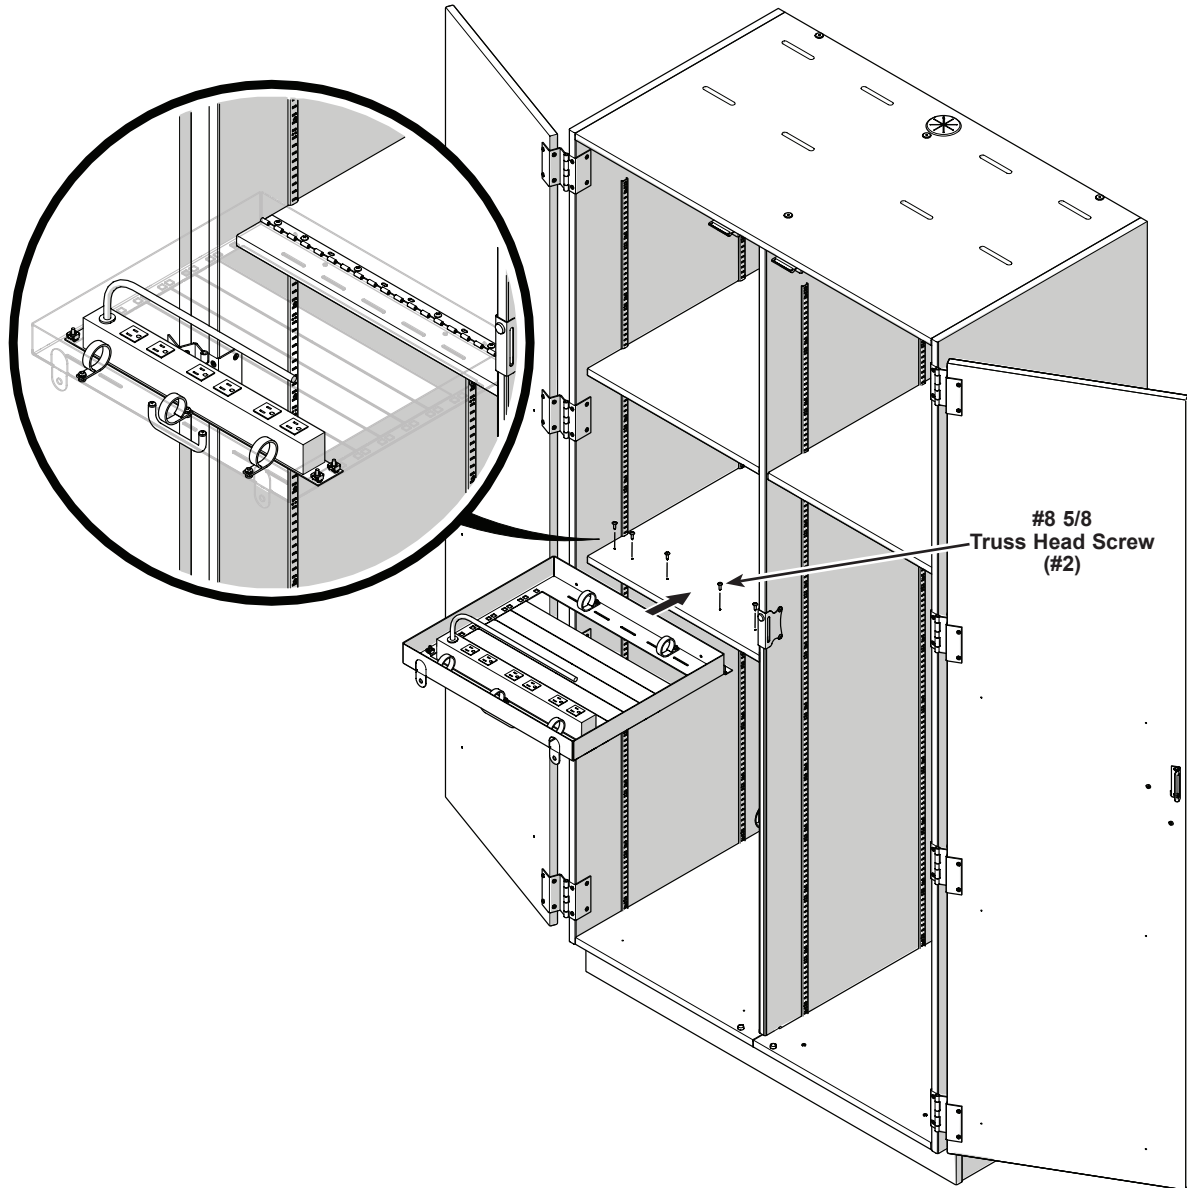

Installation (continued)


5. Close the Rackmount and secure it to the bottom of the Top Fixed Shelf using one 1/4-20 x 5/8 Truss Head Screw (#5) into both of the Nut Inserts.

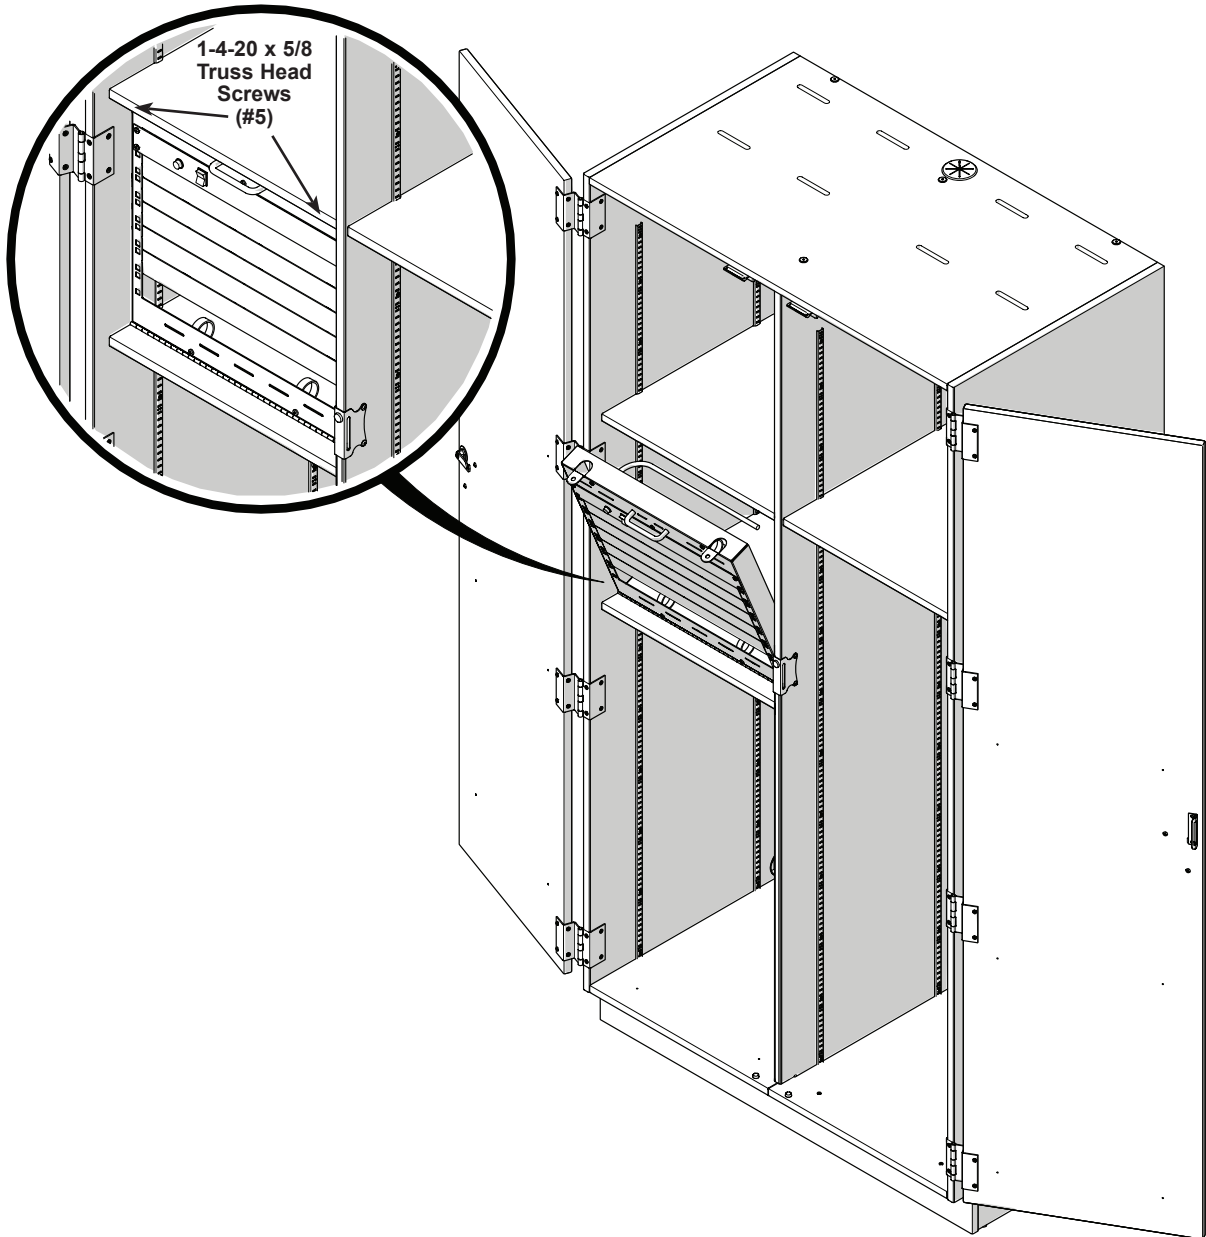

Operation

Rackmount Electronics

1. Electronic components can be accessed by tipping out the Rackmount.
2. Additional electronic components can be added but must be done so according to their manufacturer's specifications.
Place deeper components at the bottom of the Rackmount.
3. Knockout Panels can be removed from the Rackmount by twisting them until they break away from the frame.
4. To open the Rackmount, remove the two Screws securing it to the above Fixed Shelf and carefully tip it down until the bottom rests on the shelf below.
5. Cage Nuts (#6) can be relocated or installed to match component settings.
6. When routing cables inside of the Rackmount, leave enough excess to tip the Panel forward.

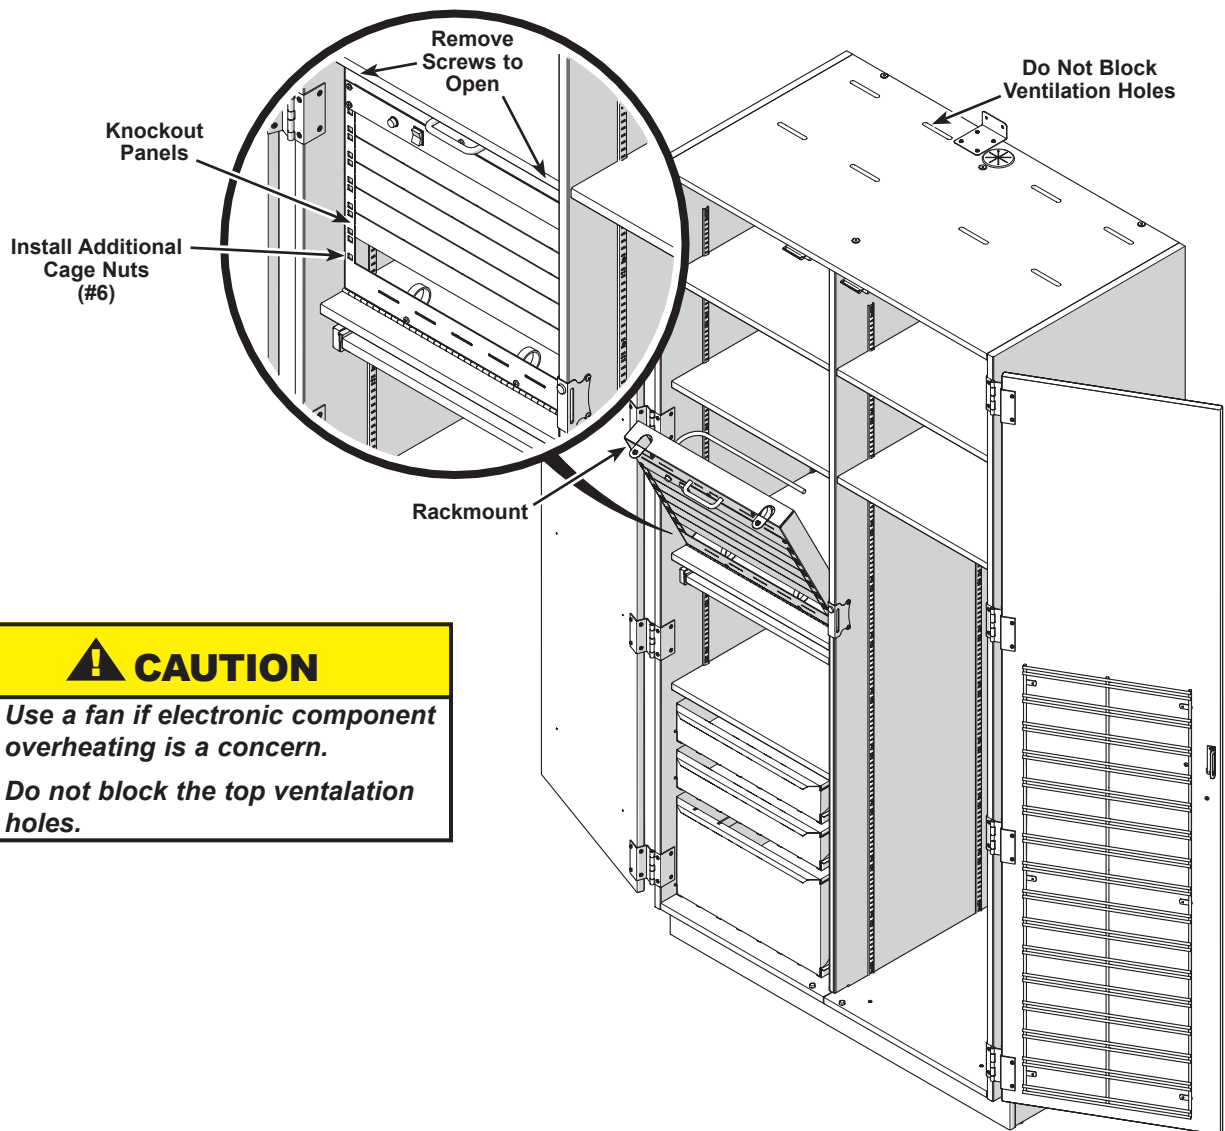

CAUTION
Use a fan if electronic component overheating is a concern.
Do not block the top ventilation holes.

This page is intentionally blank.