



Your Performance Partner

Assembly/Operating Instructions

Security Cable for Guitar Storage Rack


Basic Instructions only!
For Replacement Parts and more detailed product information, refer to the Guitar Storage Rack Assembly Instructions 148J325.

ASSEMBLY

If Optional Security Cables are being used to secure instruments, pinch the looped end of the Security Cable and slide it through the top of either the left or right side hole in the Yoke as shown.

The washer end will keep it from sliding completely through.

Repeat for each Yoke that is to include a Security Cable.

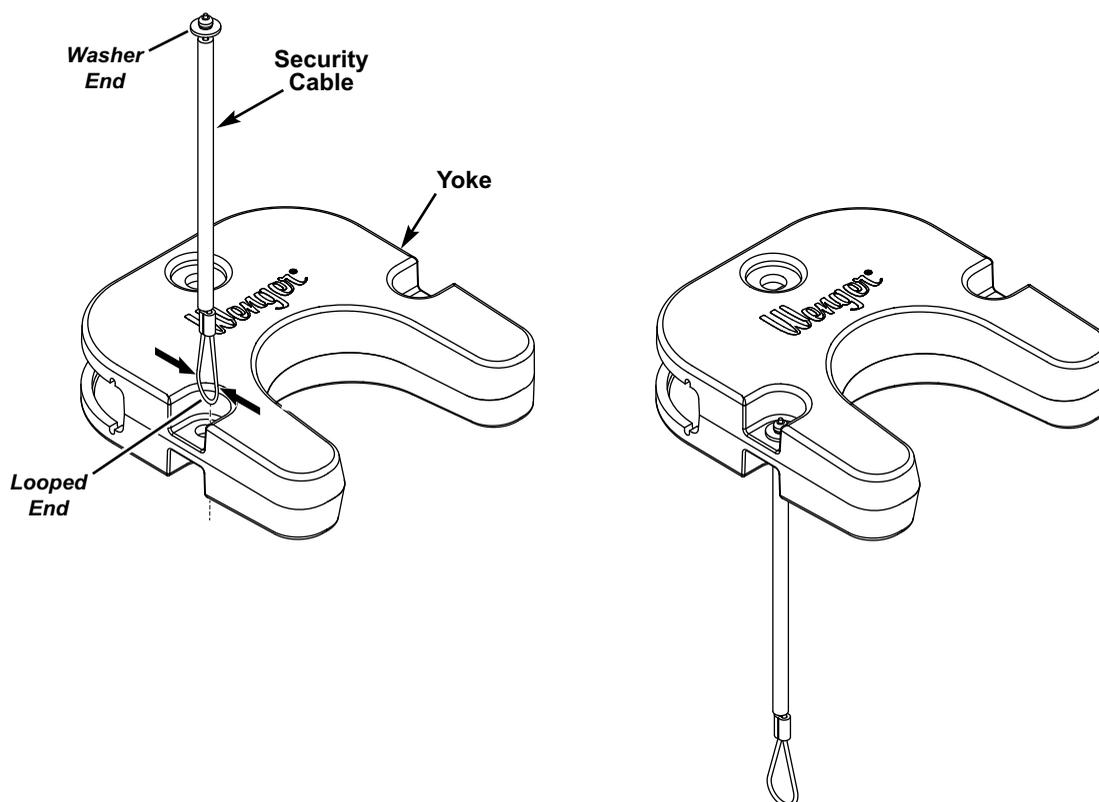

Note: Please read and understand the instructions before attaching or using.
Note: If you need additional information, contact Wenger Corporation using the information below.

OPERATION

Load the instruments onto the Guitar Storage Rack by placing the bottom end on the Rack Extrusions and the top end either into the Yoke or resting against the Yoke Assembly.

Lock the Front Braking Swivel Casters when the Guitar Storage Rack is in the desired location. Unlock the casters to move the rack to a different location.

If there are instruments on the Guitar Storage Rack while it is being moved, more than one person is required to move the rack.

Move the rack slowly and carefully while holding the instruments in place to prevent them from hitting each other.

SECURE AN INSTRUMENT

To secure an instrument in the Guitar Storage Rack:

1. Place the instrument onto the Guitar Storage Rack with the neck resting in the Yoke.
2. From the underside of the Yoke, wrap the Security Cable across the neck of the instrument and secure with a padlock (not included) on the other side of the Yoke.

The Security Cable and Yoke are designed to accommodate a padlock that is 1/2" wide x 5/8" tall with a 3/16" maximum diameter shackle, such as the Masterlock 131 Series.

