

Item	Description
1	Guitar / Guitarron Yoke
2	Bass / Cello Yoke
3	Violin / Viola / Vihuela Yoke
4	Locking Cable 8¼", 10" or 11"
5	Black Plastic Spacer
6	Flat Washer
7	Lock Nut

**Note:** Please read and understand these instructions for before attempting installation, assembly or use.

**Note:** Remove all items from the shipping cartons and arrange them in a convenient location. Refer to the illustrations on the following pages. If you need additional information, contact the Wenger Corporation using the information below.

## WARRANTY

The Instrument Neck Yoke and Locking Cable Accessory is guaranteed free of defects in materials and workmanship for five full years.

Our guarantee assures you of either a full refund or repair or replacement of the defective materials or workmanship without charge, at the discretion of our Customer Service Department. Just call a Customer Service Representative at 1-800-887-7145 and state the reason you are dissatisfied. If a product return is necessary, your representative will issue a return authorization. This is your sole remedy for breach of this warranty.

Should you have a question or problem with any Wenger product, don't hesitate to call, even if the product is past warranty. It's important to us that all our customers be satisfied.

This is the sole warranty made by Wenger. Wenger disclaims all other warranties, including the warranties of merchantability and fitness for a particular purpose, as well as all liability for incidental, consequential, special, and indirect damage. Wenger liability for direct damages shall be limited to the amount you paid for the product involved. Wenger reserves the right to make product changes without obligation to incorporate such changes into products previously sold.

Some states do not allow the exclusion or limitation of damages or warranties, so the above may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

# SAFETY PRECAUTIONS

---

Throughout this manual you may find cautions and warnings which are defined as follows.

- **WARNING** means that failure to follow the instruction may result in serious injury or death.
- **CAUTION** means that failure to follow the instruction may result in serious injury or damage to property.

Read all of the safety instructions before using or installing any Instrument Neck Yoke or Locking Cable Accessory.

 <b>CAUTION</b>
<i>Make sure that anyone working with the equipment has read and understands this manual.</i>

 <b>CAUTION</b>
<i>Always observe and comply with the Warnings and Cautions posted on the system equipment.</i>

 <b>CAUTION</b>
<i>Failure to comply with Warnings and Cautions in this document can result in damage to property or serious injury.</i>


# INSTALLATION OF NECK YOKE

---

**Note:** The neck yoke installation and locking cable are two different accessories but must be installed together. If you are not installing the locking cable, disregard all reference to the locking cable in the following instructions.


**If installing the locking cable, please refer to the following pages.**

1. Select the spacing for the neck yokes that keeps the instruments separated enough to prevent interference with each other.
2. Add a flat washer (6) to the threaded end of the neck yoke.
3. Insert the neck yoke (1) into the desired slot of the upper support bar (9).
4. Add a flat washer (6) to the threaded end of neck yoke (1) on the back side of the upper support bar (9).
5. Secure with the lock nut (7).

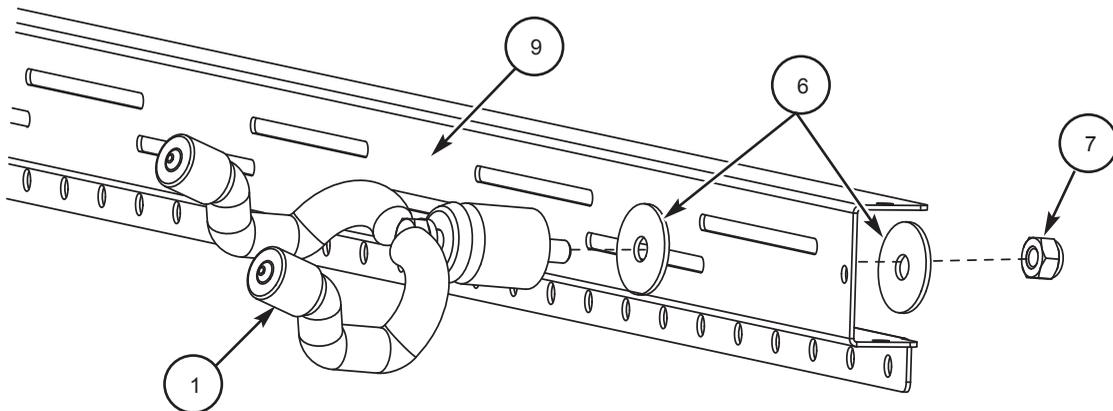

# INSTALLATION OF NECK YOKE & LOCKING CABLE

1. Select the locking cable (4) length based on the size of the instrument neck.  
**Note:** There are three different lengths of locking cable (4).
2. Remove the black plastic spacer (5) from the threaded end of the neck yoke (1).
3. Install one locking cable end loop (4) onto the threaded end of the neck yoke (1).
4. Reinstall the black plastic spacer (5) with the wide end away from the neck yoke (1).
5. Add a flat washer (6) to the threaded end of the neck yoke.
6. Select the spacing for the neck yokes that keeps the instruments separated enough to prevent interference with each other. Insert the neck yoke (1) into the desired slot of the upper support bar (9).
7. Add a flat washer (6) to the threaded end of neck yoke (1) on the back side of the upper support bar (9).
8. Secure with the lock nut (7).

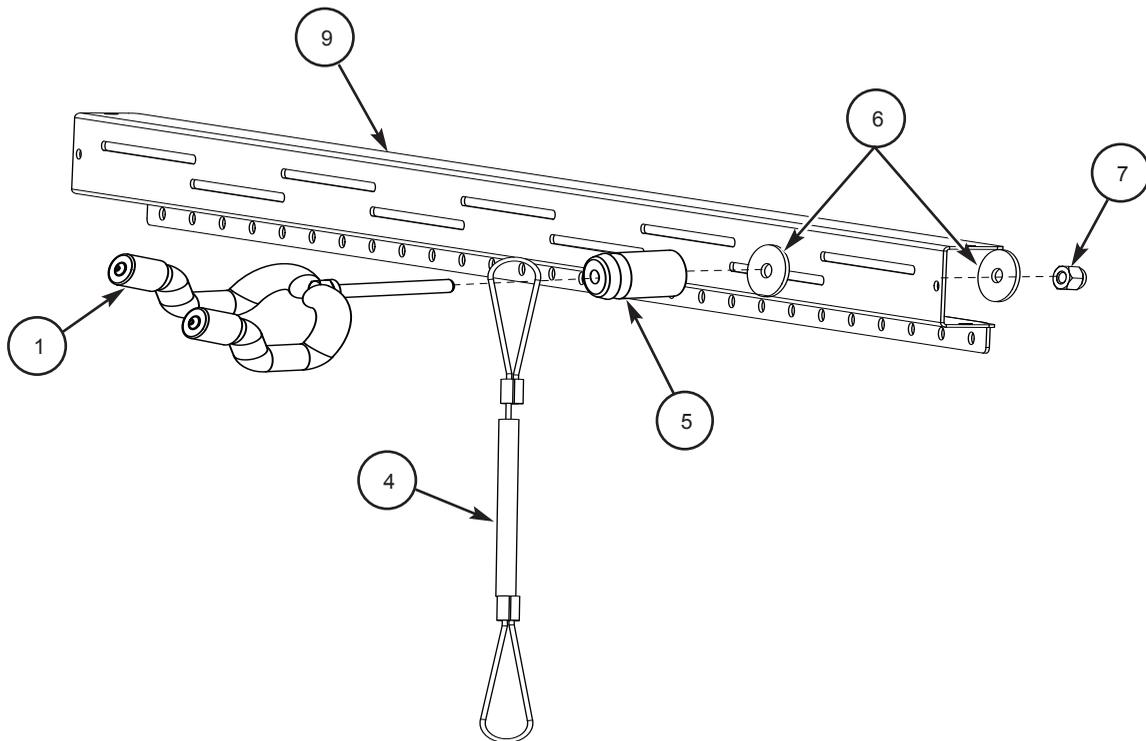

# SECURING THE INSTRUMENT

---

Carefully place the instrument on the lower padded support bars and recline it into the neck yoke. Continue to hold the instrument and check that it is stable in this position

## SECURING THE INSTRUMENT WITH THE LOCKING CABLE

---

1. Bring the locking cable (4) around the instrument neck.
2. Secure the locking cable (4) to the upper support bar (9) by placing a padlock (not provided) through the end loop of the locking cable (4) and one of the holes in the upper support bar (9).

**Note:** If necessary, change the length of the locking cable by disassembling the neck yoke/cable assembly and substituting a different length.

It is generally desirable to use the shortest possible cable and a padlock position close to the yoke position as it is clamped into the upper support bar. If the locking cable is too long or the padlock position is too far away, it may be possible to lift the instrument off the yoke and twist it so that there is slack in the cable and the instrument can be moved out of the locking cable loop. Some experimentation may be required to find the best locking cable length and padlock position for the best security.

