 
 


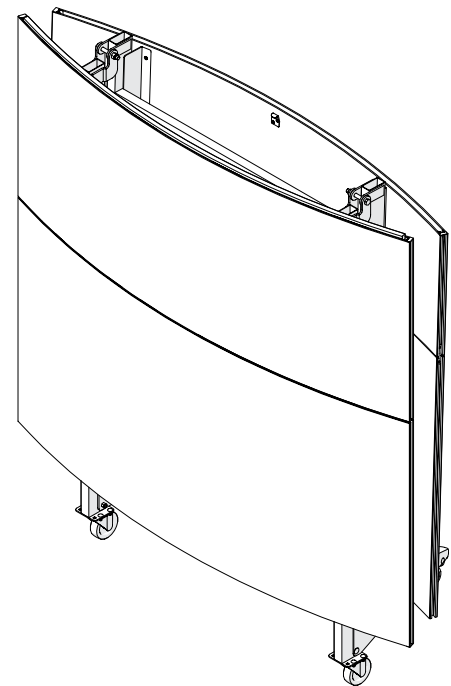

Unpacking Instructions Legacy® Select Acoustic Tower

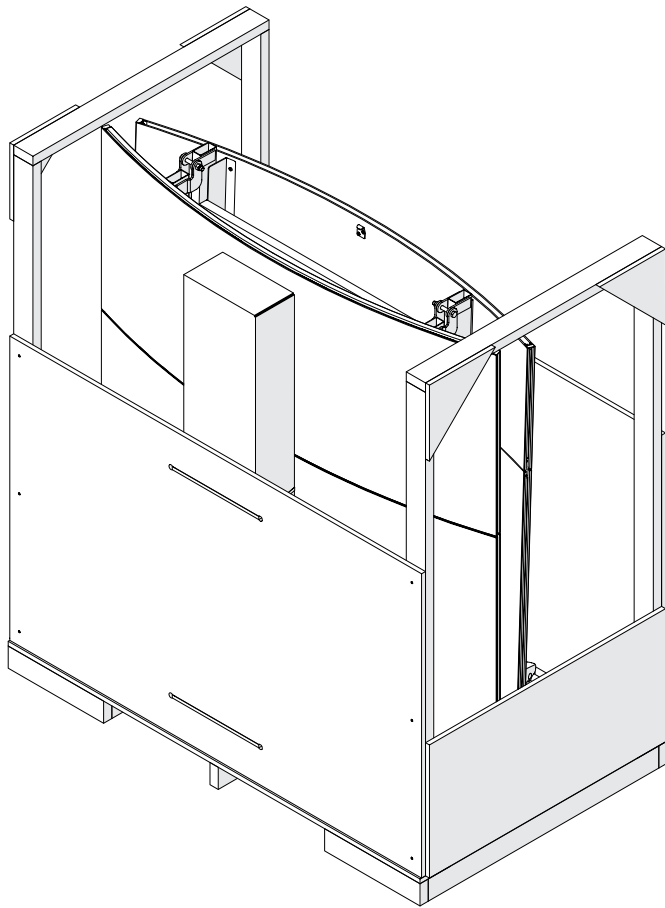

Contents

| | | | |
|--------------------------|---|------------------------|---|
| Safety Precautions | 2 | Before Unpacking | 2 |
| Required Tools | 2 | Unpacking | 4 |

Note: Please read and understand these instructions before unpacking and diassambling the packaging.
Note: If you need additional information, contact Wenger Corporation using the information below.

Safety Precautions


Throughout this document you may find cautions and warnings which are defined as follows:

- **WARNING:** Failure to follow the instruction could result in serious injury or or damage to property.
- **CAUTION:** Failure to follow the instruction could result in minor injury or damage to property.

Read all of these safety instructions before unpacking.

| |
|--|
|  CAUTION |
| <i>Make sure anyone unpacking the tower has read and understands these instructions.</i> |

| |
|--|
|  CAUTION |
| <i>Always observe and comply with any Warnings or Cautions in this document.</i> |

| |
|--|
|  CAUTION |
| <i>Always observe and comply with any Warnings or Cautions posted on the system equipment.</i> |

| |
|--|
|  CAUTION |
| <i>It is unsafe for only one person to unpackage the tower.</i> |

Required Tools

- Pallet jack
- Utility knife
- Cordless drill with phillips head bit
- 1/2" Combination wrench or socket
- 9/16" Combination wrench or socket

Before Unpacking

Do not disassemble or remove the pallet until instructed to do so.

Units should be unpagaged indoors, in a well-lighted space with a level floor.

Choose an area close to the performance space - a backstage scene shop is ideal.

Make sure units will fit through any doors between the assembly area and the performance space.


It is recommended that at least two people are used in the unpackaging process.

Unpacking



Any packaging, wood, fasteners or brackets removed during unpacking can be discarded.


1. Cut and remove the banding that secures the lower panel box to the front plywood sheet.

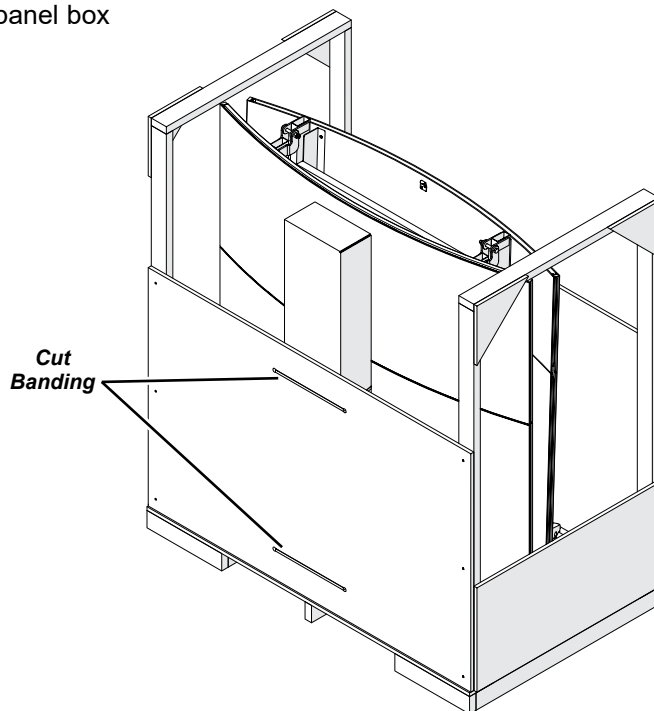

2. Remove the front and back plywood sheets.


Remove the lower panel box and store it in a location that will be safe from damage.

Do not remove or disassemble the bottom pallet at this time.

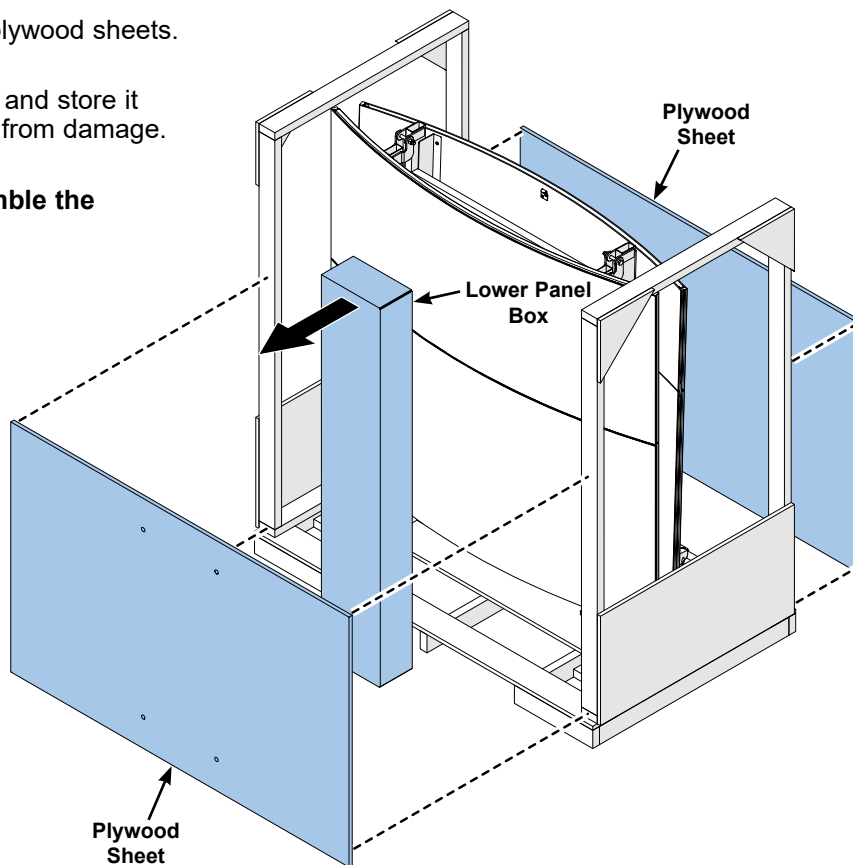


Unpacking (continued)

3. Remove the side frames.

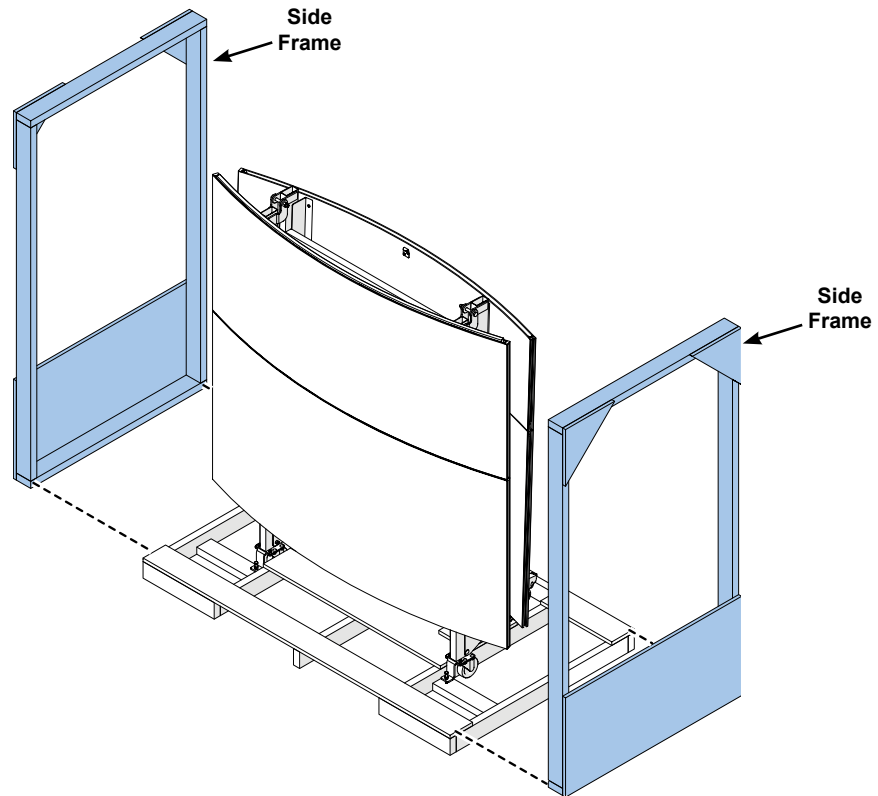


4. Remove the rear pieces of the pallet.

- Remove the twelve screws from the rear boards of the pallet (see illustration).
- Remove the four lag screws securing the counterweight to the pallet.
- Pull away the rear pieces of the pallet.

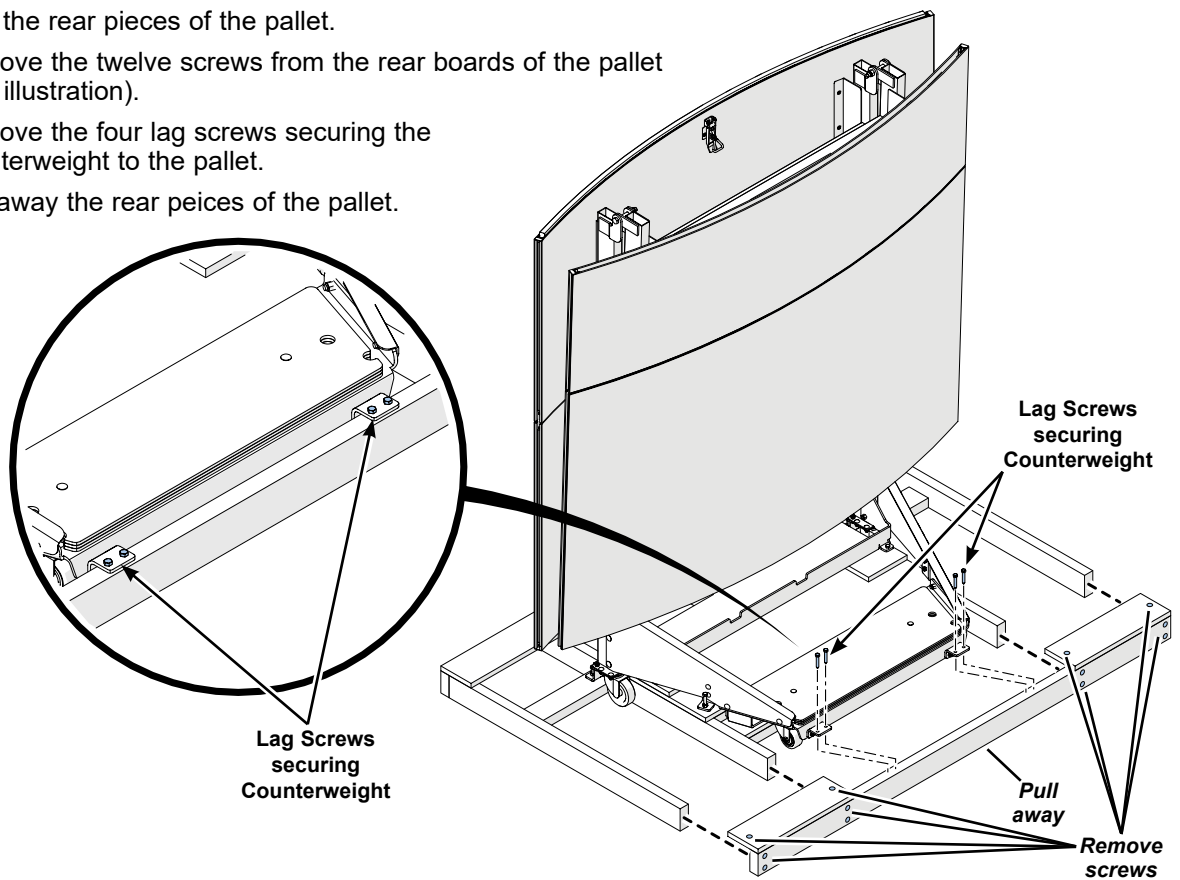


Unpacking (continued)

5. Remove the eight upward facing screws from the pallet.

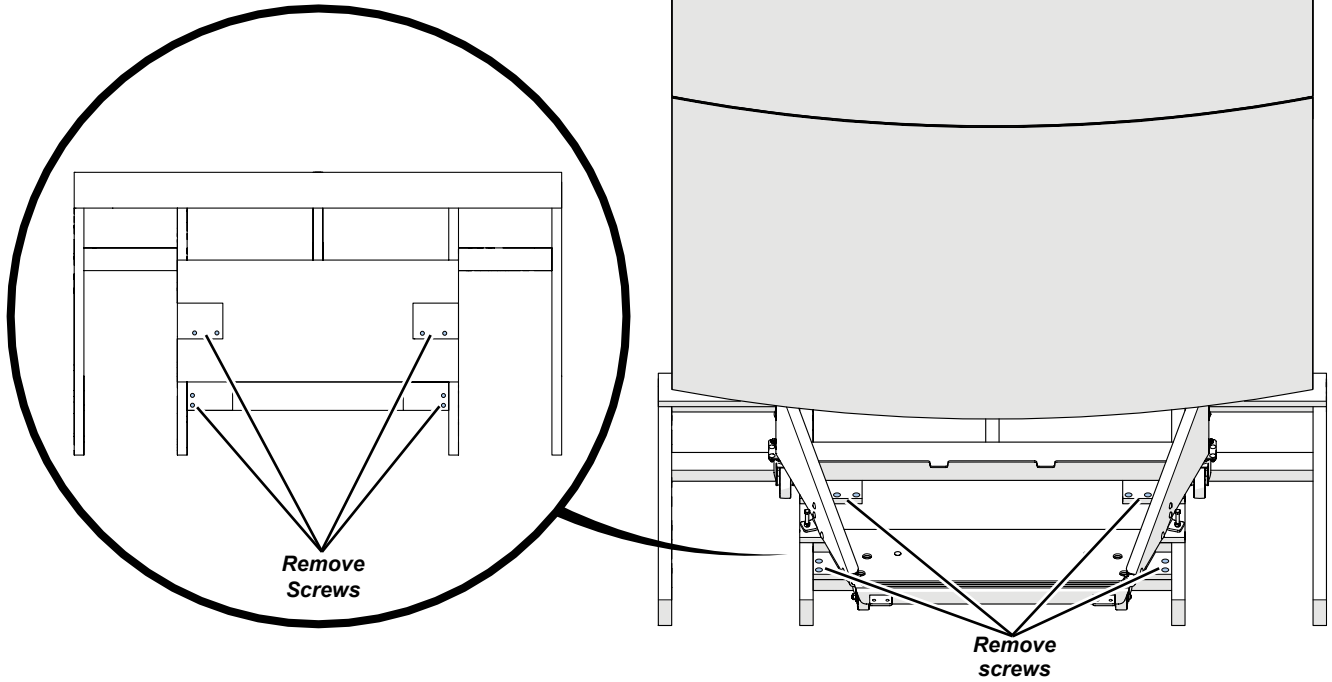


6. Remove the remaining two lag screws that secure the tower to the pallet.

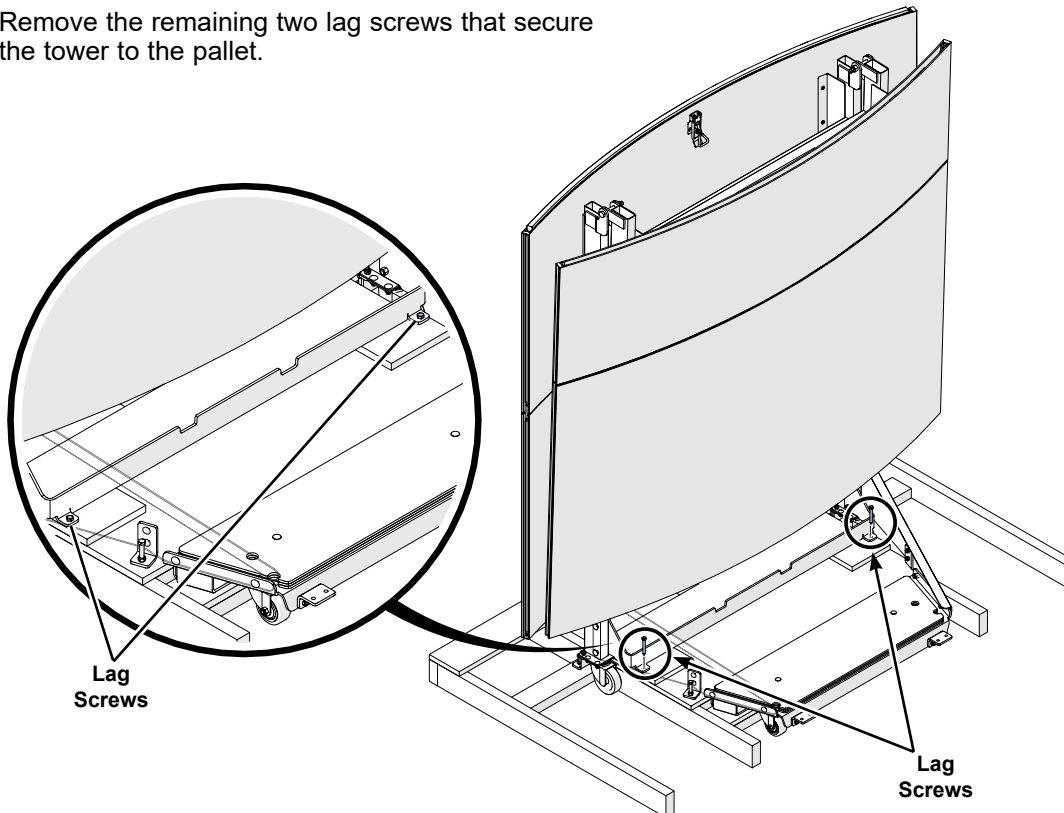


Unpacking (continued)

7. Turn the four drive screws down to raise the tower enough to remove the blocks as shown in the next step.

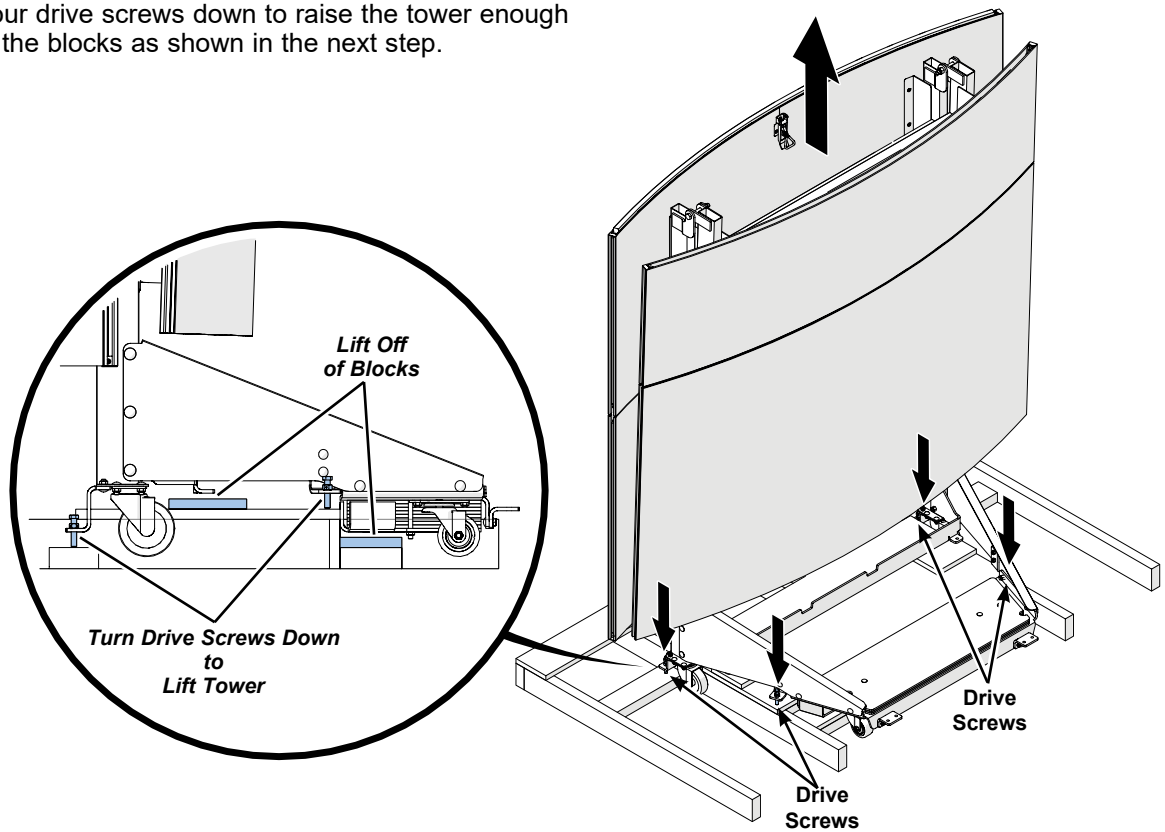


8. Remove the four loose blocks from the pallet.

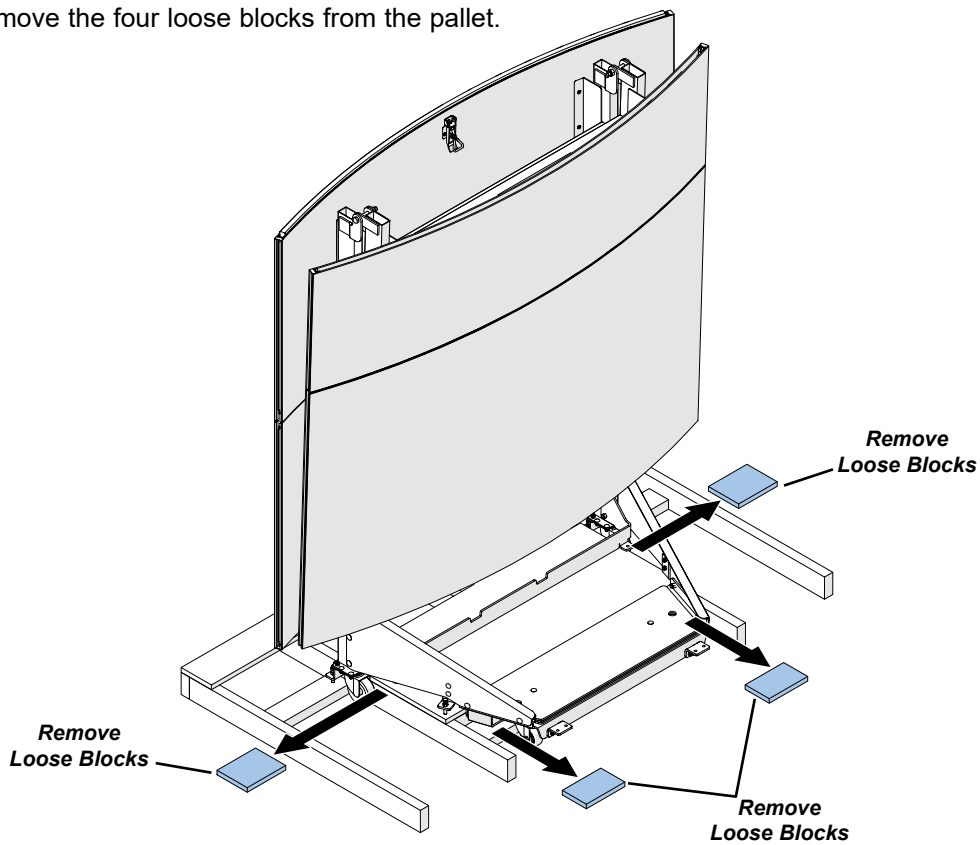


Unpacking (continued)

8. Retract the drive screws to lower the tower back to the ground. All four casters should be touching the ground with the drive screws clear of the pallet.

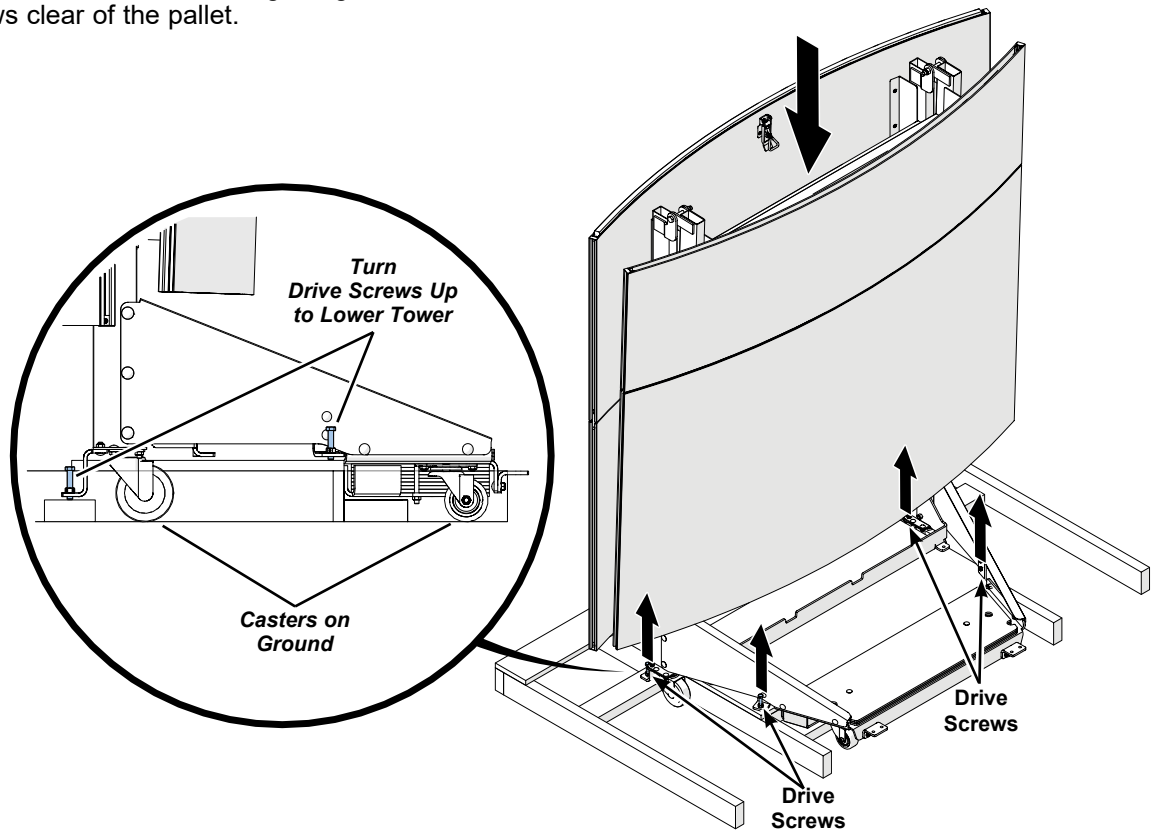


9. Slide the pallet out from under the tower.

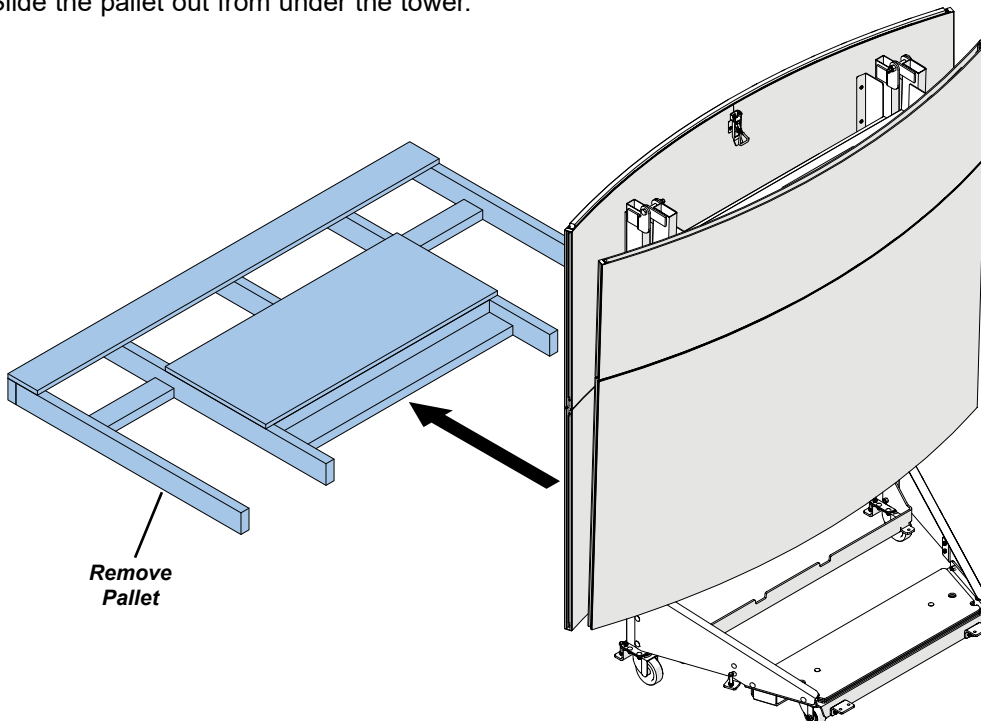

Unpacking (continued)

10. Remove the six unpainted shipping brackets from the front, middle and rear of the tower.
See the illustration, do not remove any casters!

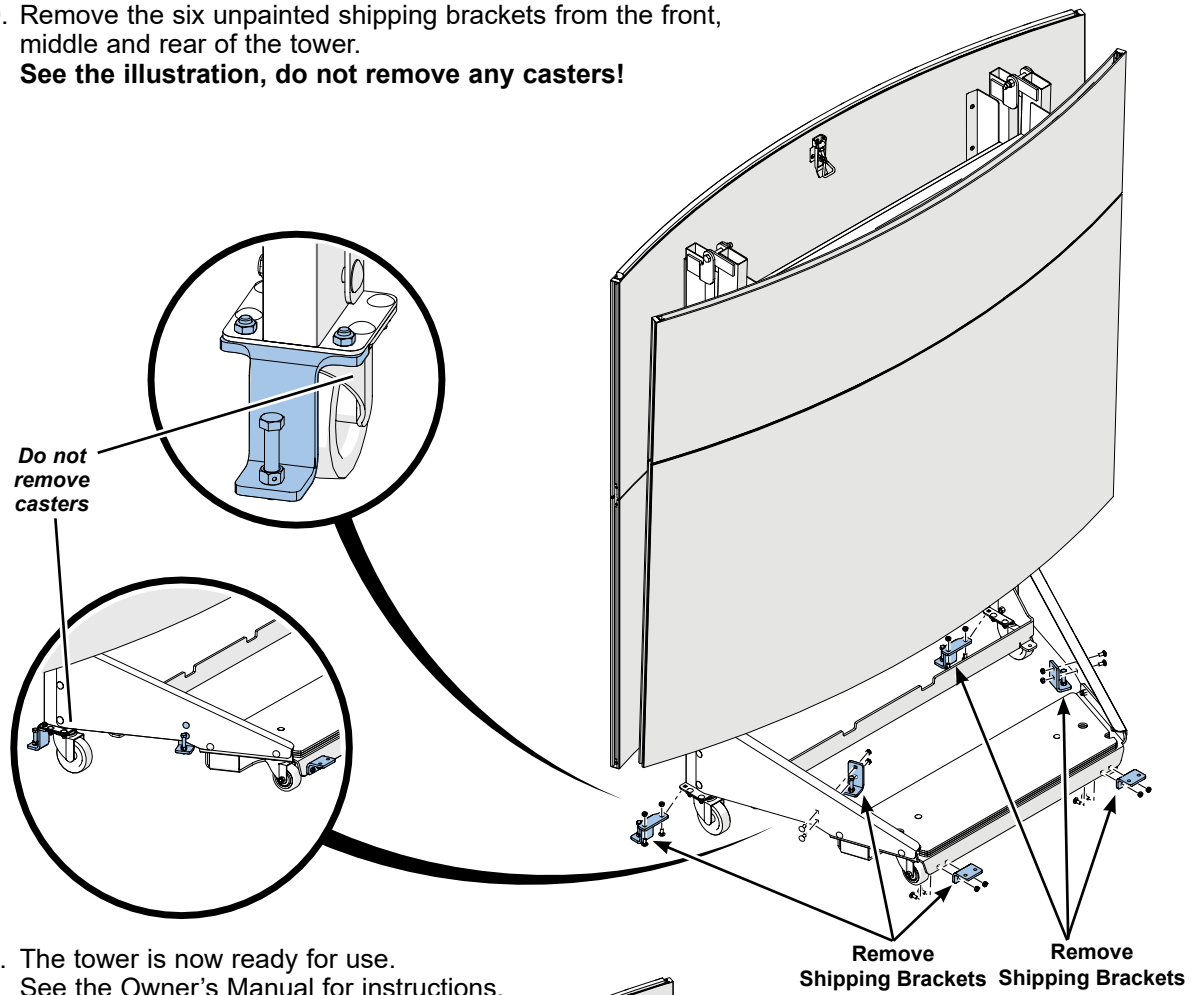

11. The tower is now ready for use.
See the Owner's Manual for instructions.

