

Contents

Important User Information	2	Before Assembly	3
Safety Precautions	3	Assembly	4
Required Tools	3		
Hardware Parts List	3		



Visit the Legacy Basic web page at www.wengercorp.com for more details.

Note: Please read and understand the instructions before starting the assembly.
Note: If you need additional information, contact Wenger Corporation using the information below.

Important User Information

General

Copyright © 2017 by Wenger Corporation

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, unless it is for the purchaser's personal use.

Printed and bound in the United States of America.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Wenger Corporation. Wenger Corporation does not assume any responsibility for any errors that may appear in this manual.

In no event will Wenger Corporation be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of this manual.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when assembling or installing Wenger Corporation products. If any questions or problems arise, call Wenger Corporation at 1-800-887-7145.

Manufacturer

The Legacy Basic Acoustical Shell is manufactured by:

Wenger Corporation
555 Park Drive, Owatonna, MN 55060
800-4WENGER (493-6437) • 1-507-455-4100 www.wengercorp.com

Intended Use

- This product is designed to be an acoustical reflector for vocal or instrumental groups. Towers may also be used as a backdrop or as a screen for other functions such as speeches and ceremonies.
- This product is intended for indoor use in normal ambient temperature and humidity conditions — it must not be exposed to outside weather conditions.
- This product is intended to be assembled only as described in these instructions.

Warranty

This product is guaranteed free of defects in materials and workmanship for five full years from date of shipment. A full warranty statement is available upon request.

Safety Precautions

Throughout this manual you may find cautions and warnings which are defined as follows:

- **WARNING** means that failure to follow the instruction may result in serious injury or death.
- **CAUTION** means that failure to follow the instruction may result in serious injury or damage to property.


Read all of these safety instructions before starting the assembly.

 CAUTION	 CAUTION	 CAUTION
<i>Make sure anyone assembling or installing the Legacy Basic has read and understands these instructions.</i>	<i>Failure to comply with Warnings and Cautions in this document can result in damage to property or serious injury.</i>	<i>Always observe and comply with the Warnings and Cautions posted on the system equipment.</i>

Required Tools

- 1/2" Combination Wrench or Socket
- 9/16" Combination Wrench or Socket
- 3/4" Combination Wrench or Socket
- Cordless Drill with Phillips Head Bit
- Utility Knife

Hardware Parts List

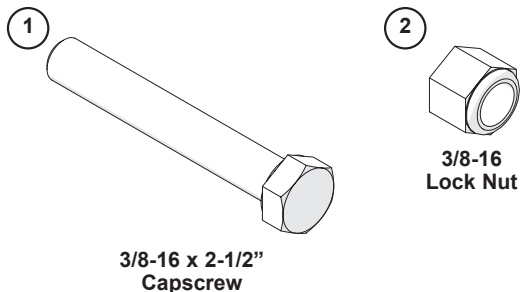

Before Assembly

Units should be assembled indoors, in a well-lighted space with a level floor.

Choose an area close to the performance space - a backstage scene shop is ideal.

Make sure units will fit through any doors between the assembly area and the performance space.



It is recommended that two people are used in the assembly process.

Assembly

1. Back out the screws and remove the outer lumber and plywood that protect the Legacy Basic during shipping.

Do not remove or disassemble the bottom pallet at this time.


CAUTION
Do not unband the Main Assembly until it is completely assembled and the pallet is removed.

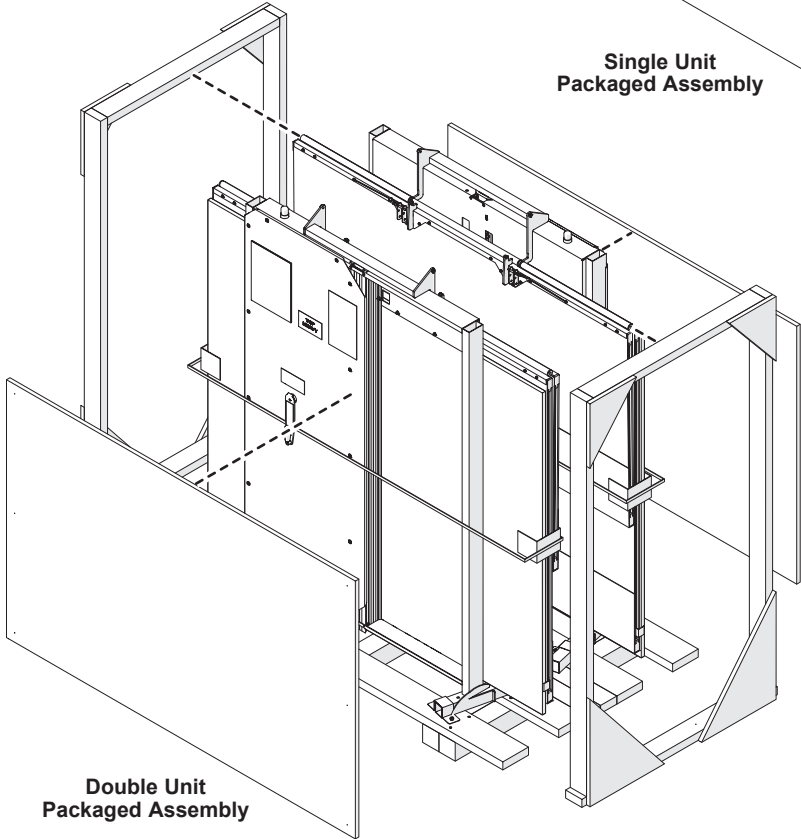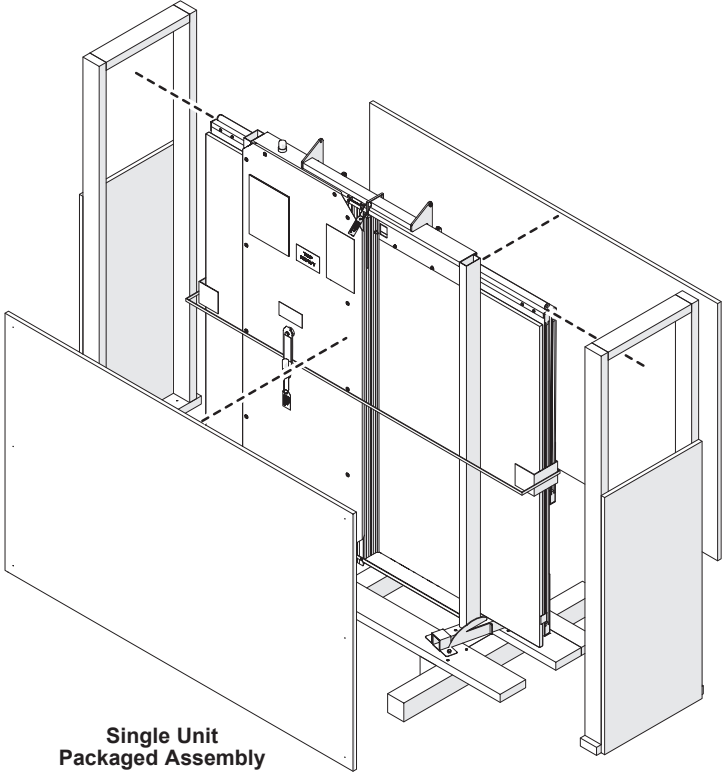


Assembly (continued)

2. Remove the outer-most 4 x 4's from both sides.
If two units are packaged together, remove the outer-most 4 x 4's from both sides and separate the pallets.

Proceed with assembling each unit separately.

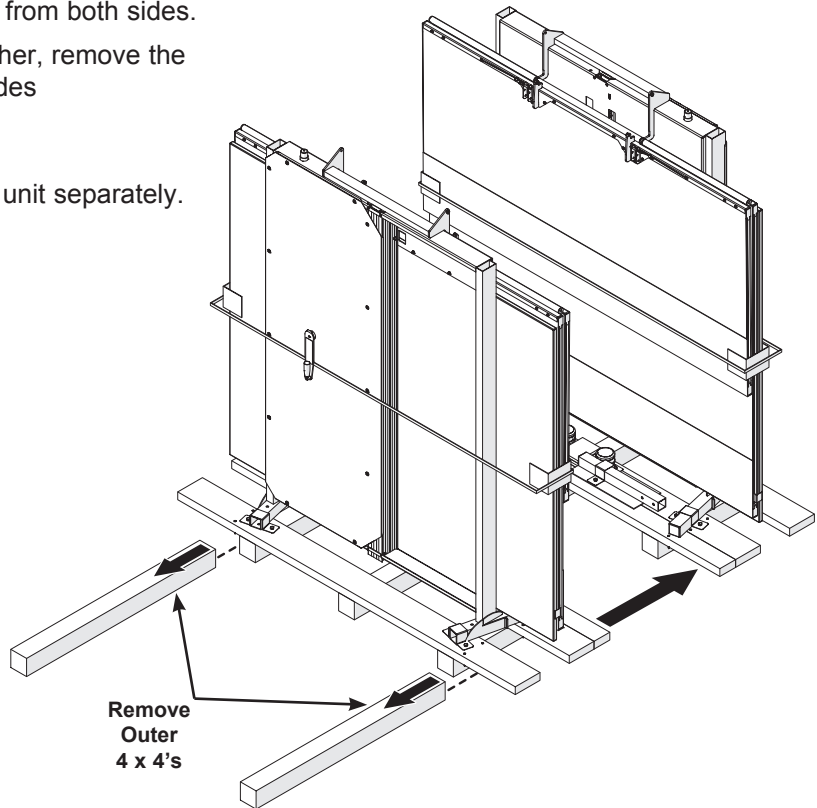


3. Unscrew and remove the two brackets that secure the two Plug-In Foot Assemblies to the pallet.
4. Unscrew and remove the remaining two brackets that secure the front side of the Shell to the pallet.

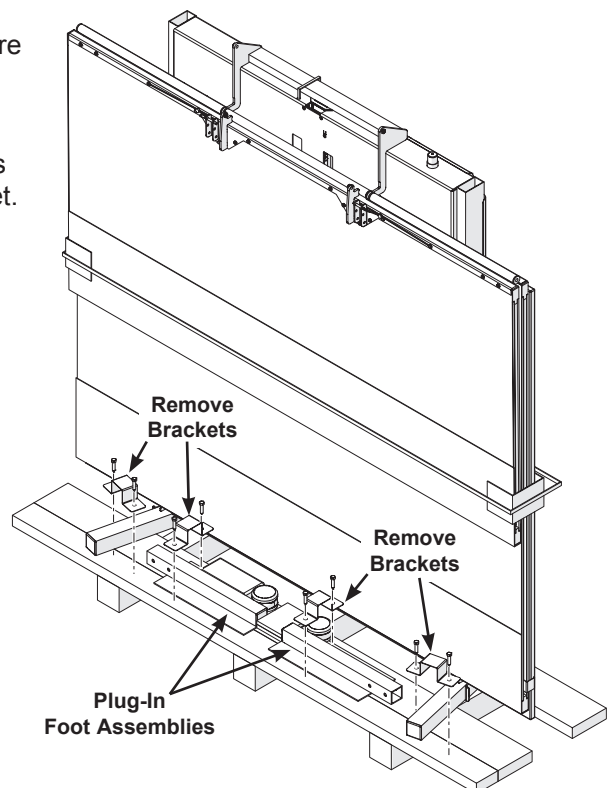


Assembly (continued)

5. Remove the two Plug-In Foot Assemblies and Hardware Bag. Set them aside.
6. Unscrew and discard the plywood squares from the pallet.

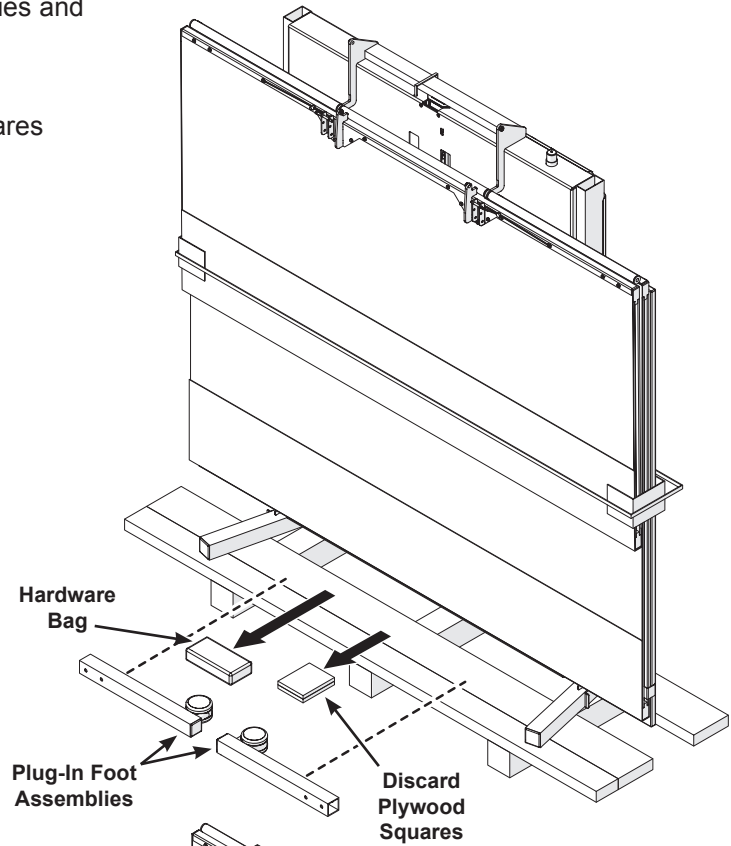


7. Unscrew and remove the remaining two brackets that secure the back side of the Shell to the pallet.

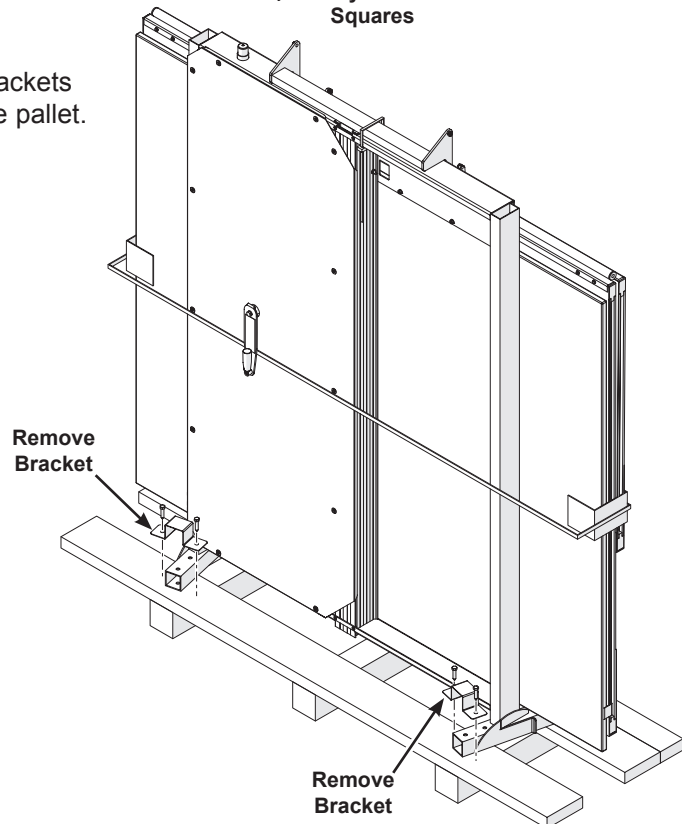

Assembly (continued)

- Slide the shell over until the closed side of both feet extend beyond the edge of the pallet.


Screw one Caster into the threaded hole on the underside of each foot end.

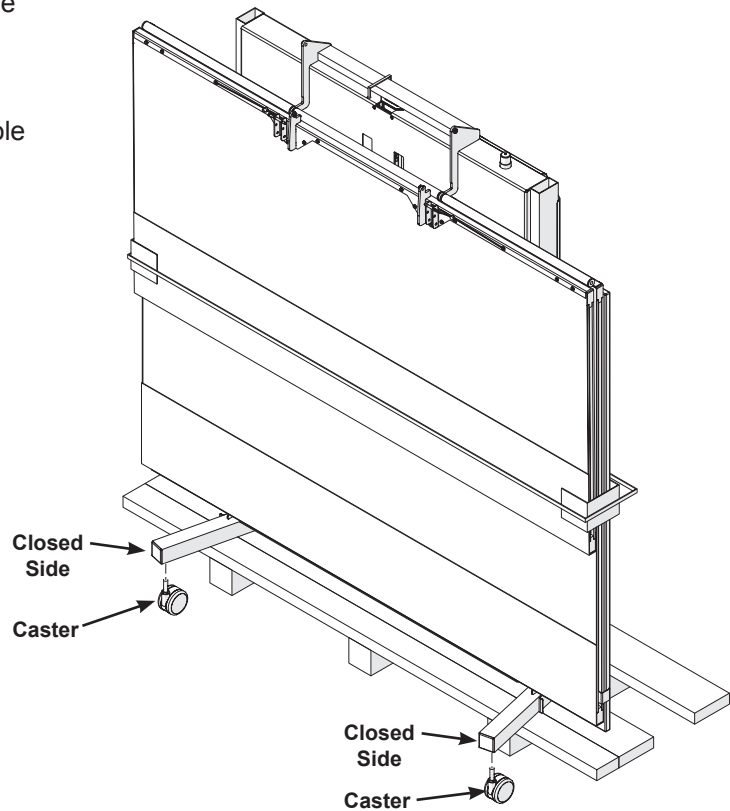

- Slide one Plug-In Foot Assembly into the open side of each foot end and align both sets of pre-drilled holes. For easier access, these holes should be positioned over the gap in the pallet boards as shown.


From the top, insert one 3/8-16 x 2-1/2" Capscrew (1) through each set of pre-drilled holes and secure at the bottom with a 3/8-16 Lock Nut (2).

Repeat on the other side for the remaining Plug-In Foot Assembly.

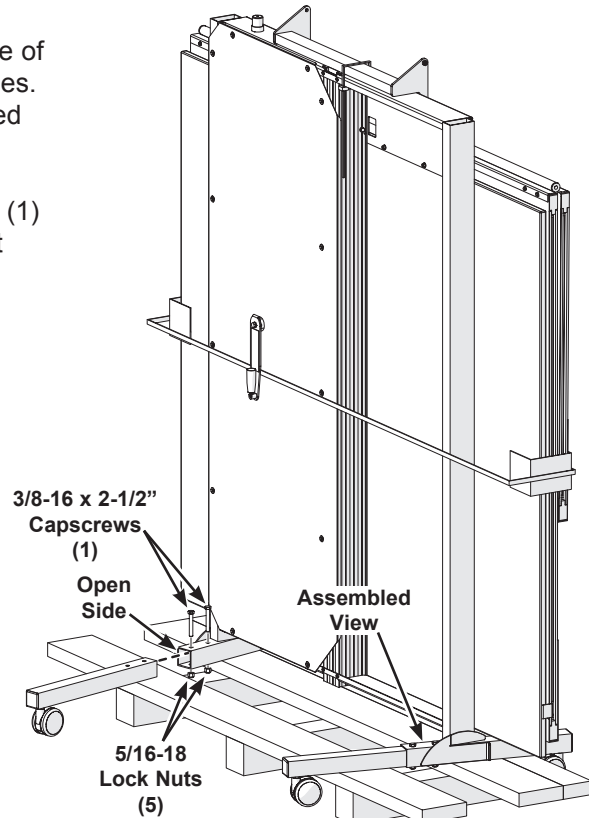

Assembly (continued)

10. Using more than one person, carefully slide the shell off of the pallet and onto the floor as shown.

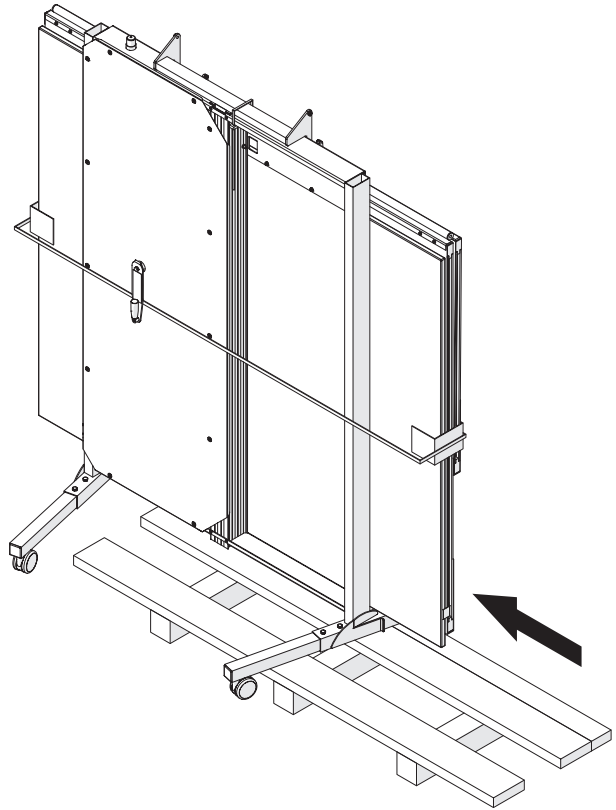

11. Remove any remaining plastic wrapping, banding, tape or packing.

