 




Your Performance Partner

# Assembly Instructions Move & Store Cart

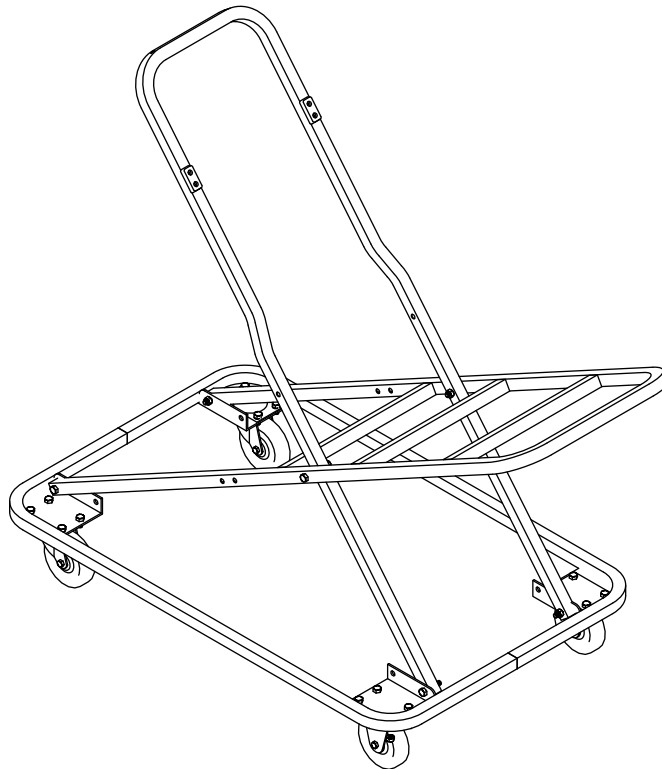

## CONTENTS

Safety Precautions . . . . .	2
Warranty . . . . .	2
Important User Information . . . . .	3
General . . . . .	3
Manufacturer . . . . .	3
Intended Use . . . . .	3
Required Tools . . . . .	4
Before Assembly . . . . .	4
Replacement parts List . . . . .	4
Fasteners . . . . .	4
Assembly . . . . .	5
Move & Store Cart Use . . . . .	8

Please read and understand these Assembly Instructions before working with or using the Move & Store Cart.

If you need additional information about the Move & Store Cart, contact Wenger Corporation using the information below.

# SAFETY PRECAUTIONS

---

Throughout this manual you may find **CAUTIONS** and **WARNINGS** which are defined as follows.

- **WARNING** means that failure to follow the instruction may result in serious injury or death.
- **CAUTION** means that failure to follow the instruction may result in serious injury or damage to property.

Read all of these safety instructions before setting up the Move & Store Cart components.

 <b>CAUTION</b>	 <b>CAUTION</b>	 <b>CAUTION</b>
<i>Make sure that anyone working on the Move &amp; Store Cart has read and understands this manual.</i>	<i>Failure to comply with Warnings and Cautions in this document can result in damage to property or serious injury.</i>	<i>Always observe and comply with the Warnings and Cautions posted on the system equipment.</i>

# WARRANTY

---

The Move & Store Cart is guaranteed free of defects in materials and workmanship for five full years.

Our guarantee assures you of either a full refund or repair or replacement of the defective materials or workmanship without charge, at the discretion of our Customer Service Department. Just call a Customer Service Representative at 1-800-887-7145 and state the reason you are dissatisfied. If a product return is necessary, your representative will issue a return authorization. This is your sole remedy for breach of this warranty.

Should you have a question or problem with any Wenger product, don't hesitate to call, even if the product is past warranty. It's important to us that all our customers be satisfied.

This is the sole warranty made by Wenger. Wenger disclaims all other warranties, including the warranties of merchantability and fitness for a particular purpose, as well as all liability for incidental, consequential, special, and indirect damage. Wenger liability for direct damages shall be limited to the amount you paid for the product involved. Wenger reserves the right to make product changes without obligation to incorporate such changes into products previously sold.

Some states do not allow the exclusion or limitation of damages or warranties, so the above may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

# IMPORTANT USER INFORMATION

---

## GENERAL

Copyright® 2007 by Wenger Corporation

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, unless it is for the purchaser's personal use.

Printed and bound in the United States of America.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Wenger Corporation. Wenger Corporation does not assume any responsibility for any errors that may appear in this manual.

In no event will Wenger Corporation be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of this manual.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when assembling or installing Wenger Corporation products. If any questions or problems arise, call Wenger Corporation at 1-800-733-0393.

 
## MANUFACTURER

The Move & Store Cart is manufactured by:

Wenger Corporation  
555 Park Drive  
Owatonna, MN 55060  
1-507-455-4100 • 1-800-733-0393  
[www.wengercorp.com](http://www.wengercorp.com)

## INTENDED USE


- This product is designed to transport and store Wenger Playright™, Student & Musician, Cello or Nota™ Chairs depending on how it is assembled.

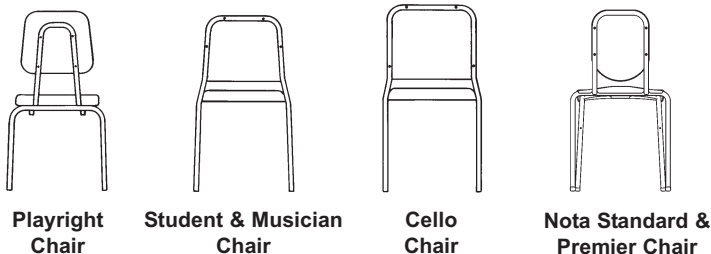

- This product is intended for indoor use in normal ambient temperature and humidity conditions — it must not be exposed to prolonged outside weather conditions.
- This product is intended to be assembled only as described in these instructions.

# REQUIRED TOOLS

The following tools must be available to assemble the Move & Store Cart:

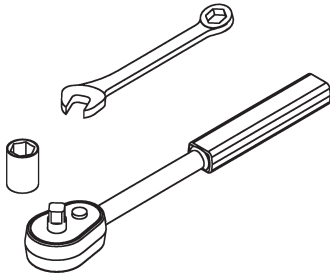

1/2" Combination Wrench and Ratchet with 1/2" Socket




Phillips Screwdriver

# BEFORE ASSEMBLY

Remove all items from the shipping carton, and lay them out approximately in their final position. Refer to the exploded-view drawing below.


# REPLACEMENT PARTS LIST

Item	Description	Qty.
1	Frame	1
2	Tube, inside	1
3	Bumper	2
4	Screw, drill/tap, #6 x 1/2"	4
5	Capscrew, 5/16-18 x 2 1/4"	2
6	Tube, outside	1
7	Capscrew, 5/16-18 x 5/8"	16
8	Caster, nonswivel	2
9	Capscrew, 5/16-18 x 1 1/2"	4
10	Lock Nut, 5/16-18	24
11	Caster, swivel	2
12	Velcro, 7/8 x 14"	3

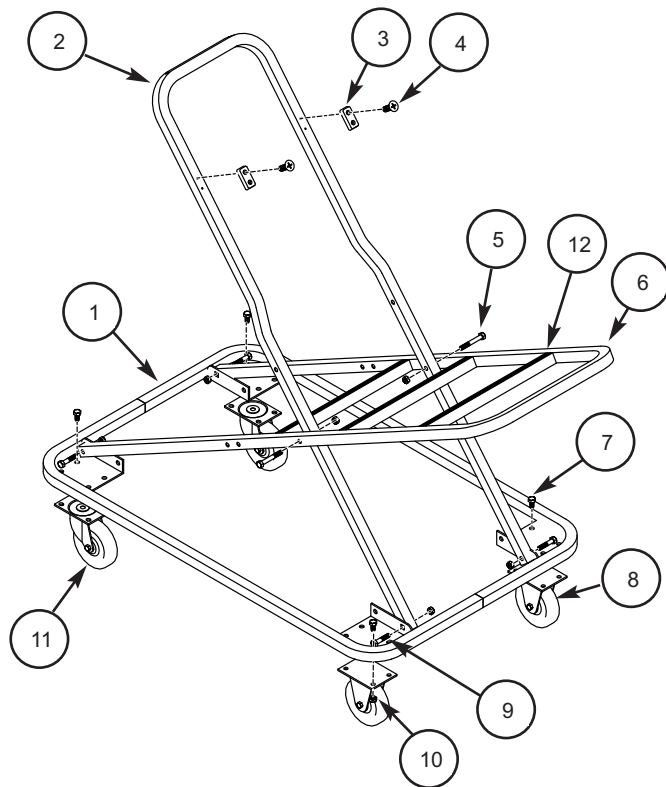


**Nota Chair Truck Shown.**  
Refer to the drawings on the following pages for appropriate holes to use.

# FASTENERS

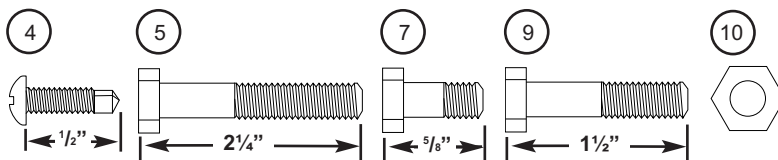

# ASSEMBLY


1. Install the two Swivel Casters at one end of the Frame using four  $\frac{5}{16}$ -18 x  $\frac{5}{8}$ " Capscrews and Lock Nuts in each.
2. Install the two Nonswivel Casters at the other end using four  $\frac{5}{16}$ -18 x  $\frac{5}{8}$ " Capscrews and Lock Nuts in each.

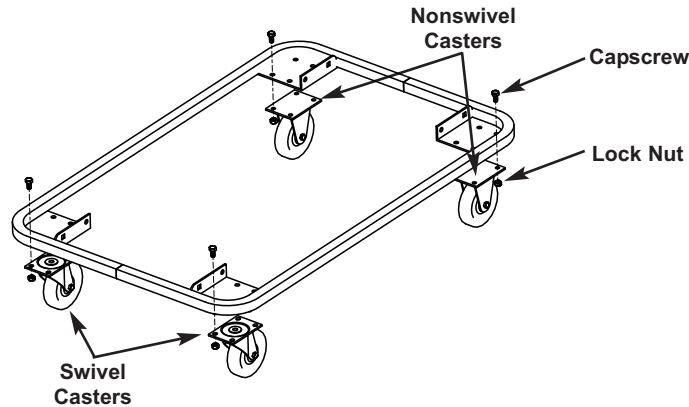

3. Attach the Inside Tube to the Frame.



**Nota Cart:**

Attach the Inside Tube to the inside of the Frame at the Swivel Caster end using two  $\frac{5}{16}$ -18 x  $1\frac{1}{2}$ " Capscrews and Lock Nuts. The Capscrews are inserted from the outside of the Frame, see "Replacement Parts List" on page 4 for clarification. Be sure to use the proper holes for the Nota chair, see the illustration below.

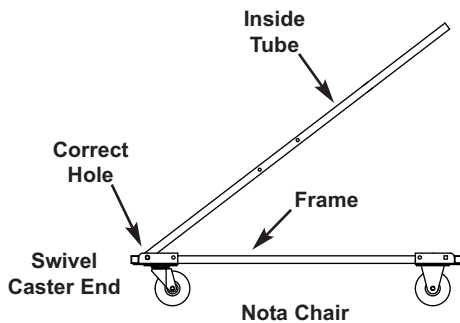

**All other Carts:**

Attach the Inside Tube to the inside of the Frame at the Nonswivel Caster end using two  $\frac{5}{16}$ -18 x  $1\frac{1}{2}$ " Capscrews and Lock Nuts. The Capscrews are inserted from the outside of the Frame, see "Replacement Parts List" on page 4 for clarification. Be sure to use the proper holes for the intended chair model, see the illustrations below.

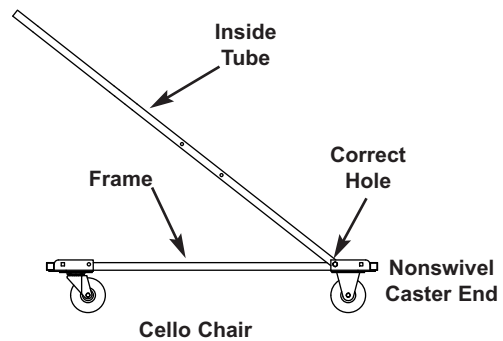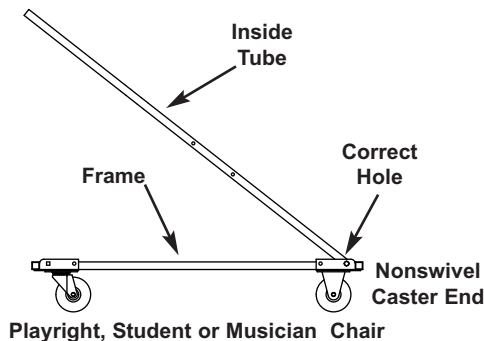

**NOTE:** If unsure about which chair model is being used, refer to the illustrations on page 3.


# ASSEMBLY CONTINUED

---

4. Attach the Outside Tube to the Frame at the other end.

**Nota Cart:**


With the velcro side facing up, attach the Outside Tube to the outside of the Frame at the other end (Nonswivel Caster end) using two  $\frac{5}{16}$ -18 x 1 $\frac{1}{2}$ " Capscrews and Lock Nuts. The Capscrews are inserted from the outside of the Frame, see "Replacement Parts List" on page 4 for clarification. Be sure to use the proper holes for the Nota chair, see the illustration below.

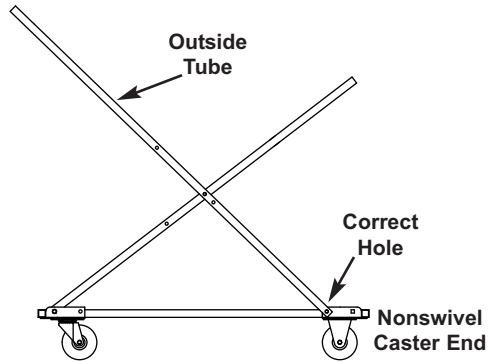


Nota Chair

**All other Carts:**


With the velcro side facing up, attach the Outside Tube to the outside of the Frame at the other end (Swivel Caster end) using two  $\frac{5}{16}$ -18 x 1 $\frac{1}{2}$ " Capscrews and Lock Nuts. The Capscrews are inserted from the outside of the Frame, see "Replacement Parts List" on page 4 for clarification. Be sure to use the proper holes for the intended chair model, see the illustrations below.

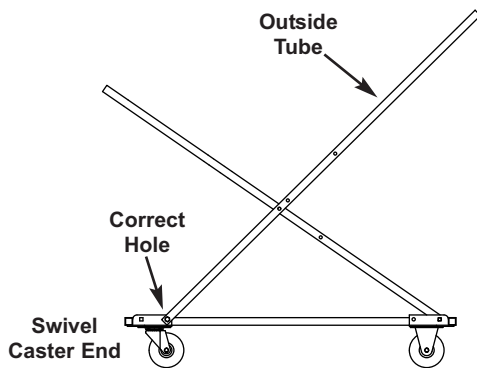

Playright Chair

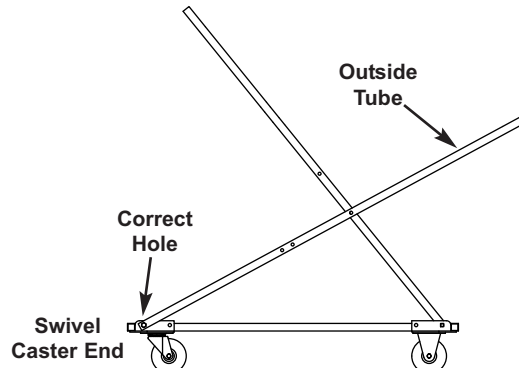

Student and Musician Chair

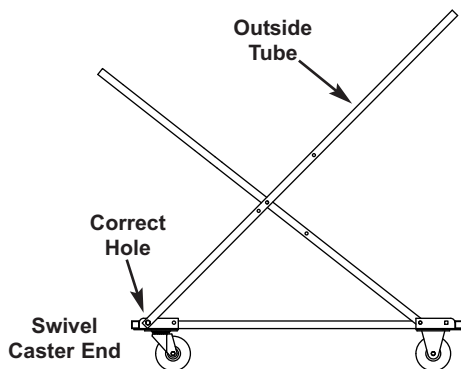


Cello Chair


## ASSEMBLY CONTINUED

---

5. Attach the Inside and Outside tubes together using two 2<sup>1</sup>/<sub>4</sub>" Capscrews and Lock Nuts. The Capscrews are inserted from the outside of the Frame, see "Replacement Parts List" on page 4 for clarification.. Be sure to use the proper holes for the intended chair model, see the illustrations below.

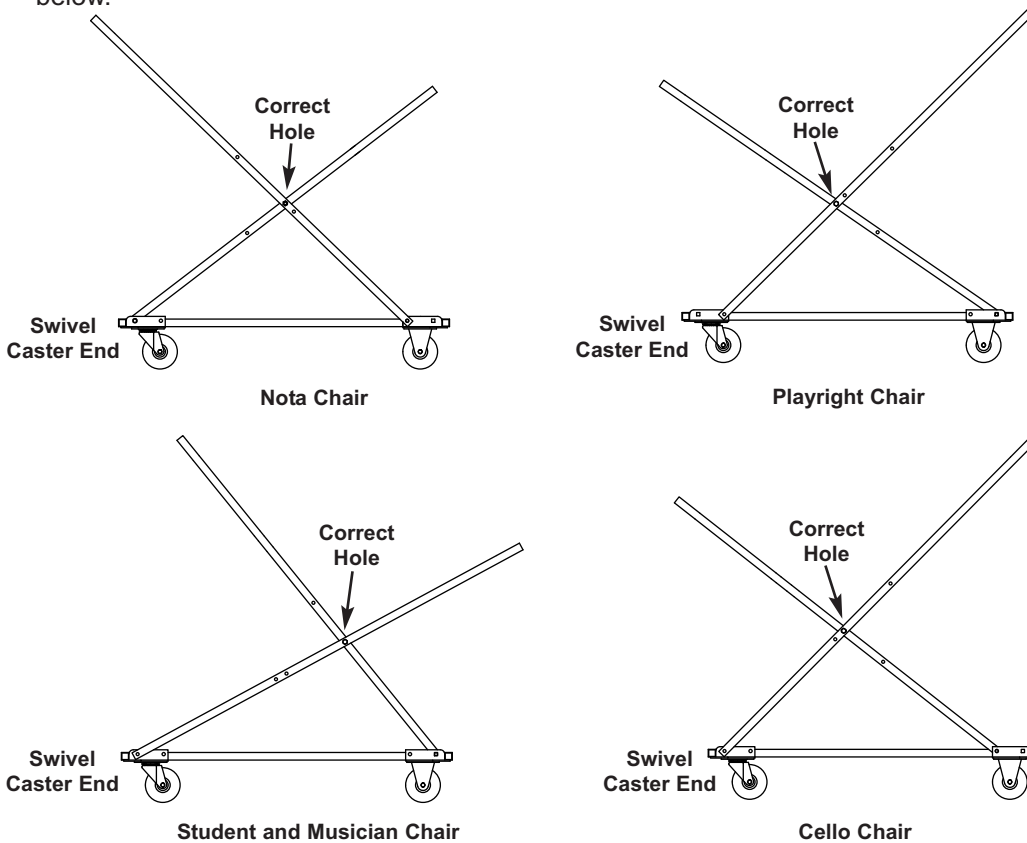

6. Attach the two Bumpers to the Inside tubes using two #6 x 1/2" Screws in each.

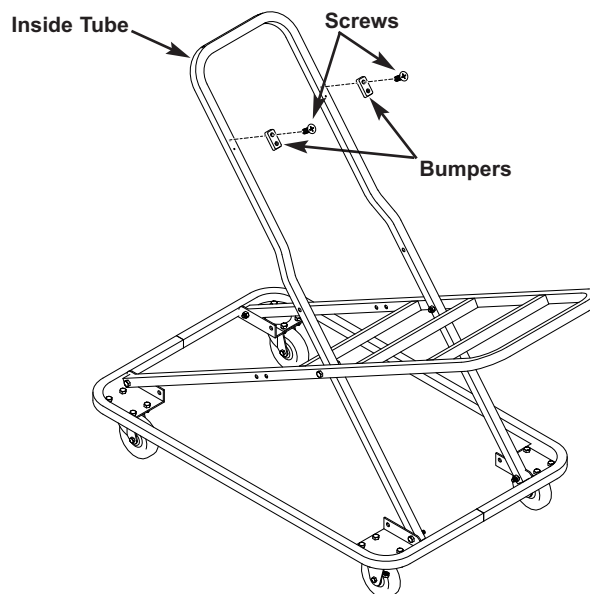

7. Be sure that all Capscrews and Locknuts are tightened securely before using the Move & Store Cart.
-

# MOVE & STORE CART USE

The following decal should be located on the top side of one of the Casters. It shows the recommended quantities and positions for chairs on the cart.

