

## CONTENTS

|                                  |   |  |   |
|----------------------------------|---|--|---|
| Important User Information ..... | 2 | Before You Begin .....                 | 3 |
| General .....                    | 2 | Installing the Instrument Decals ..... | 3 |
| Manufacturer .....               | 2 |  |   |
| Intended Use .....               | 2 |  |   |
| Warranty .....                   | 2 |  |   |

- Note:** Please read and understand these instructions before assembling the parts.
- Note:** Remove all items from the shipping cartons and arrange them in a convenient location. Refer to the illustrations on the following pages. If you need additional information, contact Wenger Corporation using the information below.

# **IMPORTANT USER INFORMATION**

---

## **GENERAL**

Copyright © 2012 by Wenger Corporation

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, unless it is for the purchaser's personal use.

Printed and bound in the United States of America.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Wenger Corporation. Wenger Corporation does not assume any responsibility for any errors that may appear in this manual.

In no event will Wenger Corporation be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of this manual.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when assembling or installing Wenger Corporation products. If any questions or problems arise, call Wenger Corporation at 1-800-887-7145.

## **MANUFACTURER**

The Music Sorting Rack are manufactured by:

Wenger Corporation  
555 Park Drive  
Owatonna, MN 55060  
1-800-4WENGER (493-6437) • 1-507-455-4100  
www.wengercorp.com

## **INTENDED USE**

- This product is intended for indoor use in normal ambient temperature and humidity conditions — it must not be exposed to prolonged outside weather conditions.
- This product is intended to be assembled and used only as described in these instructions.

## **WARRANTY**

These products are guaranteed free of defects in materials and workmanship for ten full years from date of shipment. A full warranty statement is available upon request.

## BEFORE YOU BEGIN


---

- Read the complete assembly procedure before you begin.
- The Music Sorting Rack is shipped almost entirely assembled, attach the few remaining components as outlined in these instructions.

## INSTALLING THE INSTRUMENT DECALS

---

1. Remove the instrument labels from the decal sheet and apply the decals in the desired sorting order.
2. Blank labels may be marked and applied as desired for other instruments.

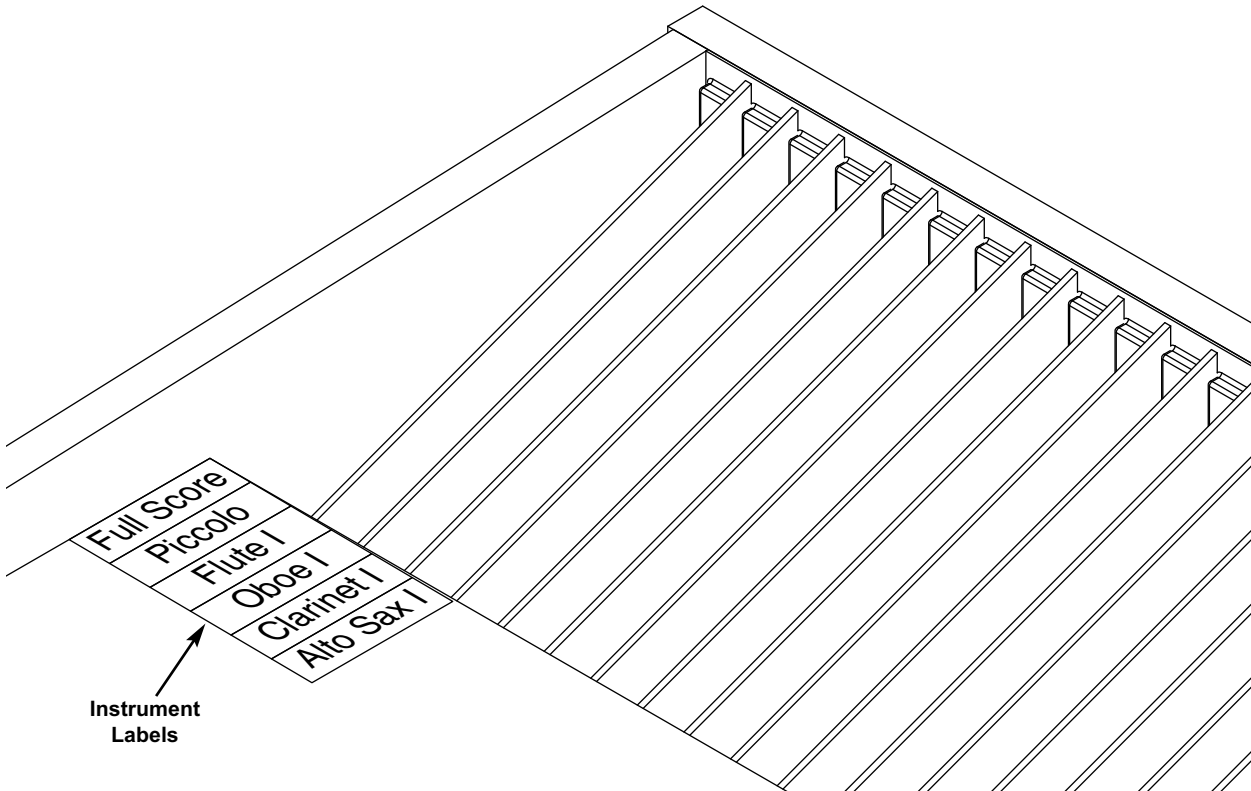

This page is intentionally blank.