



Assembly Instructions

Backdrop Accessory for StageTek® Staging System


Basic Instructions only!
For more detailed product information, refer to the StageTek Staging System Owner's Manual 280A099.

CAUTION

Make sure anyone assembling or installing StageTek components has read and understands the instructions.

CAUTION

Always comply with Warnings or Cautions in the instructions or posted on the equipment.

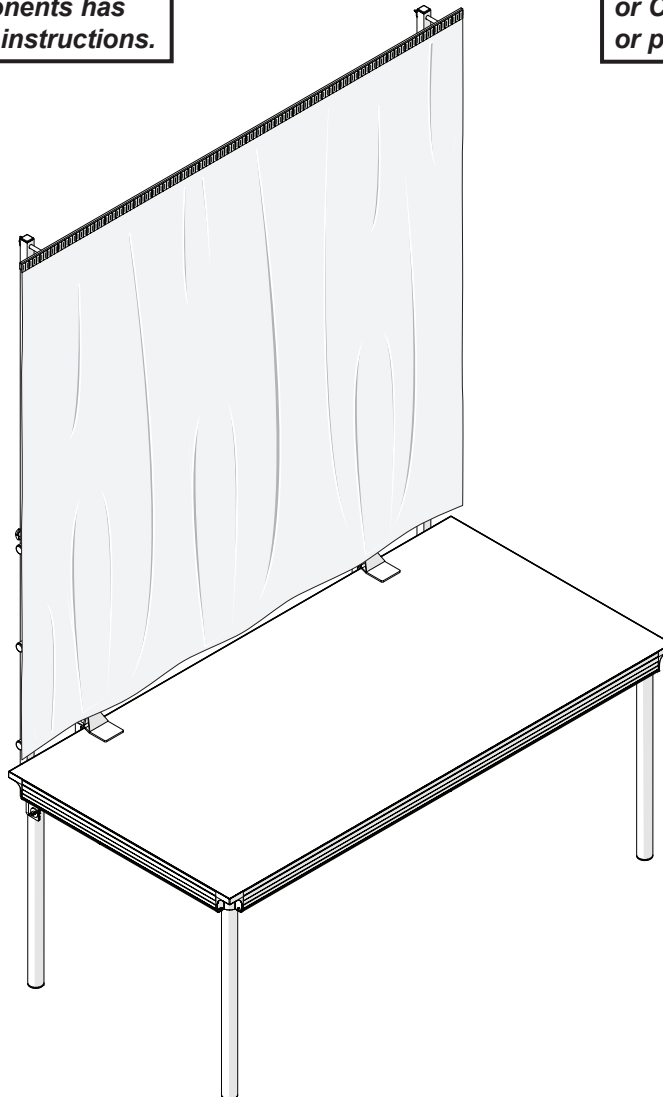

Visit the StageTek Staging System web page at wengercorp.com for more information.

Note: Please read and understand these instructions before assembling or setting up.
Note: If you need additional information, contact Wenger Corporation using the information below.


Getting Started

Before beginning the backdrop kit assembly, note the following considerations:


- The backdrop kit must be used along with the guardrail accessory (not included).
- The backdrop kit is available in 3', 4', 6' and 8' (914, 1219, 1829 and 2438 mm) standard widths and supports 8' (2438 mm) tall drapery.
- Drapery is shipped separately from the supplier.
- A 9/16" wrench is required for assembly.
- Backdrops cannot be used on adjacent sides of a deck if already used on the back side of the deck due to corner clearances.

Assembly


1. Attach a leg clamp assembly to both of the uprights with one 3/8-16 x 4" capscrew and 3/8-16 lock nut using a 9/16" wrench as shown.
Face both leg clamp assemblies outward, creating a right-hand upright and a left-hand upright.
2. Screw a knob into both of the uprights as show.
The knob only needs to be screwed in far enough to hold it in place.

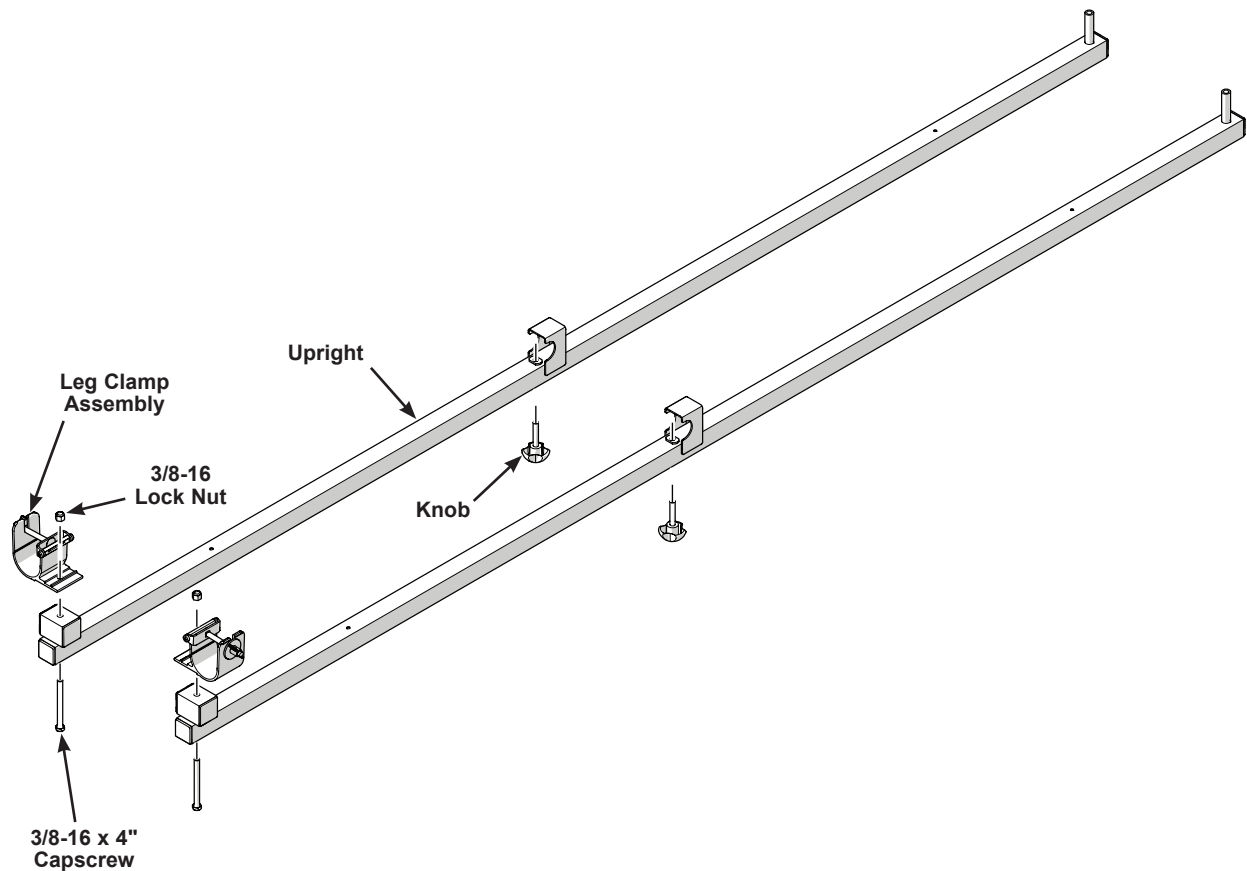

3. Attach both uprights to the guardrail assembly and platform deck.
 - a. The guardrail assembly must be centered on the platform deck and properly attached.
 - b. With the wing nut on the leg clamp assembly facing toward the outside, fit the cut-out weldment of the upright over the top rail and rotate it downward.
 - c. Secure the leg clamp assembly to the rear leg of the platform deck.
 - d. Hand-tighten the knob on the upright to secure it to the top rail.

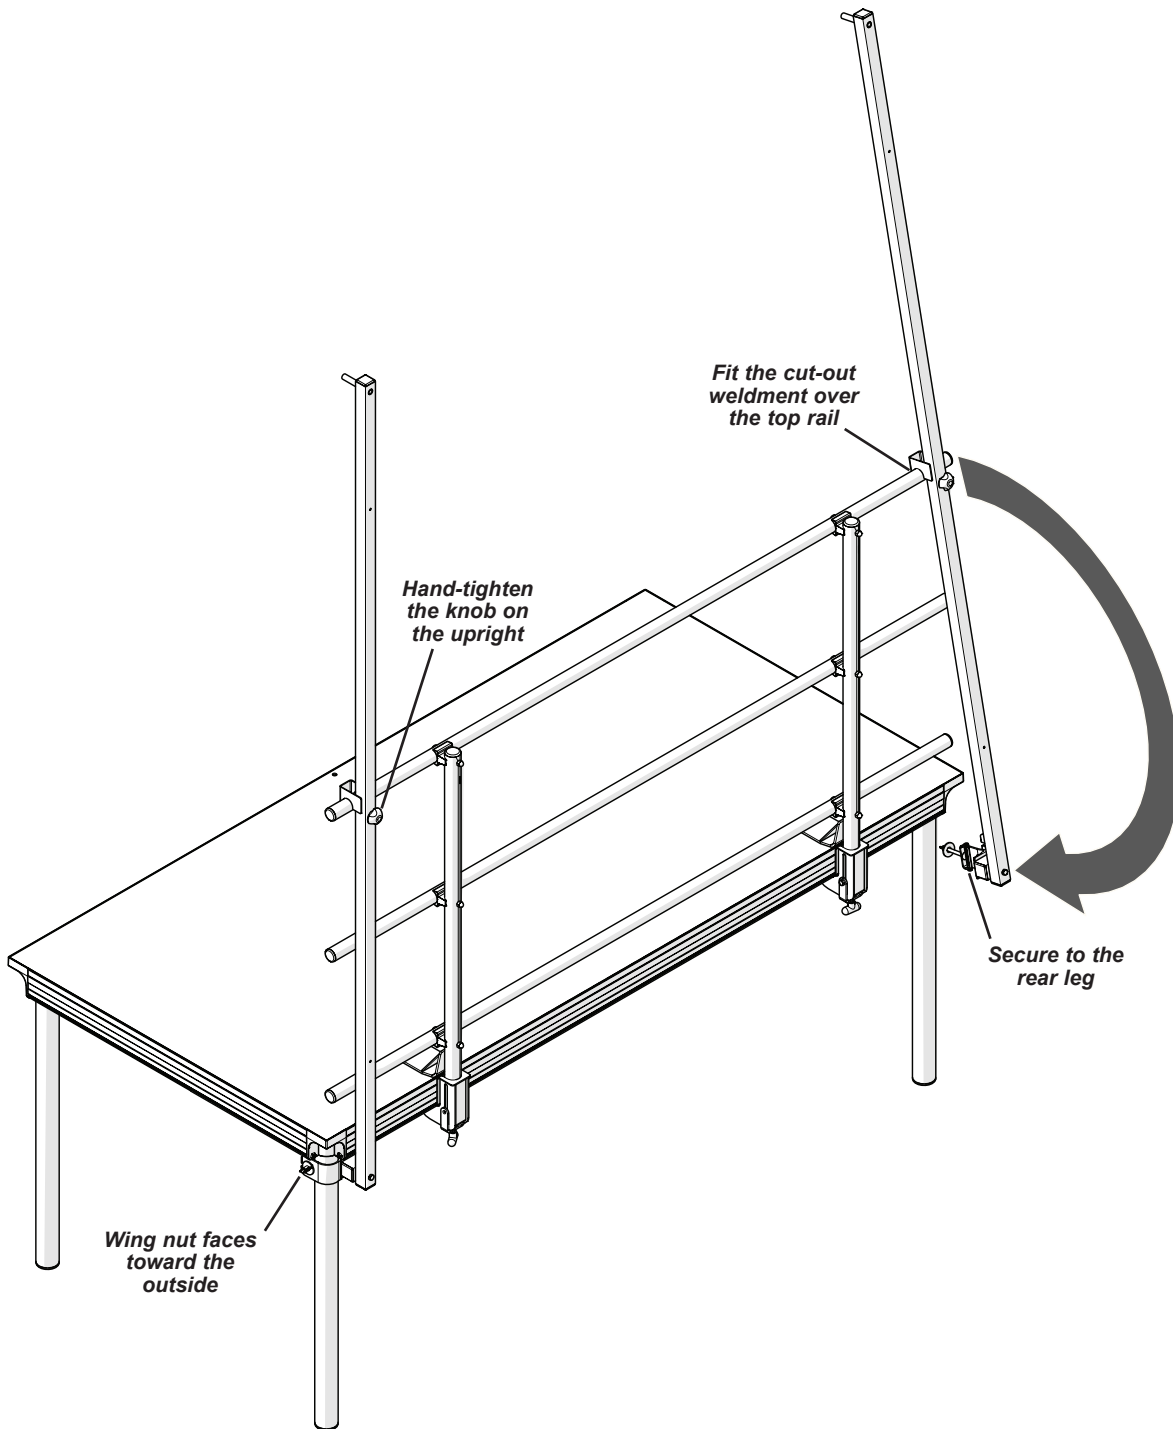

4. With the hook and loop surface facing the platform deck side, attach the horizontal bar to the top of both uprights using two 3/8-16 x 5" capscrews and 3/8-16 wing nuts.

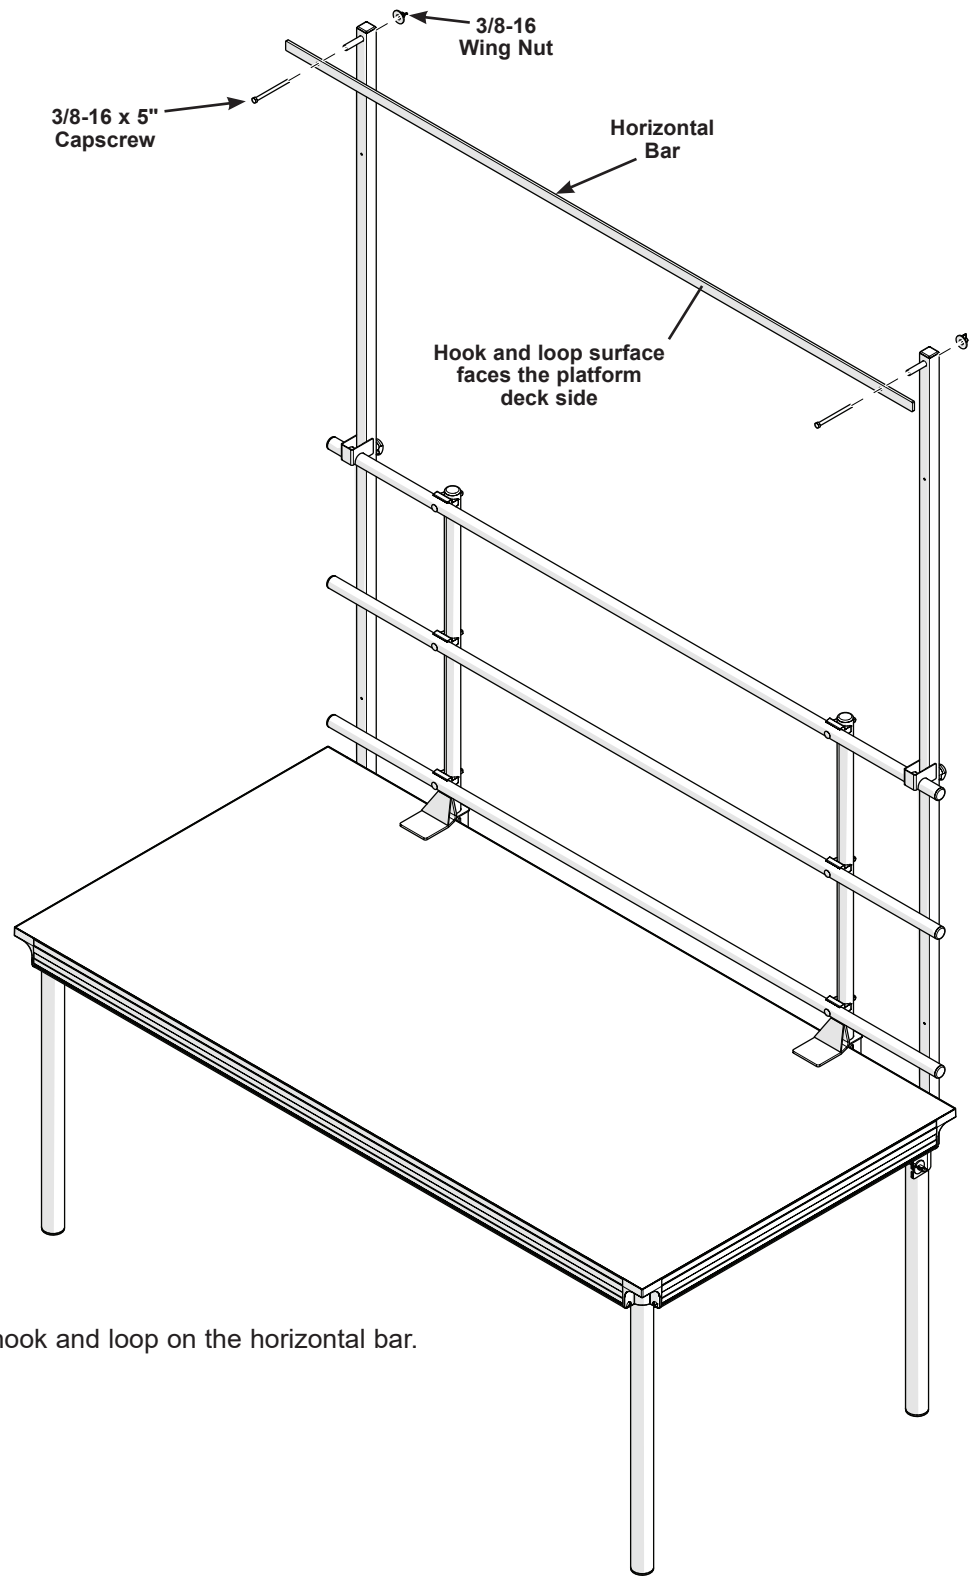

5. Attach the drapery to the hook and loop on the horizontal bar.