



Assembly Instructions

Chair Clamp Accessory for StageTek® Staging System


Basic Instructions to be used with Wenger Portable Audience Chairs only!
For more detailed product information, refer to the
StageTek Staging System Owner's Manual 280A099.

CAUTION

Make sure anyone assembling or installing StageTek components has read and understands the instructions.

CAUTION

Always comply with Warnings or Cautions in the instructions or posted on the equipment.

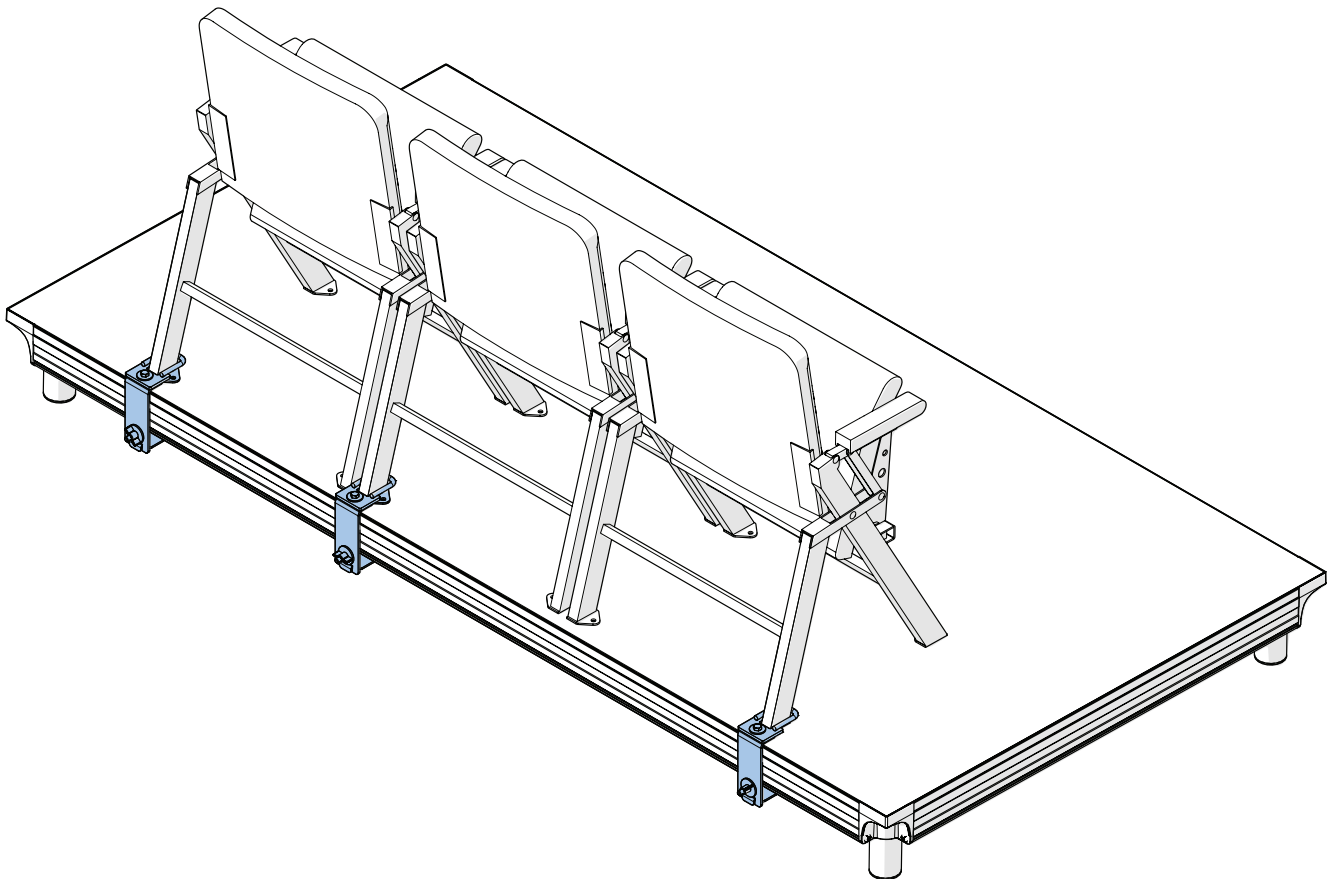


Visit the StageTek Staging System web page at wengercorp.com for more information.


Note: Please read and understand these instructions before assembling or setting up.

Note: If you need additional information, contact Wenger Corporation using the information below.


1. Hold an audience chair clamp flat against the outside frame of the StageTek deck.
2. Slide a chair stop connect into the slot at the bottom of the audience chair clamp and tilt it up onto the lip on the inside frame.

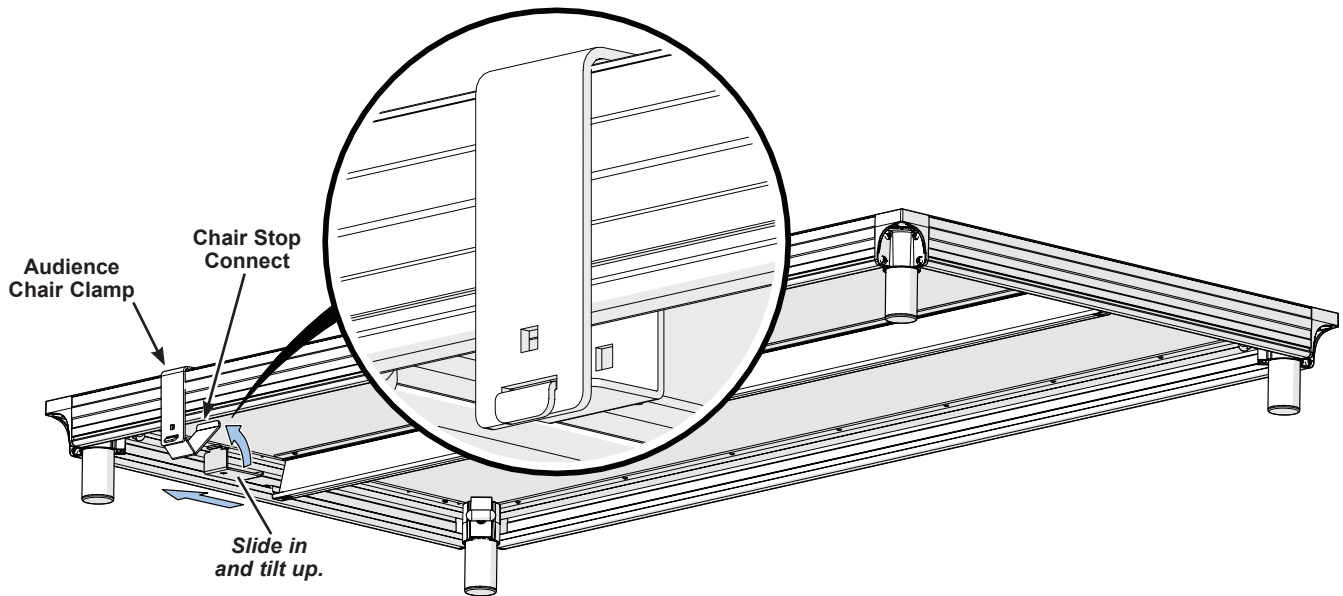


3. Secure together using a 3/8-16 x 3" carriage bolt and a 3/8-16 wing nut. Leave the connection loose enough to allow the location to be adjusted from side to side.

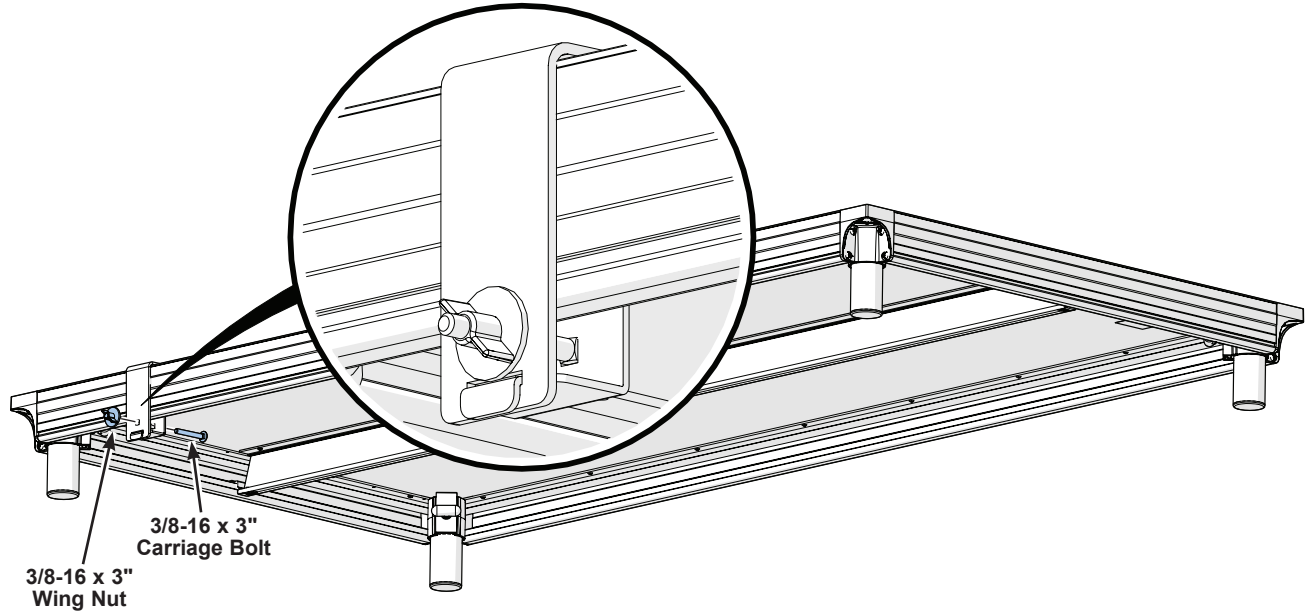



4. Position a portable audience chair on the StageTek deck and place an upper half clamp onto the rear leg as shown.
 - a. With the slotted hole at the rear, rotate the clamp to fit over the tab on the chair leg.
 - b. Lay the clamp flat on the tab.

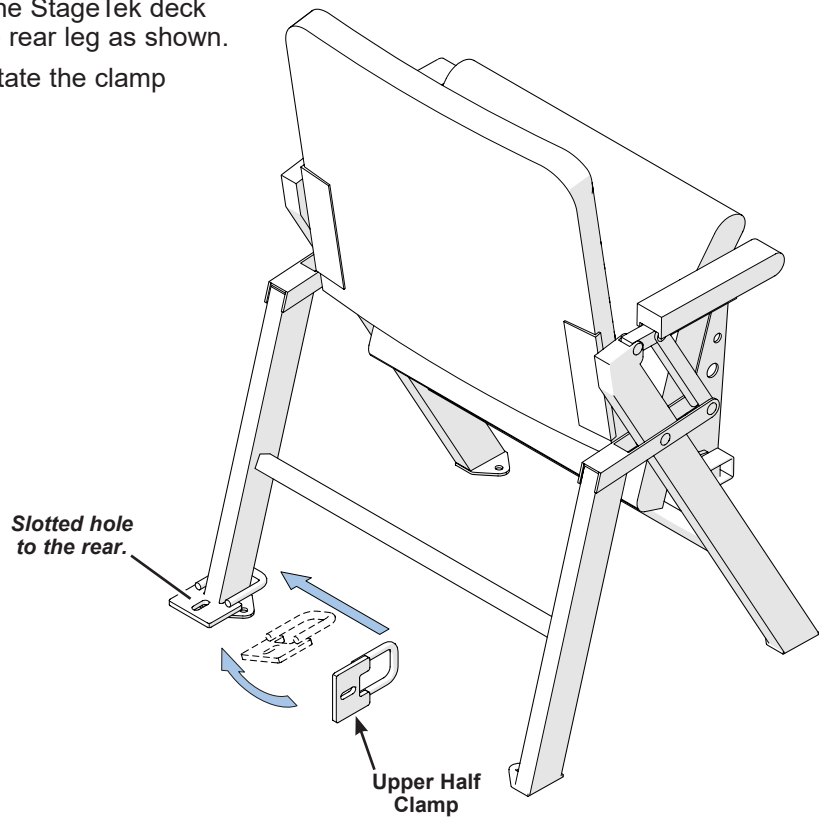

5. Attach the upper half clamp to the audience chair clamp using a 3/8 x 1-1/4" OD flat washer and a 3/8-16 x 3/4" capscrew.

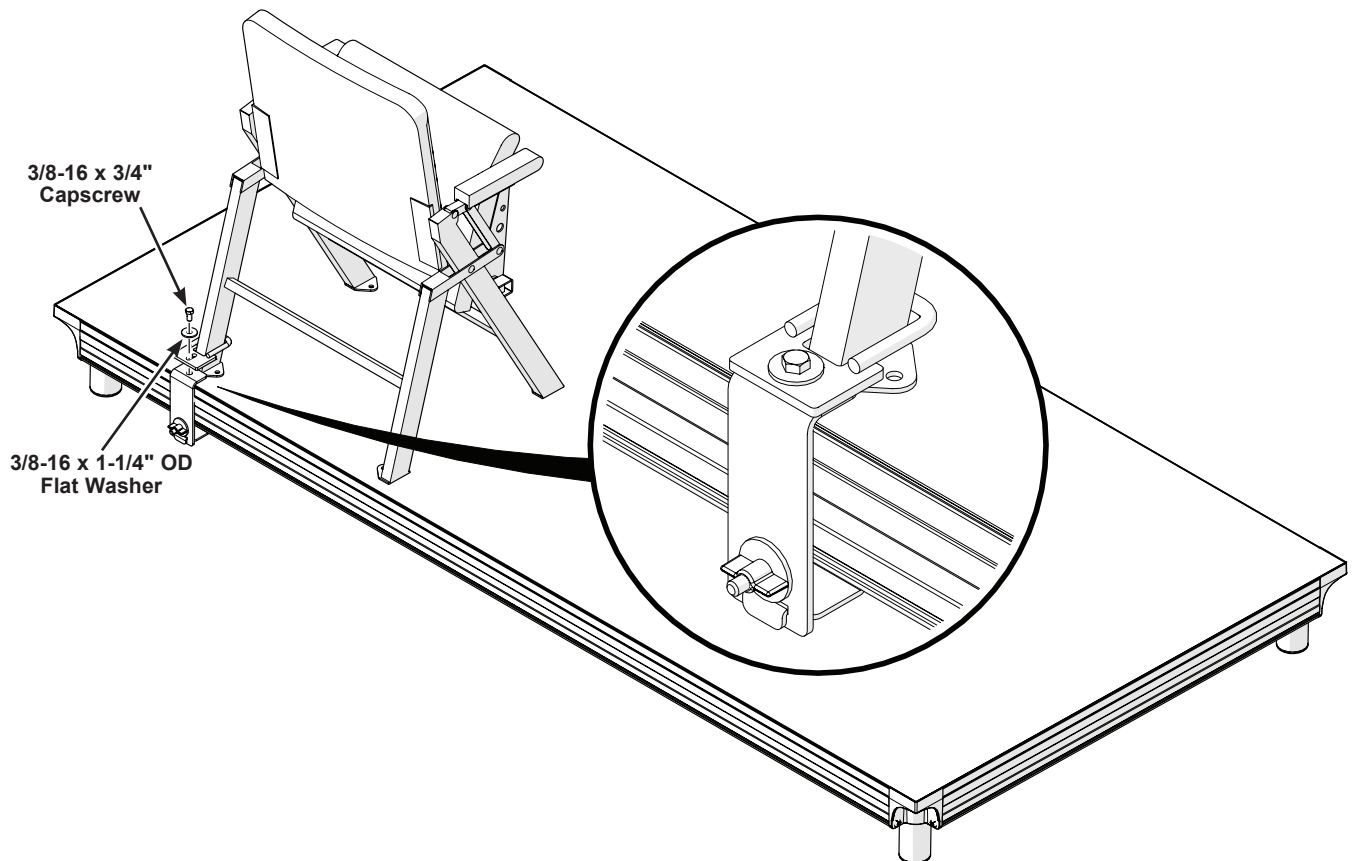

6. Position the chair in its final location and tighten the wing nut snug.
Do not over tighten!

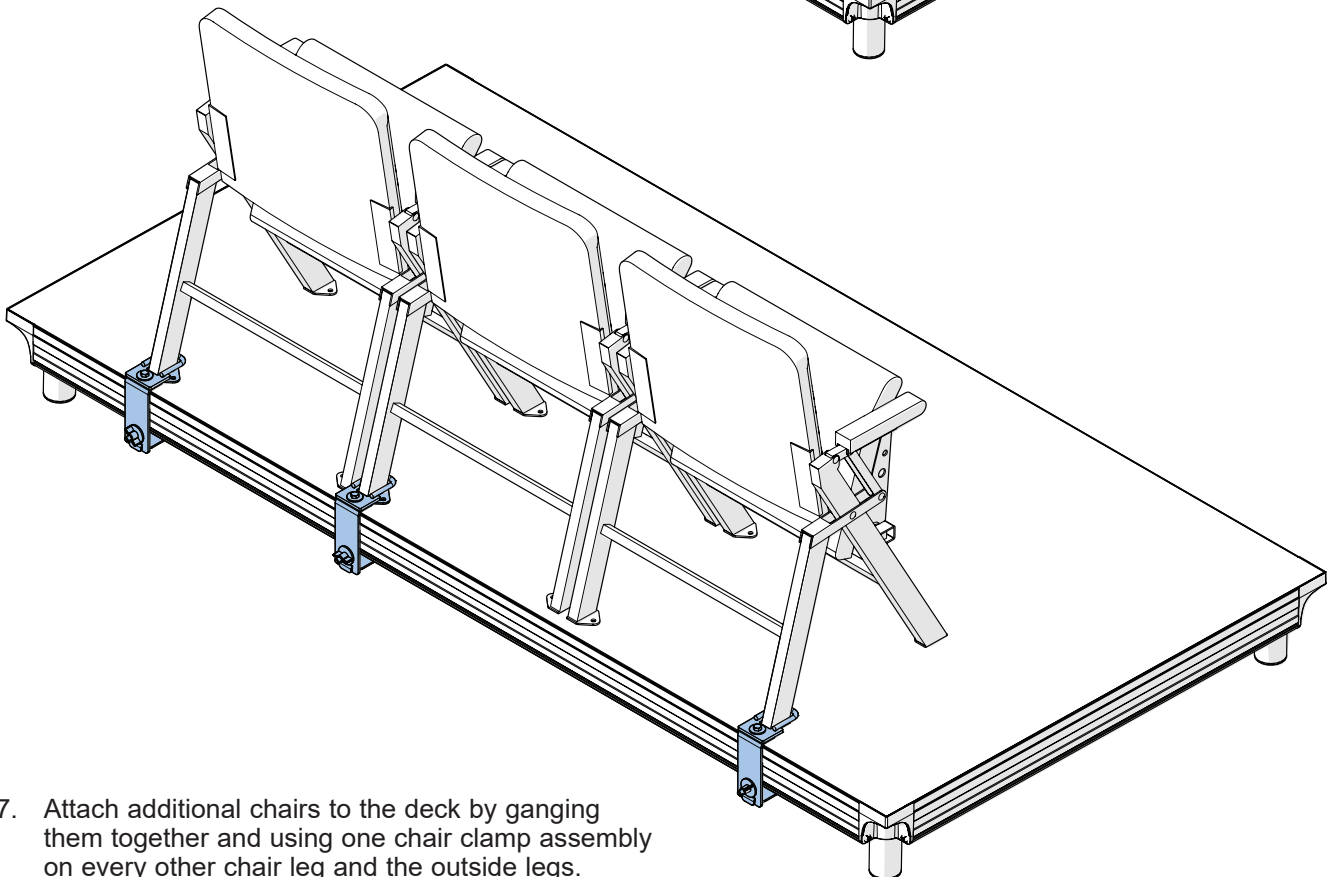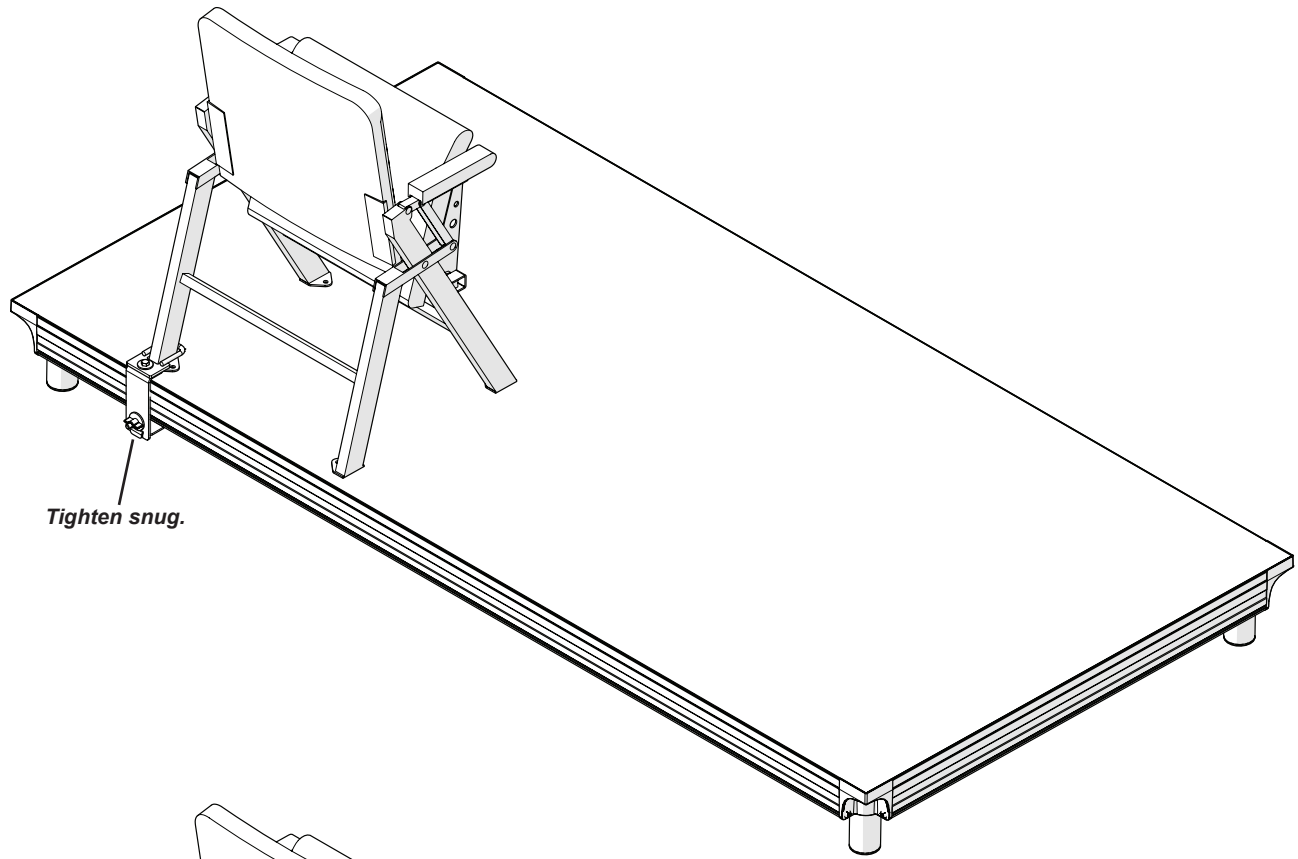

7. Attach additional chairs to the deck by ganging them together and using one chair clamp assembly on every other chair leg and the outside legs.