




Your Performance Partner

Assembly Instructions StageTek™ Roll-A-Deck® Accessory

Basic Instructions only!
For Replacement Parts and more detailed product information,
refer to the StageTek™ Owner's Manual 280A099.

⚠ CAUTION
Make sure anyone assembling or installing the StageTek component has read and understands the instructions.

⚠ CAUTION
Always comply with Warnings or Cautions in the instructions or posted on the equipment.

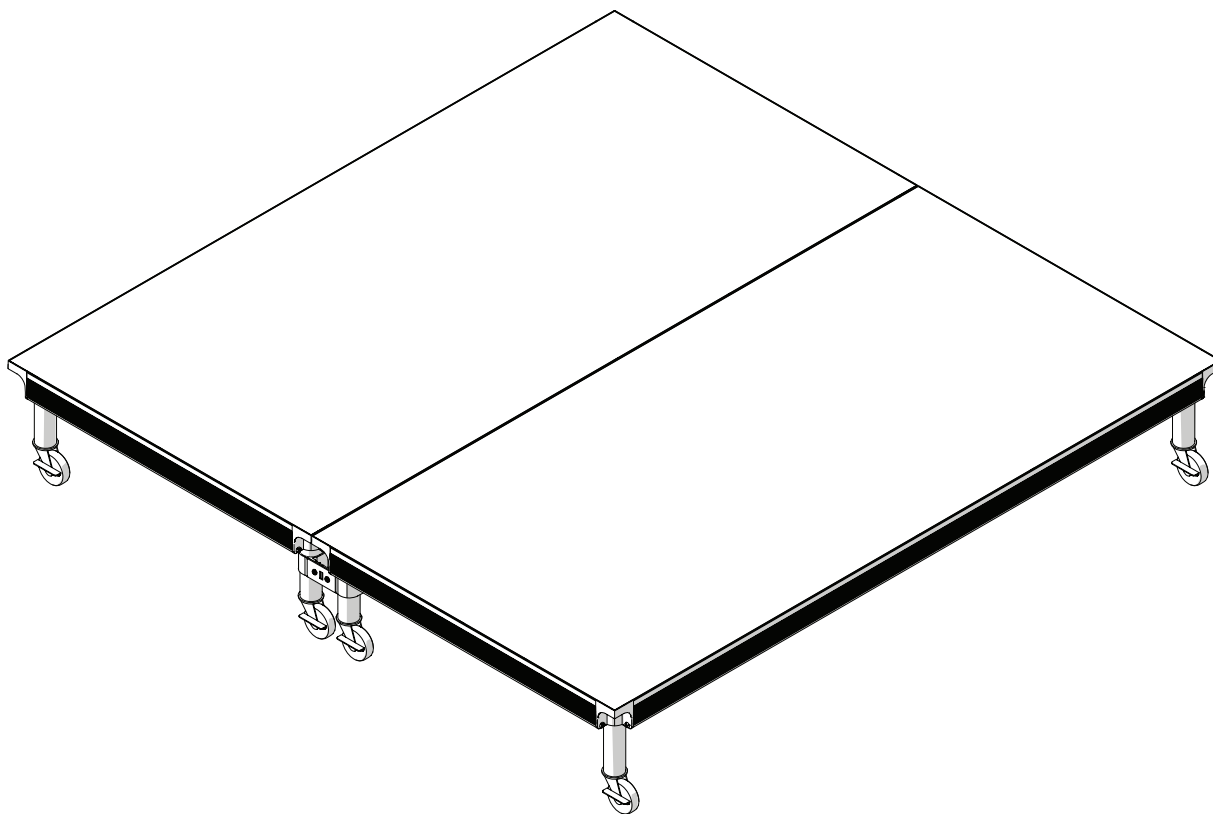


Visit the StageTek web page at www.wengercorp.com for detailed instructions and videos.

Note: Please read and understand the instructions before starting the assembly or installation.
Note: If you need additional information, contact Wenger Corporation using the information below.

1. Lay the Roll-A-Deck upside down on a clean surface.
2. Attach the Casters.
 - a. Insert the Casters all of the way into each of the Pocket Assemblies.
 - b. Secure each Caster by hand tightening the Knob on every Pocket Assembly. No tools are required.
 - c. Turn the Roll-A-Deck over onto the Casters.

⚠ WARNING
The deck can be unstable if the Casters are not properly attached.

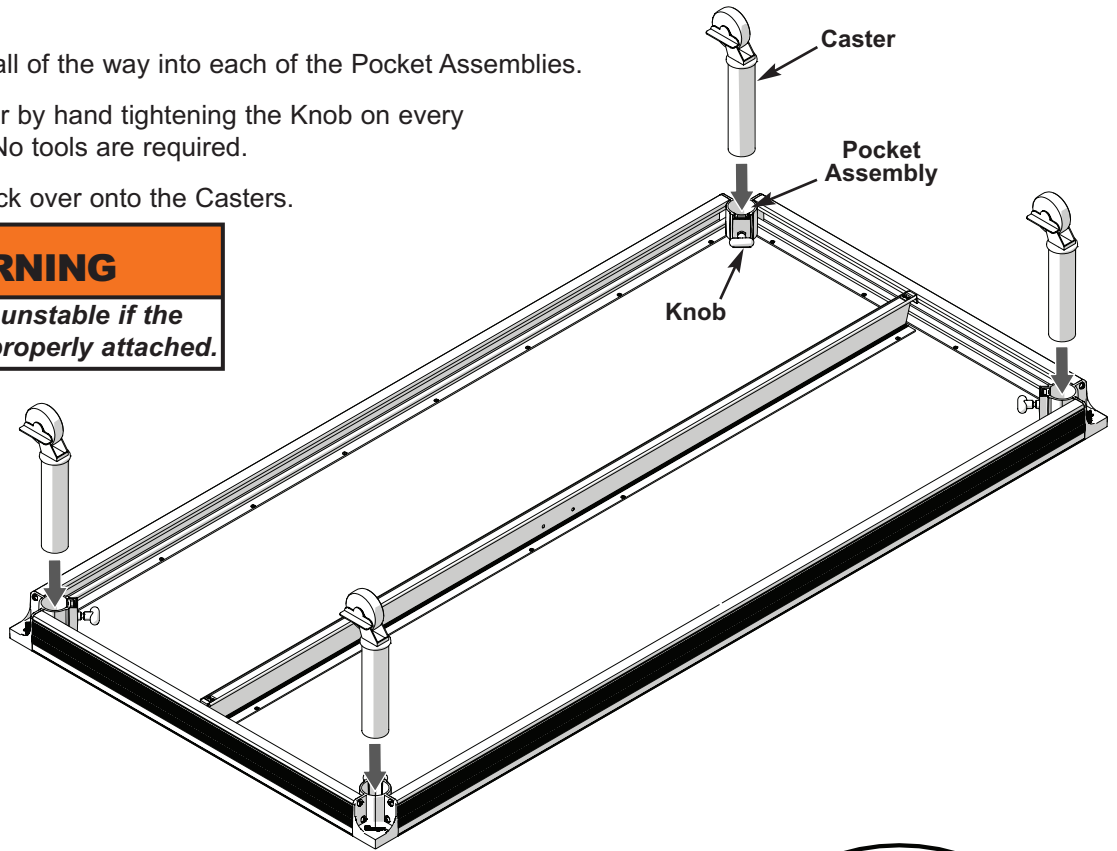

Multiple Roll-A-Decks can be connected together.

1. **For best stability, attach Connectors as high up on the Caster as possible.**
2. With the flat side facing out, fit the Connector over adjacent Casters.
3. Attach the Connector to each Caster by closing the Bolt and securing with a Wing Nut.

