



Assembly Instructions

Stabilizer Brace Accessory for StageTek® Staging System

Basic Instructions only!
For more detailed product information, refer to the StageTek Staging System Owner's Manual 280A099.

⚠ CAUTION

Make sure anyone assembling or installing StageTek components has read and understands the instructions.

⚠ CAUTION


Always comply with Warnings or Cautions in the instructions or posted on the equipment.

⚠ CAUTION

For instances where the deck height is 40" (1016 mm) or more, stabilizer braces must be used.

⚠ CAUTION

Stabilizer braces longer than 96" (2438 mm) must be used as an "X" brace.

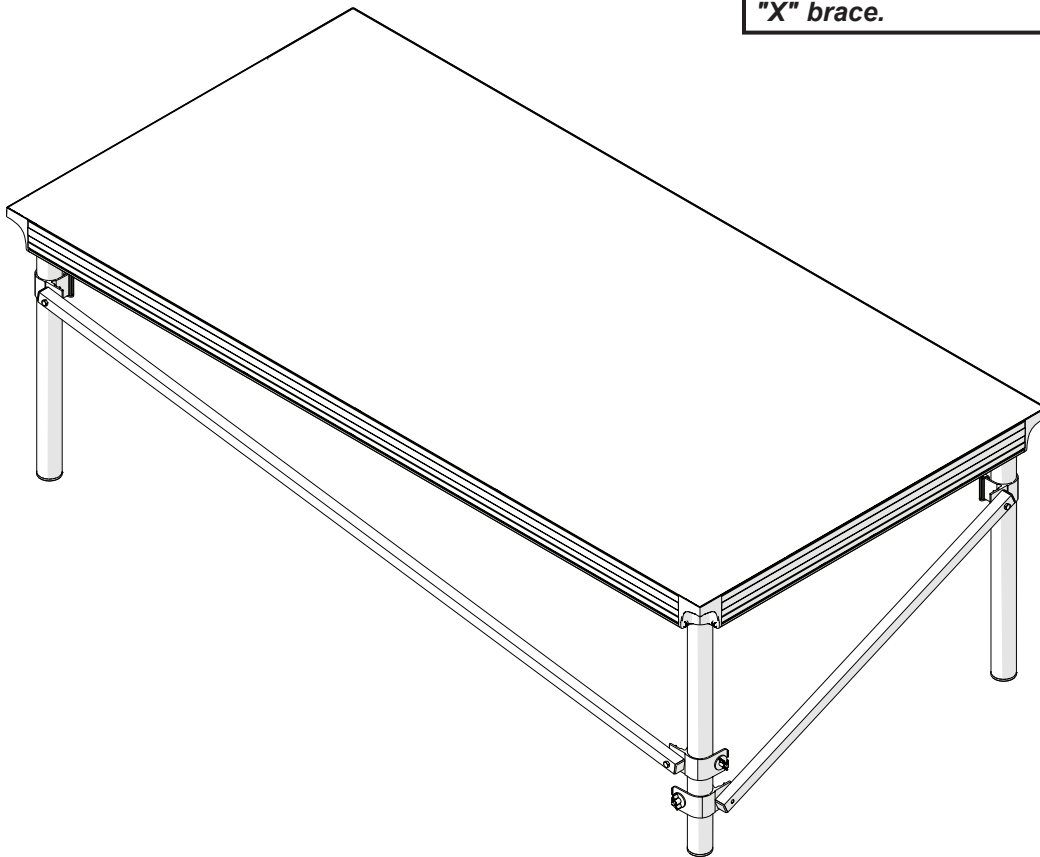


Visit the StageTek Staging System web page at wengercorp.com for more information.

Note: Please read and understand these instructions before assembling or setting up.

Note: If you need additional information, contact Wenger Corporation using the information below.

Assembly


1. Attach a leg clamp assembly to each end of the stabilizer tube using a 3/8-16 x 1.75" capscrew and 3/8-16 lock nut as shown.
2. Tighten the capscrew enough that the leg clamp assembly is secure, but may be rotated.

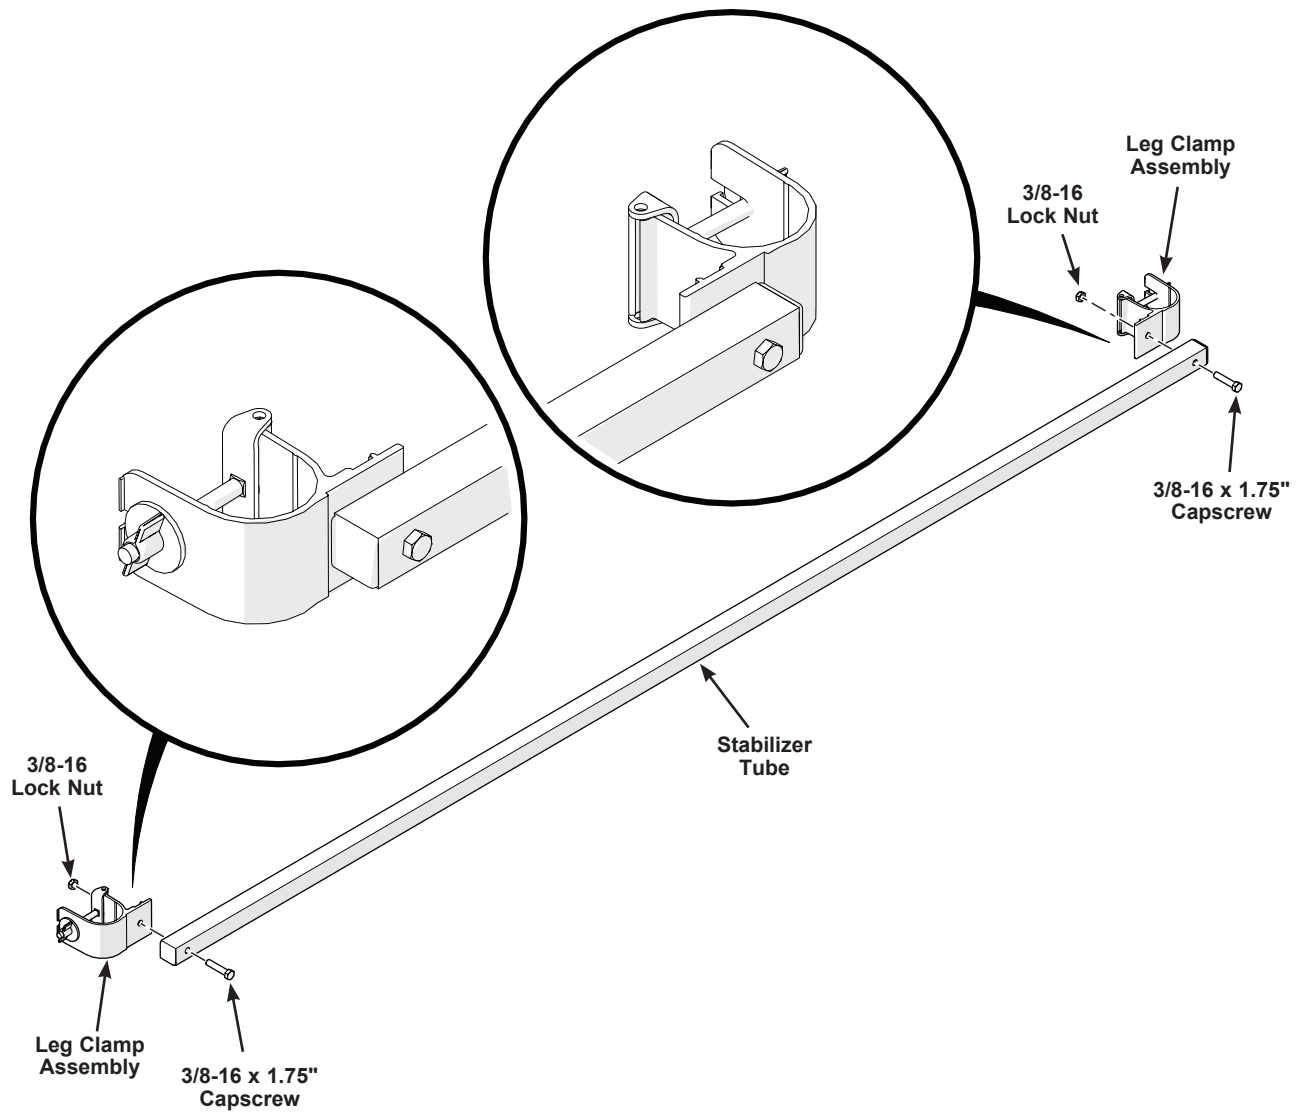

Operation

To attach the stabilizer brace to the stage deck:

1. Loosen the wing nuts from both leg clamp assemblies and swing them open.
2. Place the leg clamp assemblies onto the legs at opposite ends of the stage deck.
 - a. One end should be down toward the ground and the other end should be up toward the stage deck. Place clamps as close to the top and the bottom of legs as possible for the highest rigidity.
 - b. The space between the leg clamp assembly and the ground should be approximately the same as the space between the leg clamp assembly and the bottom of the stage deck on the opposite side.
3. Swing both leg clamp assemblies closed and tighten the wing nuts.

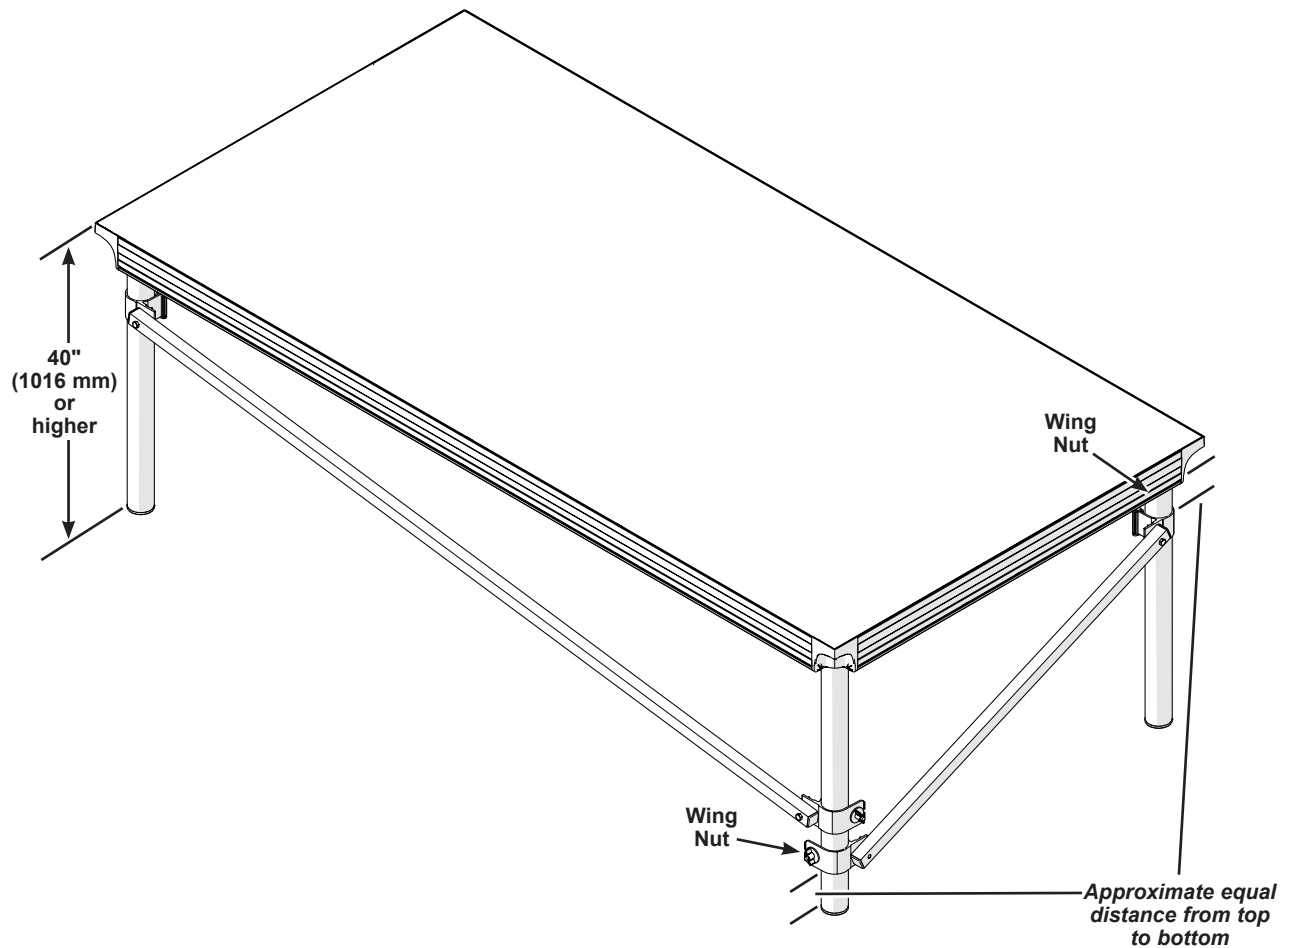

Refer to the StageTek Flat Staging System General Bracing Guidelines 280A093 for more details.

This page is intentionally blank.