

Contents

Important User Information	2	Assembly.....	3
Safety Precautions	2	Operation.....	4
Fasteners - Not Supplied	3		



Visit the instrument stands and holders web page at wengercorp.com for more information.

Note: Please read and understand these instructions before proceeding.
Note: If you need additional information, contact Wenger Corporation using the information below.

Important User Information

General

Copyright © 2024 by Wenger Corporation

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, unless it is for the purchaser's personal use.

Printed and bound in the United States of America.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Wenger Corporation. Wenger Corporation does not assume any responsibility for any errors that may appear in these instructions.

In no event will Wenger Corporation be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of these instructions. The manufacturer reserves the right to change this product at any time.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when assembling or installing Wenger Corporation products. If any questions or problems arise, call the Wenger Corporation at (800) 4WENGER (493-6437) or +1-507-455-4100 worldwide.

Manufacturer

The Tuba/Sousaphone Wall Bracket is manufactured by:

Wenger Corporation
555 Park Drive
Owatonna, MN 55060
(800) 4WENGER (493-6437) • +1 (507) 455-4100
wengercorp.com

Intended Use

- This product is designed to hold tubas and sousaphones only, it does not fit miraphone tubas, baritone horns, or rotary valve tubas.
- This product is intended for indoor use in normal ambient temperature and humidity conditions – it must not be exposed to outside weather conditions.
- This product is intended to be assembled and used only as described in these instructions.

Warranty

Warranty information is available at wengercorp.com.

Safety Precautions

Throughout this document you may find cautions and warnings which are defined as follows:

- **WARNING:** Failure to follow the instruction could result in serious injury or damage to property.
- **CAUTION:** Failure to follow the instruction could result in minor injury or damage to property.

Read all of these safety instructions before using the equipment.

CAUTION

Make sure anyone assembling, installing or using this product has read and understands these instructions.

CAUTION

Failure to comply with Warnings and Cautions in this document or on the equipment can result in damage to property or injury.

Fasteners - Not Supplied

Because materials and construction of walls can vary, fasteners for attaching the tuba/sousaphone wall bracket to the structure are not provided. The installer must choose the appropriate fastener and follow the manufacturer's instructions.

CAUTION

Inferior or improperly installed fasteners could cause the wall bracket to fall.

Wall Mounting Guidelines:

For drywalled wood stud or metal stud walls, the wall bracket should be mounted on a stud, NOT on unsupported drywall.

Wood Studs: Use 1/4" lag screws or #12 sheetrock screws or larger screws that will provide a minimum of 1-1/2" of penetration into the stud.

Steel Studs: Use 1/4" sheetmetal screws.


For poured concrete walls, Use 1/4" x 2" expanding anchor or a 3/8" x 1-3/4" concrete anchor. Trim the stud if necessary to prevent damaging the instrument.

For concrete block walls, Use 3/8" x 1-3/4" concrete anchors or an adhesive anchor system.


Assembly

1. Attach the t-bracket to the wall using the appropriate fasteners and method described in the "Fasteners - Not Supplied" section.

 It is recommended to mount the bracket is 28" to 32" (711 to 813 mm) up from the floor in a lower traffic area.

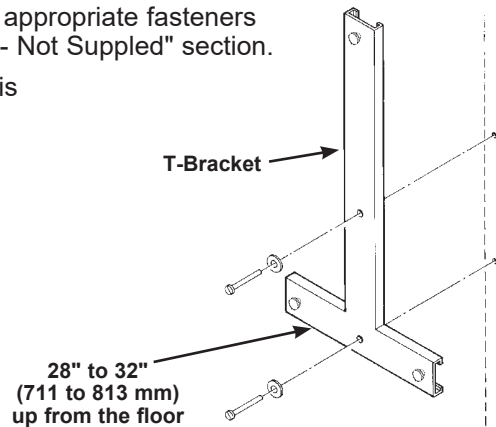


 2. Insert the left-hand, right-hand, and upper hanger arms into the T-bracket. Secure each arm into position by tightening the adjustment knob.

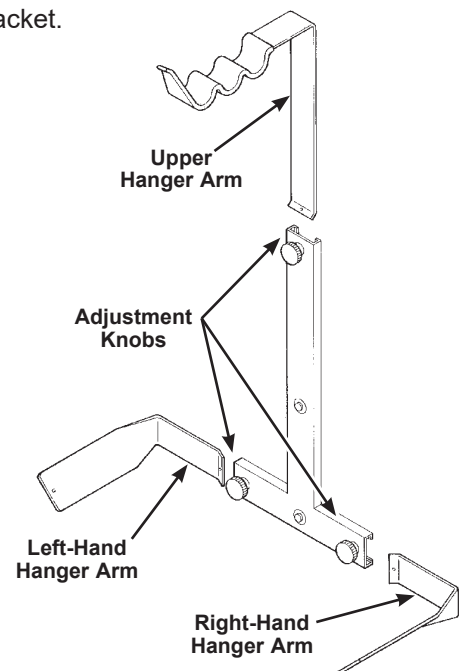

Assembly (continued)

 - Slide the cradle brackets onto the left-hand and right-hand hanger arms.
Secure each arm into position by tightening the adjustment knob.

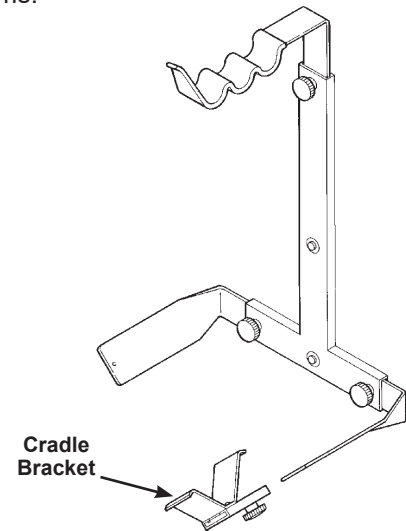

Operation

The wall bracket can be used for a variety of tubas and sousaphones by adjusting the hanger arms to match the size and shape of the instrument.

The upper hanger arm has three grooves to accommodate various sized instruments.

- Hold the instrument on the wall bracket.
- Adjust the left-hand and right-hand handle arms and the cradle brackets.
Tighten the adjustment knobs.
- Adjust the upper hanger arm and tighten the adjustment knob.

