

# UPPER DECK AUDIENCE SEATING® CHAIR CLAMP ACCESSORY

**Warning:** Always wear work gloves and safety glasses when assembling the Audience Chair Clamp. Failure to observe this warning can result in serious injury.


## INTENDED USE

The Upper Deck Audience Seating® Chair Clamp is intended to prevent Audience Chairs from tipping forward and must be installed as described in this document.

## ASSEMBLE THE CLAMP TO THE CHAIR


Attach one Clamp to a Rear Leg of every other chair to be used with the Upper Deck Audience Seating® (one of every two chairs) as follows.

1. Place an Audience Chair Clamp onto an Audience Chair Rear Leg as shown in the illustration at the right.
2. Using a 9/16-inch combination wrench, loosen the Hex Head Capscrew but **do not remove the screw**.


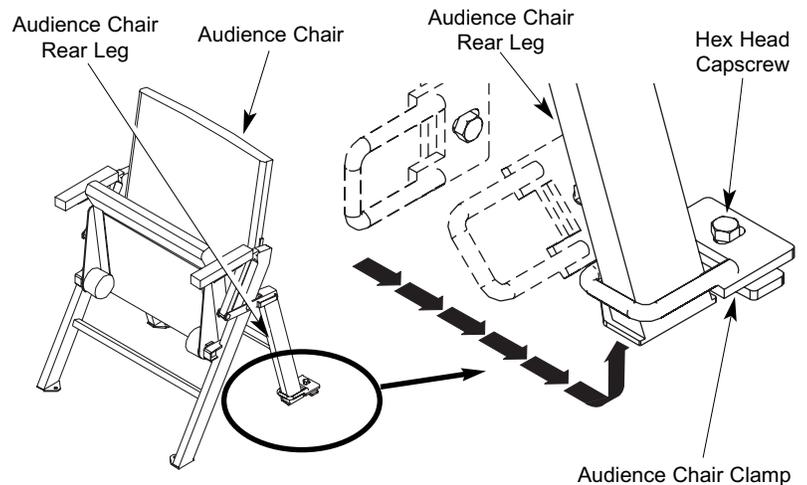


## ATTACH THE CHAIR TO THE DECK

1. Lift the Audience Chair with an Audience Chair Clamp on one of the Rear Legs and place the Chair onto the Deck with the Rear Legs next to the Deck Back Extrusion.
2. Align the Audience Chair Clamp Lower Half with the Deck Back Extrusion Channel as shown in the illustration at the right.
3. Lower the Chair Clamp Lower Half into the Deck Back Extrusion Channel and pull the Chair forward to engage the Chair Clamp Lower Half with the Deck Back Extrusion Lip as shown in the illustration below-right.
4. Adjust the position of the Chair and tighten the Hex Head Capscrew with a 9/16-inch combination wrench.
5. Attach additional Chairs to the Deck with one Audience Chair Clamp attached to every other Chair.

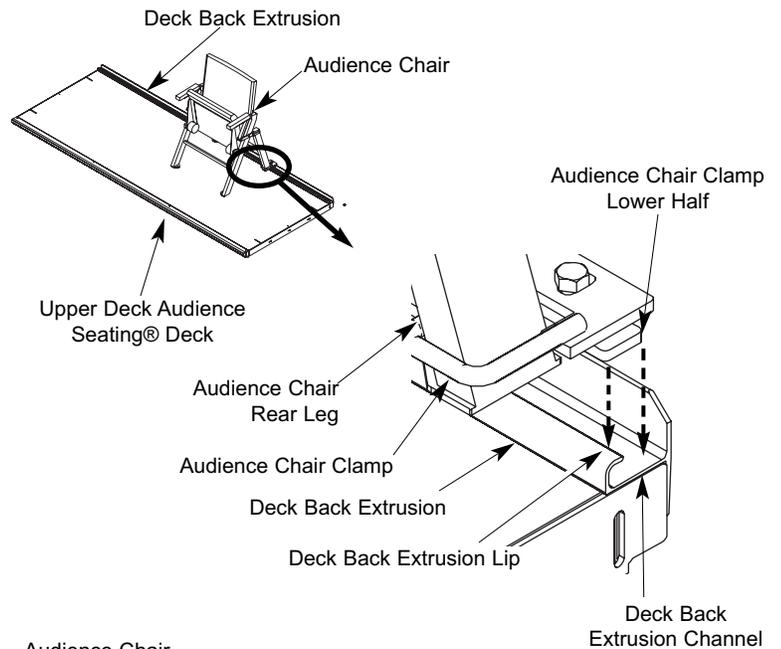

**Chairs ganged together with an Audience Chair Clamp on every other Chair.**

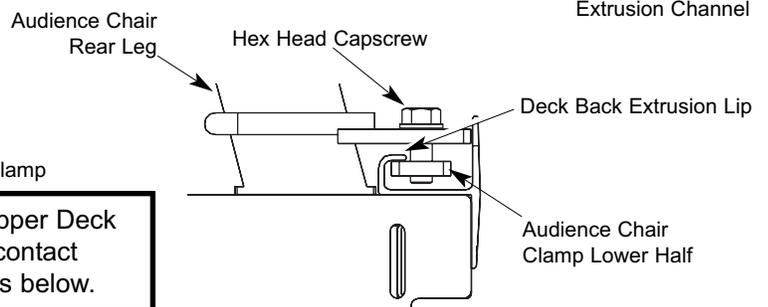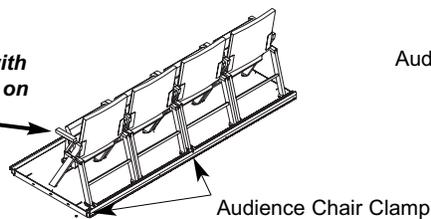

**Note:** If you have questions or problems with the Upper Deck Audience Seating® Chair Clamp Accessory, contact Wenger Corporation at the number or address below.

# VERSALITE® AUDIENCE CHAIR CLAMP ACCESSORY

**Warning:** Always wear work gloves and safety glasses when assembling the Audience Chair Clamp. Failure to observe this warning can result in serious injury.

## INTENDED USE

The Versalite® Audience Chair Clamp is intended to prevent Audience Chairs from tipping forward and must be installed as described in this document. Attach one Clamp Assembly to one Rear Leg of every other chair to be used with the Versalite® system (one of every two chairs).

## ASSEMBLE THE LOWER CLAMP TO THE DECK





1. Take a Versalite® Audience Chair Clamp Assembly and unscrew the Hex Head Capscrew from the Lower Clamp Assembly.
2. Assemble the Lower Clamp to the Versalite® Deck as follows.
  - a. Open the Lower Clamp Toggle Handle.
  - b. Insert the Lower Clamp Slider into the Versalite® Deck Extrusion Slot as shown in the illustration.

## ASSEMBLE THE CLAMP TO THE CHAIR

Attach one Upper Clamp Assembly to an Audience Chair Rear Leg as shown in the illustration at the right. Make sure that the slotted plate is below the wire bracket.


## ATTACH THE CHAIR TO THE DECK

1. Place the Audience Chair with an Audience Chair Clamp on one of the Rear Legs onto the Versalite® Deck with the Rear Leg and Upper Clamp close to the Lower Clamp in the Versalite® Deck Extrusion.
2. Lift the Chair and align the Upper Clamp Assembly Hex Head Capscrew with the Lower Clamp Assembly Threaded Hole.
3. Using 9/16-inch combination wrench, screw the Hex Head Capscrew into the Lower Clamp Assembly Threaded Hole.
4. Adjust the position of the Chair and close the Lower Clamp Assembly Toggle Handle to lock the Chair position.
5. Attach additional Chairs to the Deck with one Audience Chair Clamp attached to every other Chair.

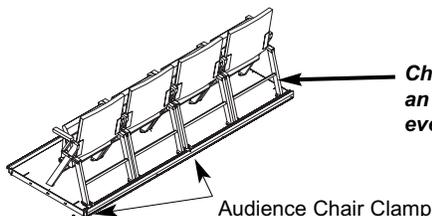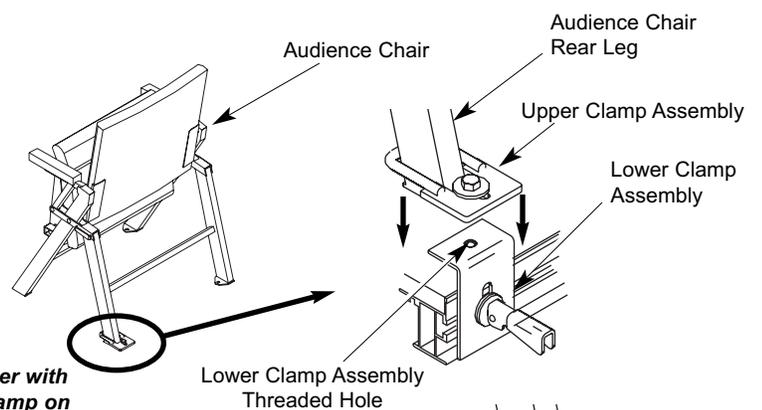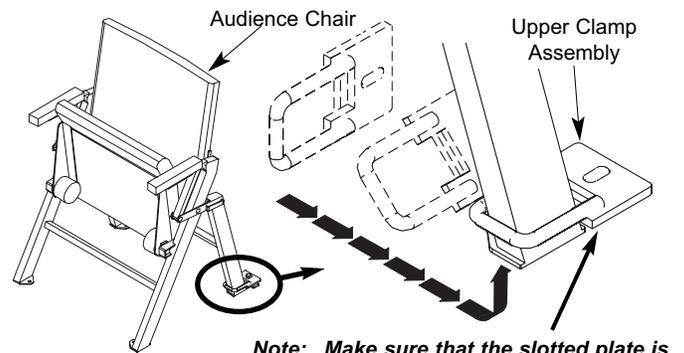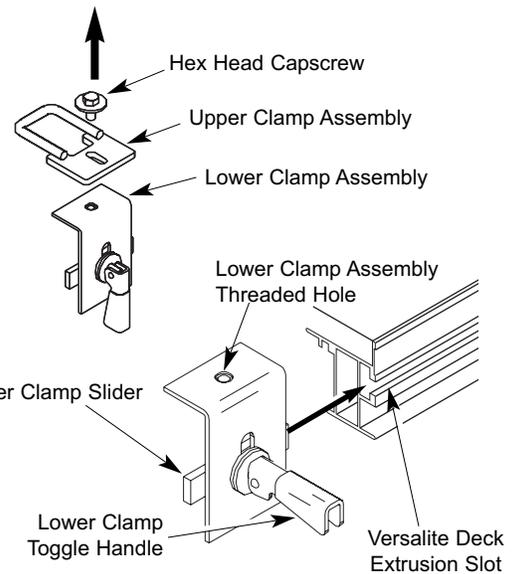

**Chairs ganged together with an Audience Chair Clamp on every other Chair.**

**Note: Screw the Capscrew into the Lower Clamp Assembly, position the Chair, and close the Toggle Handle.**

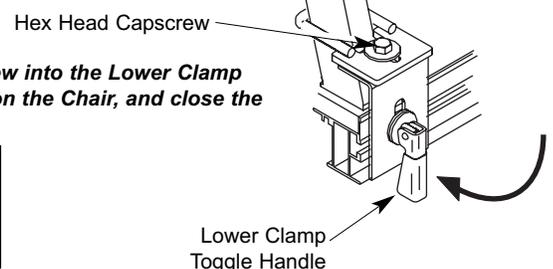

**Note:** If you have questions or problems with the Versalite® Seating Chair Clamp Accessory, contact Wenger Corporation at the number or address shown on the front page.