



Owner's Manual Audio System Series 200

QUICK START

INSTRUCTIONS

NOTE: READ PAGES 2 TO 19 BEFORE DOING ANYTHING!

Wenger's goal is to provide a package of sophisticated, powerful audio components configured with SIMPLICITY in mind. The individual components are pre-wired at the factory wherever possible. All initial component settings are adjusted for you. Do not change any settings until you've had a chance to use the system. Unless these settings have been altered, you should be up and running in a few simple steps. These Quick Start instructions will guide you through your audio system's setup procedures. To familiarize yourself with your audio system, we suggest that you go through each of the following steps in order. If you have any questions along the way, please feel free to contact Wenger Customer Service at 1-800-887-7145.

CONTENTS

Safety	1	Audio System Front Panel	22
Important User Information	2	Wiring Diagrams	23
General	2	Model 201 Wiring Diagram	23
Manufacturer	2	Model 202 Cd Playback-Cassette Record Diagram ..	24
Installation	2	Model 202 Cd-Rw Record-Cassette Playback Diagram	25
Intended Use	2	System Settings	26
Quick Start - Before Starting	3	Before Operating	26
Quick Start - Microphone Amplification	4	Amplifier Connections	26
Quick Start - Cd Playback	10	Cd-Rw Playback And Cassette Recording Connections	26
Quick Start - Cassette Playback	13	Cd-Rw Record And Cassette Playback Connections ..	26
Quick Start - Cd Recording	14	Change Record Function	27
Tips For Recording On Cassette Tape Vs. Cd	16	Initial Settings	27
Cassette Recording	16	Power Up The System	27
Cd-Rw Recording	16	Troubleshooting	28
Quick Start - Changing Recording Device	17	Manufacturer's Owner Manuals	28
Quick Start - Cassette Recording	18	Replacement Part List	29
Important User Information	21	Warranty	29
Intended Use	21		
Operation Information	21		
Mixer Connection Diagram	21		

SAFETY

Warning! *Do not use in wet or rainy conditions. Never connect the main power cord to a power source in wet conditions. Do not alter the power cord or connect the power cord to an ungrounded power source. Failure to observe this warning can result in electrical shock or death!*

IMPORTANT USER INFORMATION

GENERAL

Copyright © 2005 by Wenger Corporation

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, unless it is for the purchaser's personal use.

Printed and bound in the United States of America.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Wenger Corporation. Wenger Corporation does not assume any responsibility for any errors that may appear in this manual.

In no event will Wenger Corporation be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of this manual.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when assembling or installing Wenger Corporation products. If any questions or problems arise, call Wenger Corporation at 800-733-0393.

MANUFACTURER

The Series 200 Audio System is manufactured by:

Wenger Corporation
555 Park Drive
Owatonna, MN 55060
1-507-455-4100 • 1-800-733-0393
www.wengercorp.com

INSTALLATION

- The Wenger Series 200 Audio System use must comply with local regulations and codes.
- All personnel (including all temporary workers) using the Wenger Series 200 Audio System must read and understand this entire manual.

INTENDED USE


The Wenger Series 200 Audio System is intended for indoor use and outdoor use with fair weather condition changes with some limitations. The Series 200 Audio System is not intended to be used in wet or inclement weather conditions.

- Never exposure the Audio System components to wet or wet outdoor weather conditions.
- The system is ***not intended to be permanently installed*** in outdoor environments.
- Exposure to wet conditions causes internal moisture that damages the loudspeaker cone, corrodes electrical contacts, and presents an electrical shock hazard.
- Microphones are not intended to be used in wet conditions and must be protected from any precipitation.
- Never expose the mixer to wet conditions or any precipitation.

QUICK START — BEFORE STARTING

Before starting, make sure that you have the following components (shown in photographs below and at the right).

1. Series 200 Audio System Rack
2. Two Speakers
3. Two Speaker Cables
4. Two Speaker Stands
5. One Microphone
6. One Microphone Cable
7. One Microphone Stand

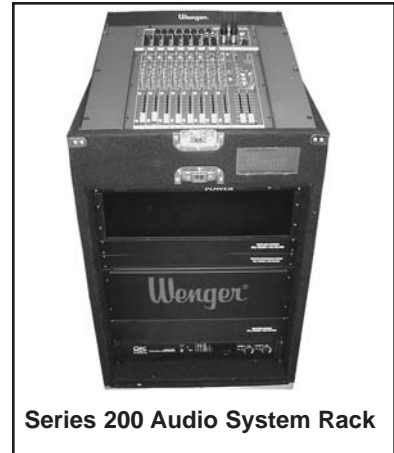

These components are part of your basic Series 200 Audio System. The setup and operation is described in this manual and in the manufacturer's manuals that you received.

If you ordered additional components not shown above, please refer to their manufacturer's manuals for setup and operation.

QUICK START — MICROPHONE AMPLIFICATION

A common use for your audio system is amplifying live music or speech using microphones. To get started:

1. Connect speaker cables to your speakers.

Insert the 1/4-inch plug at the end of the cable into the speaker socket. Choose either speaker connector.




2. Remove the rear cover from the equipment rack and connect the other ends of the speaker cables to the amplifier outputs.

The amplifier is the bottom component in the rack. For now, don't worry about which amplifier output goes to which speaker. These cables won't fit anywhere else so if they are both plugged in and rotated clockwise to lock in place, you've successfully made this connection.



3. Remove the top cover from the audio rack.

If any cables had to be disconnected in order for the cover to properly close, reconnect them per the instructions found under the cover.

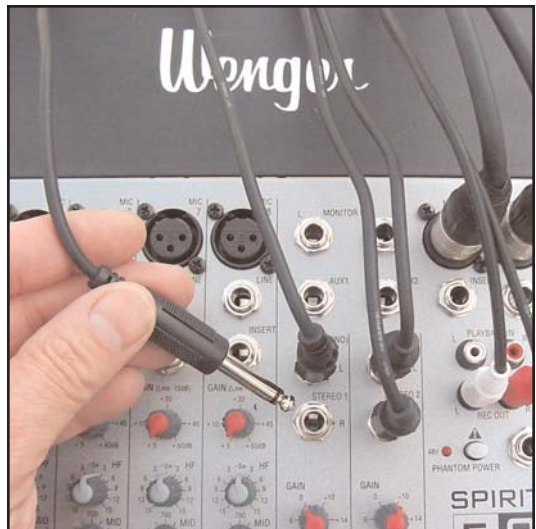

QUICK START — MICROPHONE AMPLIFICATION

4. Plug in the power cord found when you removed the rear cover.

This cord connects to the power distribution unit, which in turn, powers all the other components in the rack.



5. Adjust all control knobs, buttons and faders for Channel 1 to the settings shown.

Knob Position:


7:00

12:00

7:00


12:00

Released (up position)
Depressed (down position)

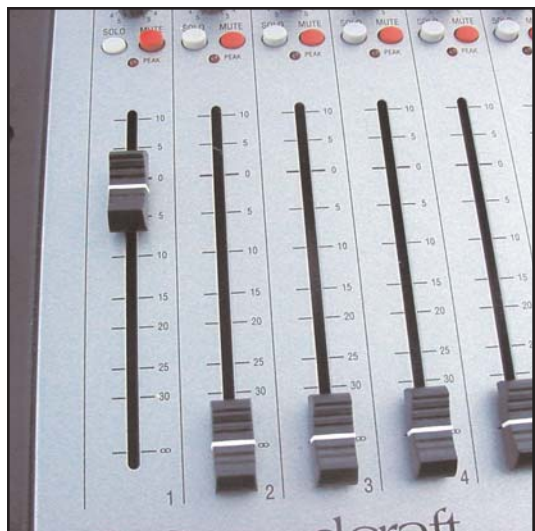

QUICK START — MICROPHONE AMPLIFICATION

6. Using the microphone cable provided, connect a microphone to the mixer on **CHANNEL 1**.

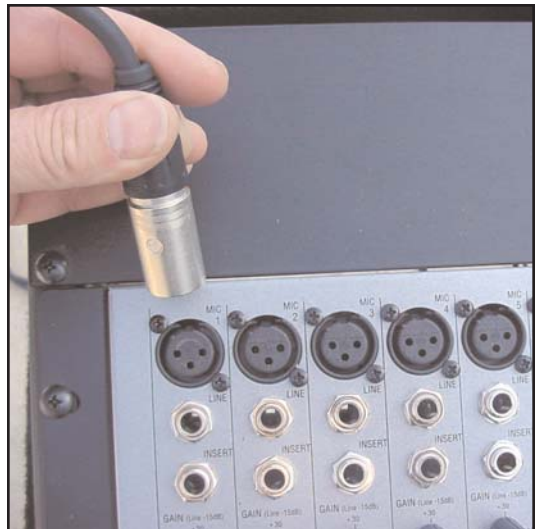

7. Remove the rack's front cover. Turn on the main power switch in the far upper-right corner of the rack.

This will provide power to all system components. All individual components should be powered up as indicated by their front-mounted indicator lights.



QUICK START — MICROPHONE AMPLIFICATION

8. Speak or play music into the microphone and adjust the Channel 1 **GAIN** control knob so that it lights most of the green indicators on the right hand side of the mixer.



*It's OK if louder inputs drive the indicators into the yellow section. However, the **GAIN** should NOT be set so high as to illuminate the red indicators.*



9. Adjust the volume of this microphone using the **CHANNEL 1** Fader at the bottom left hand corner of the board.

This will affect the volume of only this microphone.



QUICK START — MICROPHONE AMPLIFICATION


10. Additional channels can be set up in the same way.

*Note: When setting the gain control (step 8), only the **SOLO** button for the channel being set should be **depressed** to send its signal to the meters. All other **SOLO** buttons should be **up**.*



11. Once all input channels have been set up, adjust the overall volume of the mix using the faders at the lower right hand corner of the board.

These faders will adjust the volume of all inputs together.

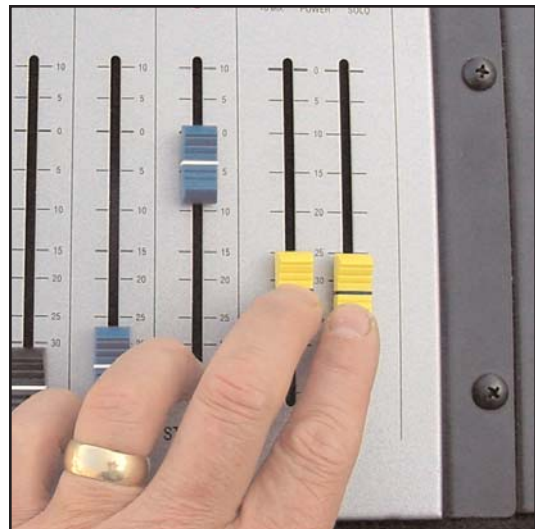

QUICK START — MICROPHONE AMPLIFICATION

12. When the volume is adjusted at the proper level for your venue, the MIX faders should be approximately two-thirds of the way up. If the volume at this setting is too high or low, adjust the amplifier gain knobs (located at the bottom right-hand corner of the rack) to achieve the desired overall volume with the MIX faders in that position.

*Turning the **GAIN** control knobs clockwise will increase the volume. Turning counter-clockwise will decrease the volume. (Both **GAIN** control knobs should be set the same.) This step will minimize the amount of noise heard through the speakers during quiet music passages, between speeches or anytime inputs are low.*



Congratulations! Your system should be ready to amplify your next program.

If your audio system does NOT amplify as expected, any of a number of cable connections or settings may have been inadvertently changed. Detailed instructions for proper connections and optimum settings can be found in this manual. Please refer to its table of contents on the cover page for guidance.


Even if your system is playing, there are likely some adjustments in you may want to make. Detailed instructions for further fine-tuning the system can be found on pages 21 to 29 in this manual and in the manufacturer's operation manuals contained in the binder. Please refer to the table of contents on the cover page for more information.

QUICK START — CD PLAYBACK

Note: The following Quick Start instructions apply if you have a **Wenger Model 202 Audio System** containing a CD/cassette player/recorder.

The next step is to playback a pre-recorded program. Start with your favorite music CD. The playback of CD's is controlled by the channel labeled **STEREO 2**.

1. Adjust the control knobs, push buttons and faders for Channel **STEREO 2** to the settings shown.

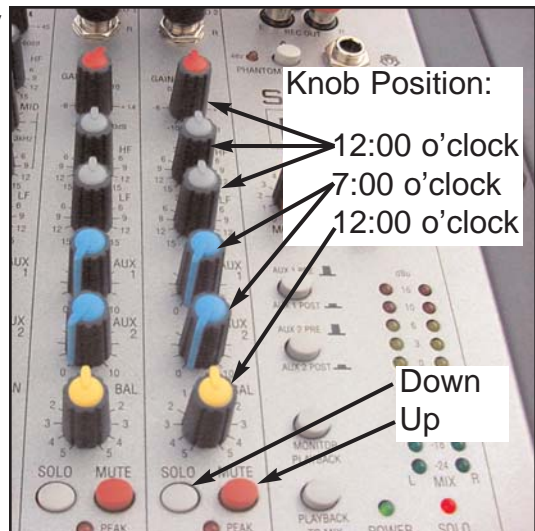

Leave all other controls adjusted as they were when you set up your amplification system using the Microphone Amplification Quick Start procedure. You may adjust the microphone channel faders all the way down to turn off the microphones if desired.



2. Press the **OPEN/CLOSE** push button and insert a pre-recorded CD into the CD-RW/Cassette Player/Recorder. Press the **OPEN/CLOSE** push button again to close the CD drawer.



QUICK START — CD PLAYBACK

3. Press the **PLAY** button.


The CD player should now be playing through the speakers. You should also notice movement of the meters on the CD-RW/Cassette Player/Recorder display.

4. Depress the **SOLO** button on Channel **STEREO 2** so its signal is sent to the meters.

*Only the **SOLO** button for the channel being set should be **depressed** to send its signal to the meters. All other **SOLO** buttons should be **up**.*


5. Adjust the **GAIN** control knob so that the input signal lights most of the green indicators on the right hand side of the mixer.

It's OK if louder inputs drive the indicators into the yellow section. However, the Gain should NOT be set so high as to illuminate the red indicators.

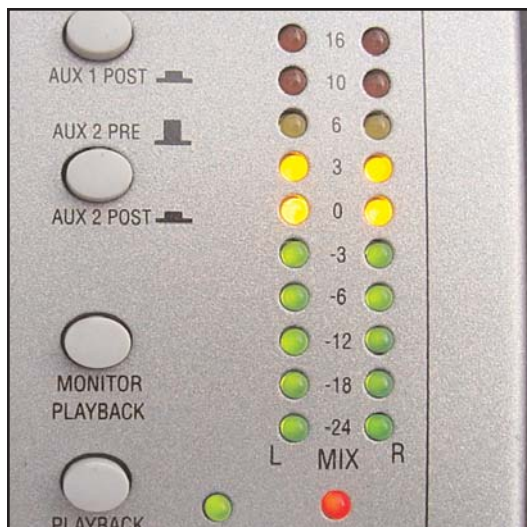

QUICK START — CD PLAYBACK

6. Adjust the playback volume using the Channel **STEREO 2** fader together with the main mix faders located on the lower-right corner of the mixer.

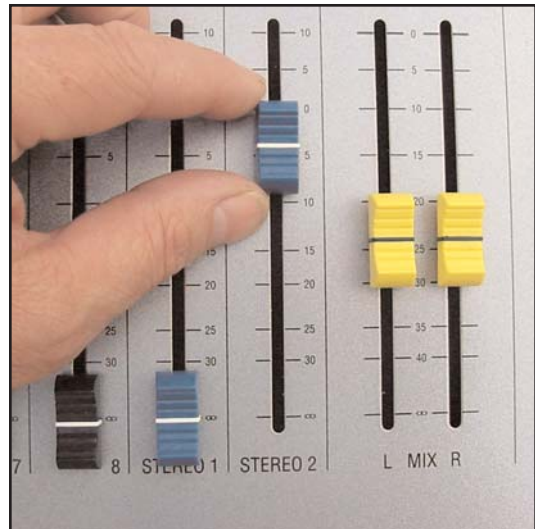

*The Channel **STEREO 2** fader will change the volume of the CD playback, only. The main mix faders will affect the volume of the CD playback and any other input to the board. (...like the microphones set up earlier.)*



If your audio system does NOT play as expected, any of a number of cable connections or settings may have been inadvertently changed. Detailed instructions for proper connections and optimum settings can be found in this manual. Please refer to its table of contents on the cover page for guidance.

Even if your system is playing, there are likely some adjustments in you may want to make. Detailed instructions for further fine-tuning the system can be found on pages 21 to 29 in this manual and in the manufacturer's operator's manuals contained in the binder. Please refer to the table of contents on the cover page for more information.

QUICK START — CASSETTE PLAYBACK

Cassette playback is controlled by Channel **STEREO 1**. For playing cassettes, follow the instructions above using channel **STEREO 1** (instead of **STEREO 2**).

Cassette player controls are on the left side of the player.



QUICK START — CD RECORDING

Now that you have successfully set up microphones for amplification and are able to playback pre-recorded materials, the next step is to record your program.


Because your audio system was shipped from the factory ready for CD recording, we recommend that you start by experimenting with recording on CD's. As you become more familiar with your system, you can make the wiring changes outlined later in this section and record on cassette tapes.

1. Press the **OPEN/CLOSE** push button on the CD player/recorder and insert a blank, recordable CD. Press the **OPEN/CLOSE** push button again to close the CD drawer.



After a few seconds the CD player/recorder's display will read:

0 Tr 0:00

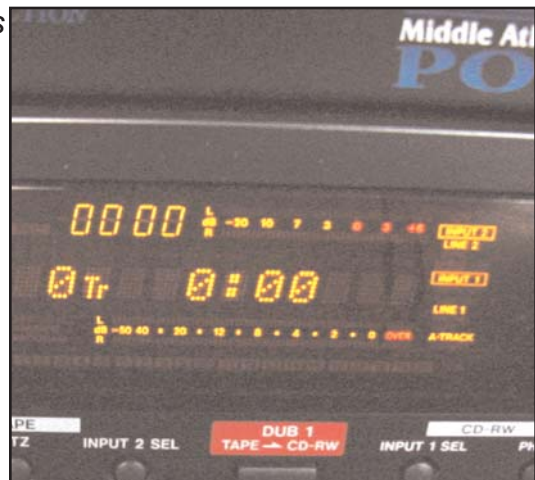

2. Press the **RECORD** push button on the CD recorder. After a few seconds, the first available track will be queued and ready for recording.

If the CD was blank, the display will read:

1 Tr 0:00


If the CD was not blank, the first number will be that of the next available track.



QUICK START — CD RECORDING

3. With the program source playing (this could be from the cassette player, instrument pickups and/or the microphone inputs), adjust the input level to the CD recorder.

*Adjust the input level knob while watching the level indicators on the CD recorder display. They should pulse across the display screen to the right as far as possible without illuminating the red **OVER** indicator.*

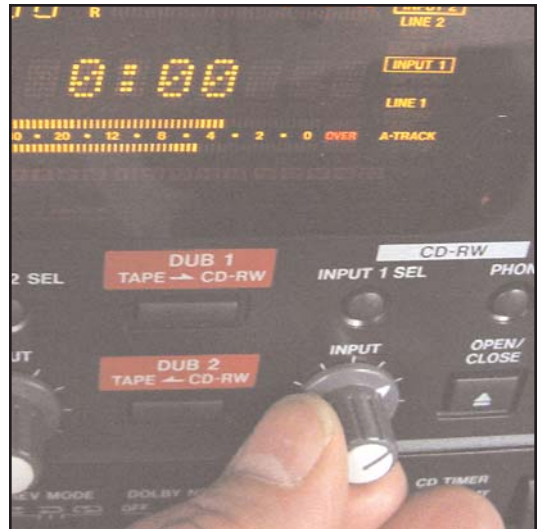

4. Press **PLAY** to begin recording.
Record your program.



5. Press **STOP** when recording is complete. The CD Recorder will write to the CD for a few seconds and then display the number of the last track recorded and its total length. Recording is now complete.

*This recording can now be played on this CD recorder/player. **Without further processing, your recording may not yet be ready to be played on other CD players.** To use this disk in other CD Players, the CD must be finalized.*

*To finalize the CD, press the **FINALIZE** push button and then press the **MULTI-DIAL** push button. The display will count down for the time remaining for finalization.*



QUICK START — CD RECORDING

If your audio system does NOT record as expected, any of a number of cable connections or settings may have been inadvertently changed. Detailed instructions for proper connections and optimum settings can be found in this manual. Please refer to its table of contents on the cover page for guidance.

Even if your system is playing, there are likely some adjustments in you may want to make. Detailed instructions for further fine-tuning the system can be found on pages 21 to 29 in this manual and in the manufacturer's operator's manuals contained in the binder. Please refer to the table of contents on the cover page for more information.

TIPS FOR RECORDING ON CASSETTE TAPE VS. CD

The Wenger Model 202 Audio System has recording capabilities for both cassettes and CD's. If configured as recommended in this manual, the system will play both CD's and cassettes. However, changing between recording on CD and cassette tape media requires altering the system's wiring.

CD-RW RECORDING

	Function	
Device	Playback	Record
CD/RW	♪	♪
Cassette	♪	

As supplied from Wenger, this system is ready for CD-RW recording (and playback.) In this configuration, the Cassette deck is playback, only.

CASSETTE RECORDING

	Function	
Device	Playback	Record
CD/RW	♪	
Cassette	♪	♪


This system can be easily rewired for cassette recording. In this configuration, system is ready for both Cassette recording (and playback.) The CD-RW drive is playback, only.

QUICK START — CHANGING RECORDING DEVICE

To change from CD recording to cassette recording (and back again), simply change the Line Input cable connections at the Input of the CD-RW/Cassette recorder. (The Line Input cable runs from the mixer **REC OUT** connection to the CD-RW/Cassette recorder).



*If you want to record on a CD, connect the input cable to **LINE INPUTS 1**. (As supplied from Wenger)*

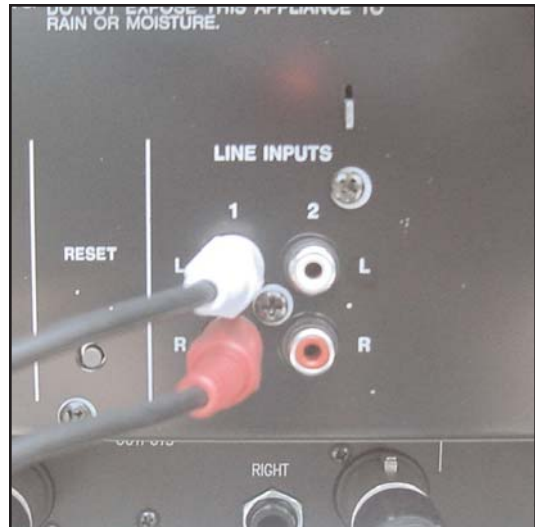

*If you want to record on a Cassette, connect the input cable to **LINE INPUTS 2**.*



QUICK START — CASSETTE RECORDING

1. To set up the system for cassette recording, connect the input cable running from the **REC OUT** of the mixer to **LINE INPUTS 2** of the CD-RW/Cassette recorder.



2. Press the **EJECT** button on the cassette player/recorder and insert a blank cassette. Push the door closed.



3. Press **RECORD**.


You should see the red REC symbol and Pause symbol illuminated in the upper left hand corner of the display.



QUICK START — CASSETTE RECORDING

4. With the program source playing (this could be from the CD player, instrument pickups and/or the microphone inputs), adjust the input level to the Cassette recorder.

Adjust the input level knob while watching the level indicators at the top of the cassette recorder display. They should pulse across the display screen to the right as far as possible without illuminating the red OVER indicator.

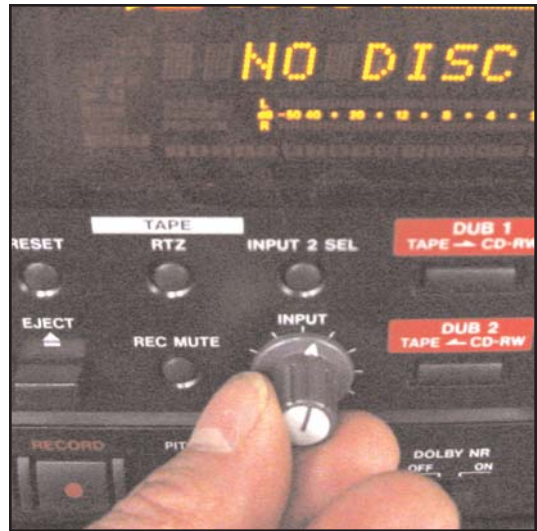

5. Press **PLAY** to begin recording
The tape counter should begin to count up indicating that the tape is recording.
6. Press **STOP** when recording is complete.
7. Rewind back to the beginning of the tape and play it back using the cassette playback instructions above.

If your audio system did NOT record as expected, any of a number of cable connections or settings may have been inadvertently changed. Detailed instructions for proper connections and optimum settings can be found in this Owner's Manual. Please refer to the table of contents on the front cover for guidance.

Even if your system is working, there are likely some adjustments in you may want to make. Detailed instructions for further fine-tuning the system can be found on page 21 to 29 in this Owner's Manual or the manufacturer's operator's manuals in the binder. Please refer to the table of contents on the front cover for more information.

IMPORTANT USER INFORMATION

INTENDED USE

The Audio System Series 200 is intended for indoor use or outdoor use with fair weather conditions.


- Never exposure the Audio System components to wet or wet outdoor weather conditions.
- The system is ***not intended to be permanently installed*** in outdoor environments.
- Exposure to wet conditions causes internal moisture that damages the loudspeaker cone, corrodes electrical contacts, and presents an electrical shock hazard.
- Microphones are not intended to be used in wet conditions and must be protected from any precipitation.
- Never expose the mixer to wet conditions or any precipitation.

OPERATION INFORMATION

The following pages contain detail information regarding the set up, operation, replacement parts, and warranty.


If you have questions or problems, contact Wenger Corporation Customer Service by telephone, email, or by writing to the address on the cover page.

MIXER CONNECTION DIAGRAM

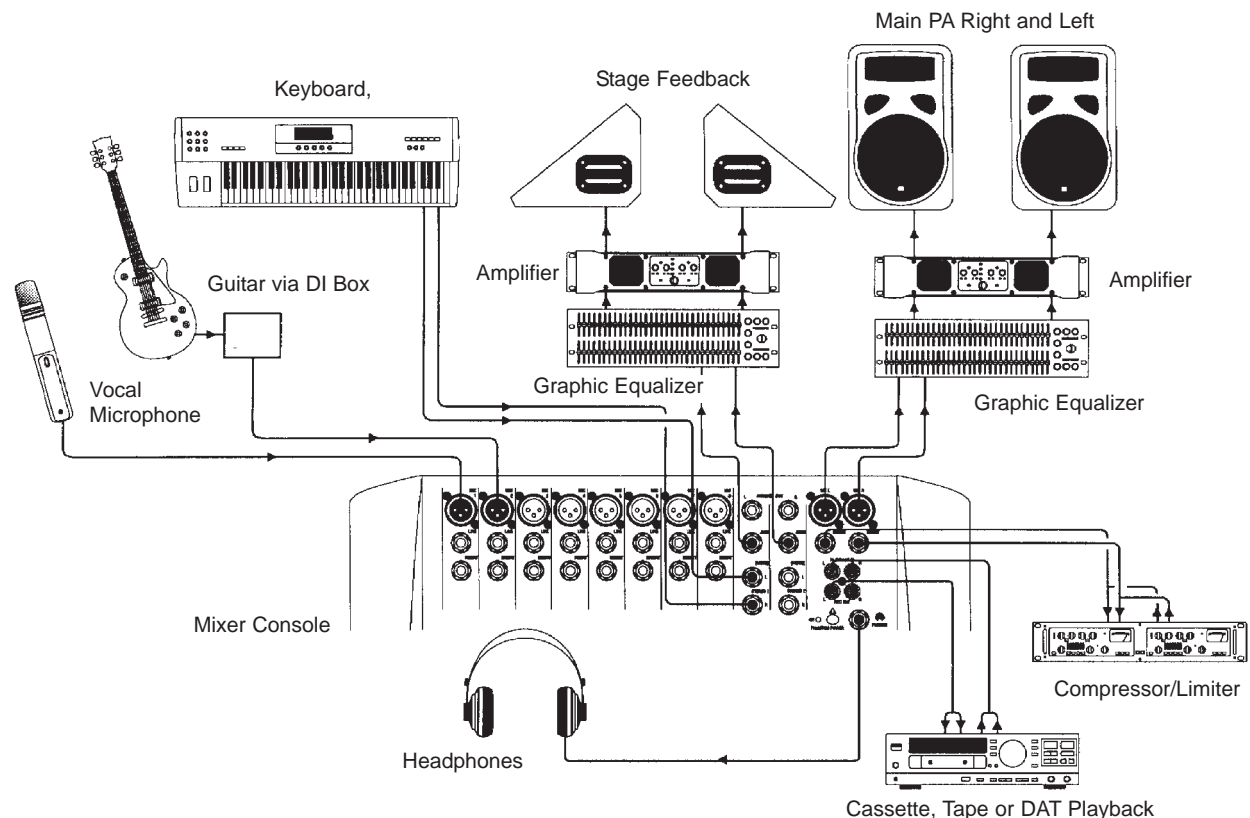

Connection Diagram image is copied from Spirit Users Guide

AUDIO SYSTEM FRONT PANEL

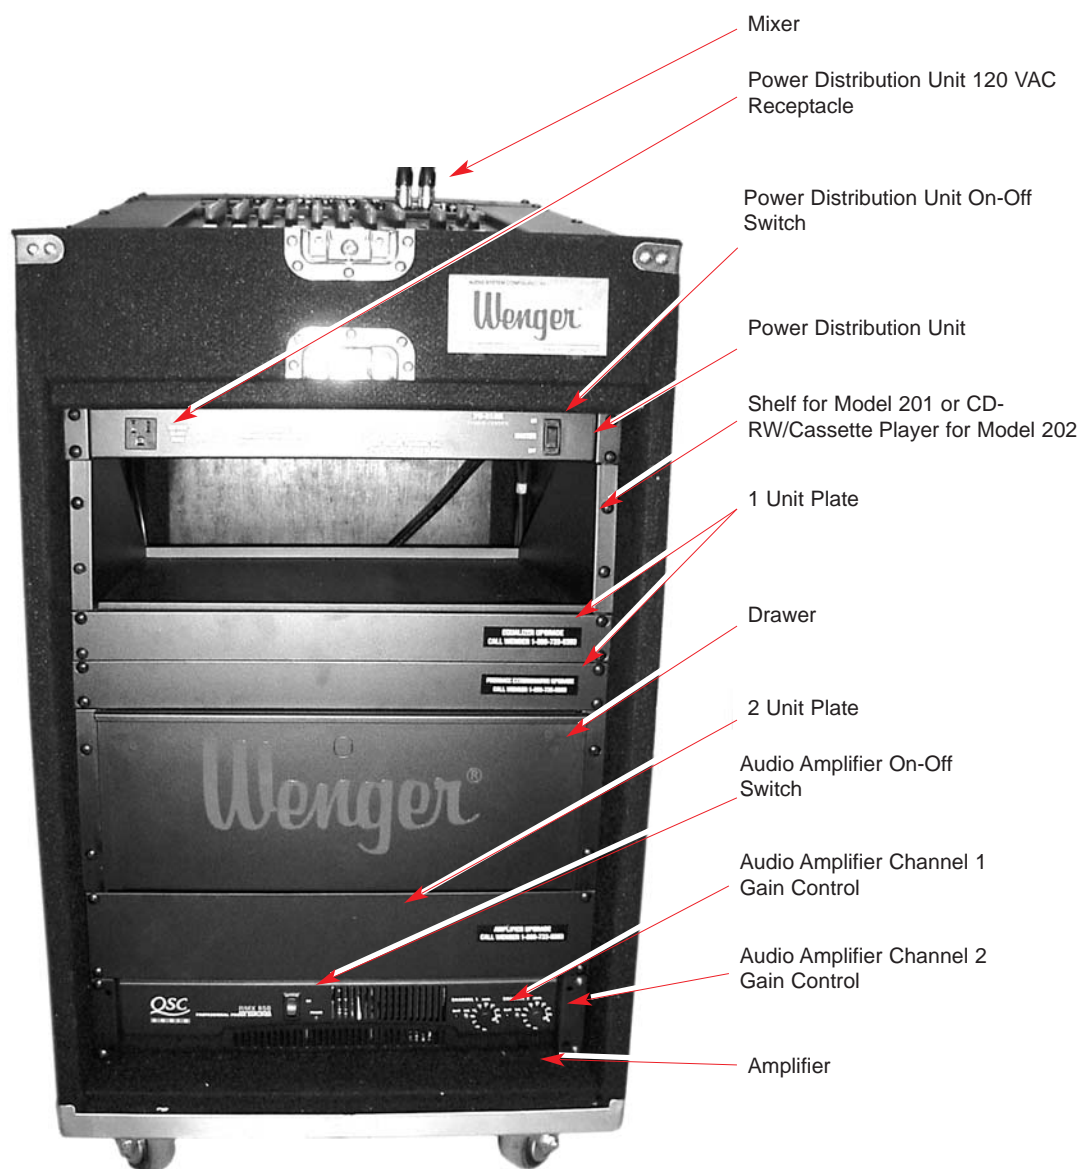


Model 201 is shown

WIRING DIAGRAMS

MODEL 201 WIRING DIAGRAM

Note: The wiring diagram perspective is the rear of the Audio System Equipment Rack.

Note: This area is magnified.

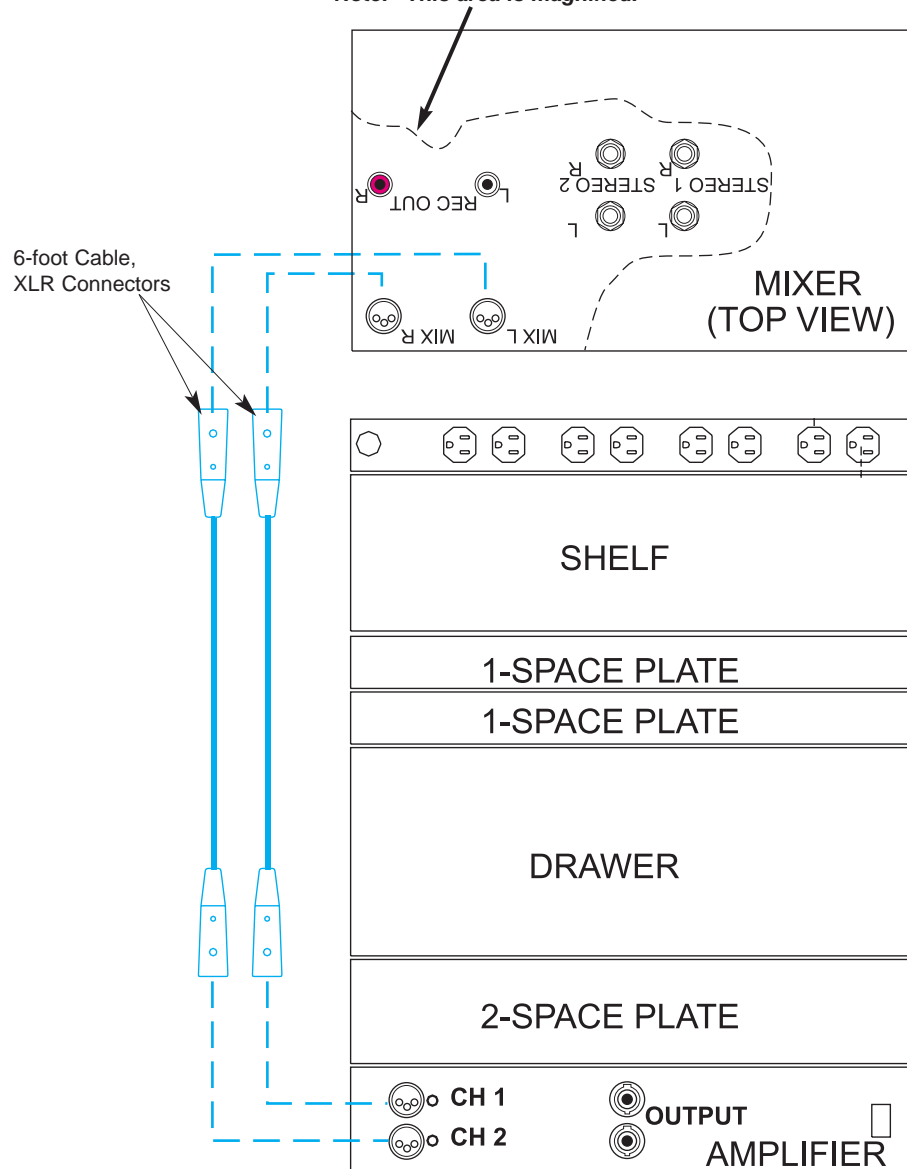

WIRING DIAGRAMS CONTINUED


MODEL 202 CD PLAYBACK-CASSETTE PLAYBACK/RECORD WIRING DIAGRAM



View from rear of the Mixer

Note: The wiring diagram perspective is the rear of the Audio System Equipment Rack.

Note: This area is magnified.

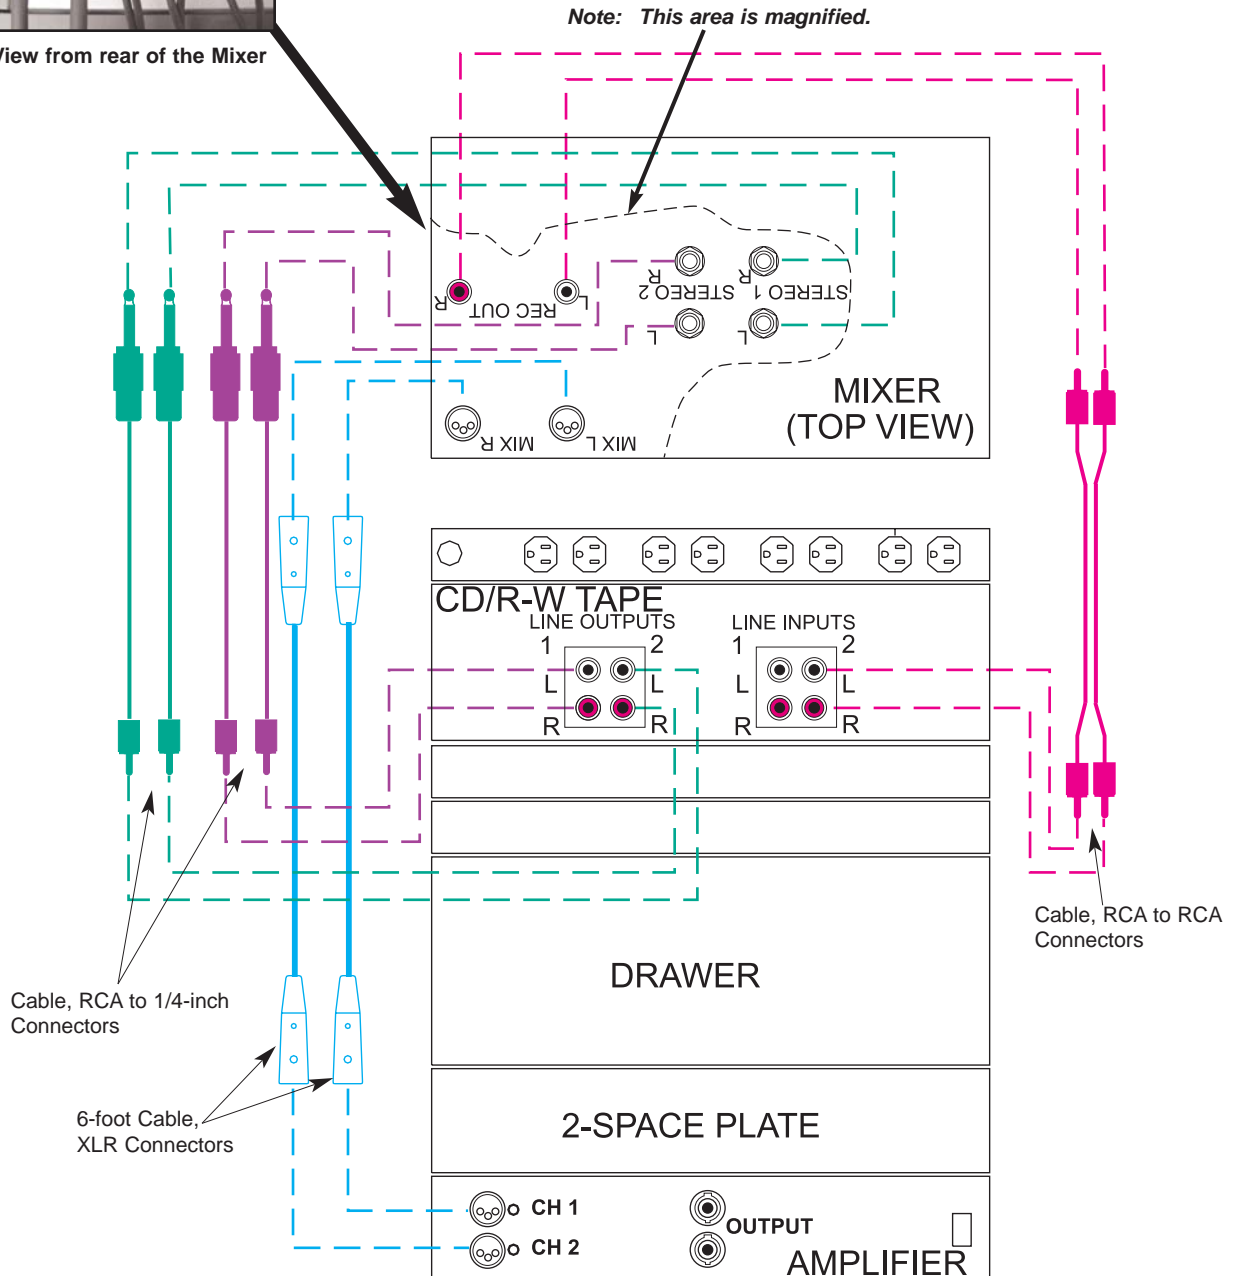

Function		
Device	Playback	Record
CD/RW	🎵	
Cassette	🎵	🎵


WIRING DIAGRAMS CONTINUED

MODEL 202 CD-RW RECORD/PLAY - CASSETTE PLAYBACK WIRING DIAGRAM



View from rear
of the Mixer

Note: The wiring diagram perspective is the rear of the Audio System Equipment Rack.

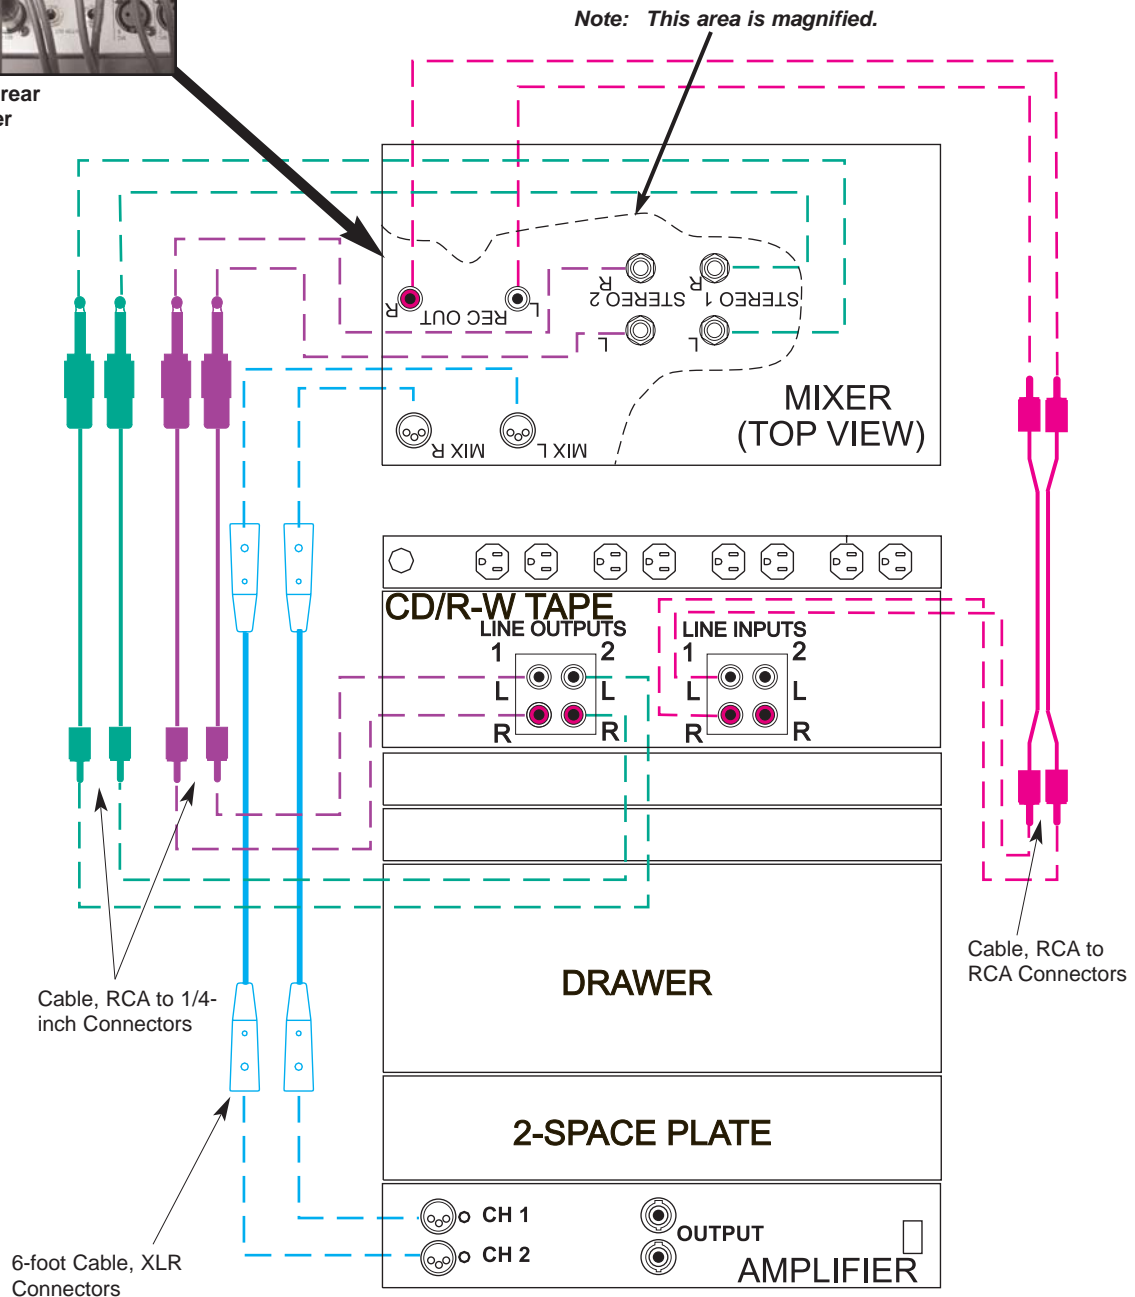

Function		
Device	Playback	Record
CD/RW	🎵	🎵
Cassette	🎵	

NOTE: The Audio System is shipped from the factory with these wiring connections.

SYSTEM SETTINGS

BEFORE OPERATING

Refer to the Audio System Owner's Manual and the Audio System Mixer Users Guide for additional information regarding set up and component connections.

1. Make sure the Audio System Power Distribution Unit **ON-OFF** Switch is in the **OFF** Position.
2. Connect a power cord from the Power Distribution Unit to a grounded 120 VAC power source. All components are powered by this component.
3. Connect the Amplifier **CHANNEL 1 OUTPUT** connector to a Loudspeaker **INPUT** connector and the Amplifier **CHANNEL 2 OUTPUT** connector to the other Loudspeaker **INPUT** connector with the 50-foot speaker cables.
4. Make sure that the Mixer and other component power switches are **OFF** and the Mixer and Amplifier level controls are set to the lowest levels.
5. Place the speakers and microphones where they will be used during the performance. Avoid placing microphones directly in front of speakers.

AMPLIFIER CONNECTIONS

Make sure that the Power Distribution Unit **ON-OFF** switch and the Amplifier **ON-OFF** switch are off before connecting any cables. Refer to the wiring diagram on page 23.

1. Connect an XLR Cable from **AMPLIFIER CH 1** Connector to Mixer **MIX R** Connector and XLR Cable from **AMPLIFIER CH 2** Connector to Mixer **MIX L** Connector.

CD-RW PLAYBACK AND CASSETTE RECORDING/PLAYBACK CONNECTIONS

Note: **LINE OUTPUTS 1** connect to the CD-RW Recorder.

LINE OUTPUTS 2 connect to the Cassette Deck and the CD-RW Recorder. If both are playing, the Cassette Deck has priority and the CD-RW Recorder is not heard.

Note: **LINE INPUTS 1** connect to the CD-RW Recorder.

LINE INPUTS 2 connect to the Cassette Deck

Make sure that the Power Distribution Unit **ON-OFF** switch is off before connecting any cables. Refer to the wiring diagram on page 24.

1. Using a RCA/Phono to 1/4-inch Internal Patch Cable, connect the CD-RW RCA Connector **LINEOUT 1 R** and **LINEOUT 1 L** to the Mixer 1/4-inch Connector **STEREO 2 R** and **STEREO 2 L**.
2. Using a RCA/Phono Internal Patch Cable, connect the Mixer RCA Connector **REC OUT R** and **REC OUT L** to Cassette RCA Connector **LINE INPUTS 2 R** and **LINE INPUTS 2 L**.
3. Using RCA/Phono to 1/4-inch Internal Patch Cables, connect the Cassette RCA Connector **LINEOUT 2 R** and **LINEOUT 2 L** to Mixer 1/4-inch Connector **STEREO 1 R** and **STEREO 1 L**.
4. Connect the Power Cord from the CD-RW Recorder/Cassette Deck to an unused receptacle on the Power Distribution Unit.

CD-RW PLAYBACK/RECORD AND CASSETTE PLAYBACK CONNECTIONS

Note: **LINE OUTPUTS 1** connect to the CD-RW Recorder.

LINE OUTPUTS 2 connect to the Cassette Deck and the CD-RW Recorder. If both are playing, the Cassette Deck has priority and the CD-RW Recorder is not heard.

Note: **LINE INPUTS 1** connect to the CD-RW Recorder.

LINE INPUTS 2 connect to the Cassette Deck

Make sure that the Power Distribution Unit **ON-OFF** switch is off before connecting any cables. Refer to the wiring diagram on page 25.

1. Using RCA/Phono to 1/4-inch Internal Patch Cables, connect the CD-RW RCA Connector **LINEOUT 1 R** and **LINEOUT 1 L** to Mixer 1/4-inch Connector **STEREO 2 R** and **STEREO 2 L**.
2. Using a RCA/Phono Internal Patch Cable, connect the Mixer RCA Connector **REC OUT R** and **REC OUT L** to Cassette RCA Connector **LINE INPUTS 1 R** and **LINE INPUTS 1 L**.

SYSTEM SETTINGS (CONTINUED)

CD-RW RECORD/PLAYBACK AND CASSETTE PLAYBACK CONNECTIONS CONTINUED

- Using a RCA/Phono to 1/4-inch Internal Patch Cable, connect the Cassette RCA Connector **LINEOUT 2 R** and **LINEOUT 2 L** to Mixer RCA Connector 1/4-inch Connector **STEREO 1 R** and **STEREO 1 L**.
- Connect the Power Cord from the CD-RW Recorder/Cassette Deck to an unused receptacle on the Power Distribution Unit.

CHANGE RECORD FUNCTION

To change from CD-RW recording to Cassette recording (or back again), reverse the cables on the back of the CD-RW/Cassette recorder as follows.

- Swap the cables in **LINEOUT 1 R** and **LINEOUT 1 L** and **LINEOUT 2 R** and **LINEOUT 2 L** (the cables in **LINEOUT 1 R** and **LINEOUT 1 L** are now in **LINEOUT 2 R** and **LINEOUT 2 L**). Likewise, the cables in **LINEOUT 2 R** and **LINEOUT 2 L** are now in **LINEOUT 1 R** and **LINEOUT 1 L**.

INITIAL SETTINGS

- Make sure that the Mixer, Amplifier, and CD-RW/Cassette power switches are in the **OFF** position.
- Set the Amplifier **CHANNEL 1** and **CHANNEL 2 GAIN** controls to 25 percent.
- Set the Mixer as follows.
 - Turn the **GAIN CONTROL** at each channel (red knob) fully counterclockwise.
 - Move the Faders to 0.
 - Set the **MASTER VOLUME** (yellow faders) to 0.

Note: Make sure that the **SOLO** and **MUTE** push buttons (above each Fader) are in the up position.

POWER UP THE SYSTEM

- Place the Power Distribution Unit power switch into the **ON** position.
- Make sure that the program sources (microphone, CD-RW/Cassette player, musical instruments) are present at the appropriate input channels.
- Power up the mixer, audio sources, and musical instruments. Refer to the Audio System Owner's Manual and other component manufacturer's User Guides for operating information.
- For Model 202, press the CD-RW Recorder/Cassette Deck **POWER** push button.
- Apply a performance level signal to the system.



SYSTEM SETTINGS (CONTINUED)

POWER UP THE SYSTEM CONTINUED

6. On the Mixer first channel with an input:
 - a. Press the **SOLO** push button.
 - b. Turn the **GAIN CONTROL** (red knob) clockwise until the Meter Display is in the amber section with occasional peaks to the first red LED.
 - c. Release the **SOLO** push button (place into the upper position).
 - d. Repeat steps 6a, 6b, and 6c on any other input channels.
 - e. Turn on the Amplifier.
 - f. Adjust the Master Volume Fader (**MIX R** and **MIX L**) two-thirds of the way up to about 15.
 - g. If feedback is detected, reduce the gain controls on the amplifier.
7. On the Amplifier:
 - a. Adjust the Amplifier **CHANNEL 1** and **CHANNEL 2 GAIN** controls until the desired loudspeaker volume is achieved.
 - b. Make sure that the **CHANNEL 1** and **CHANNEL 2 CLIP** LEDs are not illuminated. Occasional flashes are normal for very loud operation. However, if a **CHANNEL 1 CLIP** or **CHANNEL 2 CLIP** LED stays illuminated, reduce the **CHANNEL 1 GAIN** or **CHANNEL 2 GAIN** level.
 - c. Once the Amplifier Gain is set, adjust the system volume with the master volume faders.

TROUBLESHOOTING

Refer to each manufacturer's owner manual in the binder for detailed troubleshooting information.

1. Verify all cables are firmly connected.
2. Verify power is supplied to all components. Are there visible lights on each component?
3. Verify channels on the power amplifier are turned up. They should be set about three-quarters of the way up (turned clockwise).
4. Verify mixer settings are set so that volume sources are loud enough to hear an audible signal.

MANUFACTURER'S OWNER MANUALS

The following manufacturer's owner manuals are contained in this binder.

- Spirit Folio Users Guide
- Community MVP™ Series Owners Manual
- Middle Atlantic Products, Inc. Rackmount Power Strip
- QSC RMX™ Series Amplifier User Manual
- TASCAM CC-222 CD Recorder/Cassette Deck Owner's Manual

REPLACEMENT PART LIST

Model 201	Qty	Model 202	Qty
<u>Rack-mounted Components:</u>		<u>Rack-mounted Components:</u>	
Rack-mountable Case	1	Rack-mountable Case	1
Caster, Swivel	2	Caster, Swivel	2
Caster, Swivel, lockable	2	Caster, Swivel, lockable	2
Mixer, 6 channel	1	Mixer, 6 channel	1
Power Distribution Unit	1	Power Distribution Unit	1
Shelf, rackmountable, 5-1/4"	1	CD-RW Player/Cassette Player Recorder	1
Drawer, rackmountable, 7"	1	Drawer, rackmountable, 7"	1
Power Amplifier	1	Power Amplifier	1
Speaker/Microphone Stand Storage Bag	1	Speaker/Microphone Stand Storage Bag	1
Blank Panel, 1-3/4"	2	Blank Panel, 1-3/4"	2
Blank Panel, 3-1/2"	2	Blank Panel, 3-1/2"	2
Cable, internal patch, 6 ft, XLR Connectors	2	Cable, internal patch, 6 ft, XLR Connectors	2
Rack screw, washer, 3/4"	38	Rack screw, washer, 3/4"	38
		Internal Cables, RCA/Phono connectors	1
		Internal Cables, RCA/Phono to 1/4-inch connectors	4
		Screw, 10-32x3/4"	4
		Speaker/Microphone Stand Storage Bag	1
<u>Speaker Kit (2):</u>		<u>Speaker Kit (2):</u>	
Loudspeaker, LF 1 x 12", 2-way	1	Loudspeaker, LF 1 x 12", 2-way	1
Cable, 50 ft, 1/4" to Neutrik Speakon Connector	1	Cable, 50 ft, 1/4" to Neutrik Speakon Connector	1
Loudspeaker dust cover	1	Loudspeaker dust cover	1
<u>Speaker Stand</u>		<u>Speaker Stand:</u>	
Adjustable tripod speaker stand	2	Adjustable tripod speaker stand	2
<u>Microphone Set:</u>		<u>Microphone Set:</u>	
Microphone, dynamic	1	Microphone, dynamic	1
Tripod microphone stand with boom	1	Tripod microphone stand with boom	1
Cable, 16 ft, XLR connectors	1	Cable, 16 ft, XLR connectors	1

WARRANTY

Wenger Corporation will act as a contact and provide support for the Audio System. Call Wenger Corporation Customer Service with any questions or problems at 1-800-887-7145. While Wenger Corporation will coordinate customer service with each component manufacturer, the manufacturer of each Audio System component is responsible for that component warranty. The front pocket of the Owner's Binder, located in the Audio System Drawer, contains several manufacturer's warranty cards. It is important that these warranty cards are filled out with serial numbers and registered with each manufacturer within 30 days after receipt of the system. The warranty for each component is as follows:

<u>Component</u>	<u>Warranty</u>	<u>Extended Warranty</u>
Community Speakers	5 Years	NA
Soundcraft/Spirit Mixing Console	1 Year	NA
QSC Amplifier	1 Year	3 Years
Rane Equalizer	2 Year	3 Years
Sabine Feedback Extermination Unit	1 Year	NA
Tascam CD-RW/Cassette Player	1 Year	NA

