


Vertical Guide Pockets



- Vertical guide pockets, formally known as smoke pockets contain the sides of the curtain to reduce the passage of smoke and house the curtain guides
- Pockets consist of a 6" (152 mm) or 8" (203 mm) deep "Z" channel and 18" (457 mm) wide plates, all formed from 1/4" (6 mm) steel plate in 5' (1524 mm) and 10' (3048 mm) lengths; the removable 18" (457 mm) plates make pocket and curtain installation faster and simpler than one piece designs
- 6" (152 mm) pockets are used with most straight lift curtains; 8" (203 mm) deep pockets are used with brail fire curtains
- All connections are bolted for serviceability
- Sections anchor to the building with 1/2" (13 mm) bolts or anchors on 4' (1219 mm) centers
- Pockets with guide tracks are used for fire curtains with 016-370 roller guides
- Three-year warranty against defects in materials or workmanship is provided on all J.R. Clancy equipment, additional warranty information is available at jrclancy.com

Order Information

Number	Description	Weight
016-106005	Vertical Guide Pocket Assembly, 6" deep Wire Guided, 5' long (152 mm x 1524 mm)	111 lb (50.3 kg)
016-106010	Vertical Guide Pocket Assembly, 6" deep Wire Guided, 10' long (152 mm x 3048 mm)	222 lb (100.6 kg)
016-108005	Vertical Guide Pocket Assembly, 8" deep Wire Guided, 5' long (203 mm x 1524 mm)	119 lb (54 kg)
016-108010	Vertical Guide Pocket Assembly, 8" deep Wire Guided, 10' long (203 mm x 3048 mm)	238 lb (108 kg)
016-106T05	Vertical Guide Pocket Assembly, 6" deep Track Guided, 5' long (152 mm x 1524 mm)	125 lb (56.7 kg)
016-106T10	Vertical Guide Pocket Assembly, 6" deep Track Guided, 10' long (152 mm x 3048 mm)	250 lb (113.4 kg)

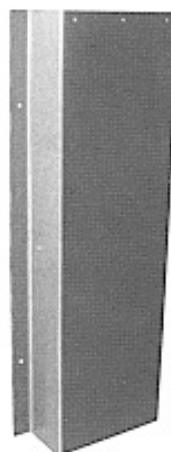

**Vertical Guide
Pocket
016-106005**

