




# Assembly Instructions

## Keyboard Mount Accessory


### for Flex® TechBridge

**Basic Instructions to be used with the Keyboard Mount Accessory for Flex® TechBridge only!**  
**For other component information, refer to the Flex TechBridge Owner's Manual 236A153.**

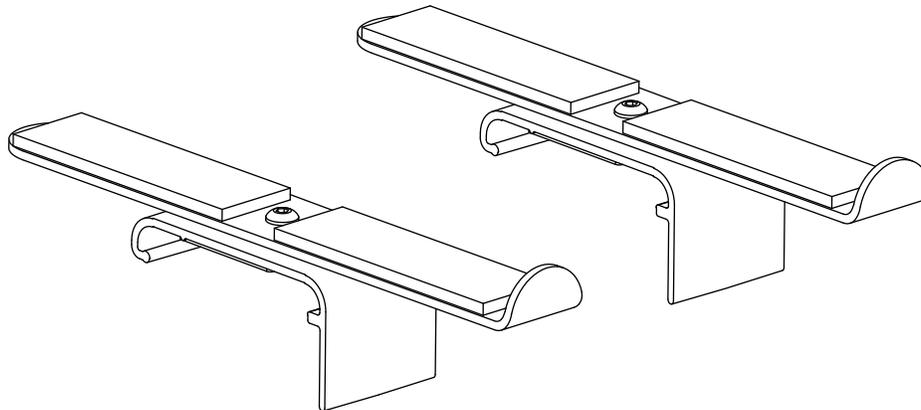

Keyboard Mount Accessory

### Parts List

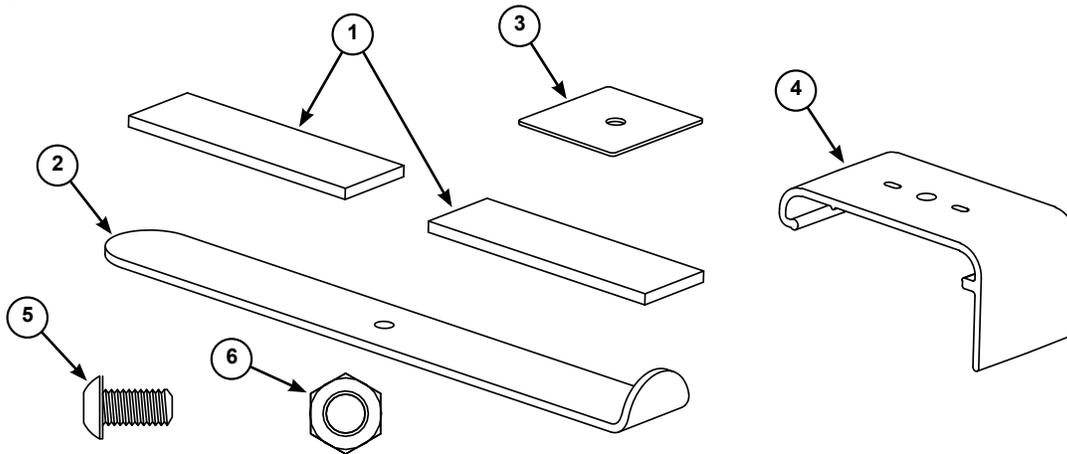


Item	Qty	Description	Item	Qty	Description
1	4	Self-Adhesive Pad	4	2	Bridge Clip
2	2	Keyboard Mount Bar	5	2	Socket Screw, 3/8-16 x 3/4"
3	2	Keyboard Mount Plate	6	2	Jam Nut, 3/8-16

**Note:** Please read and understand these instructions before assembling.  
**Note:** If you need additional information, contact Wenger Corporation using the information below.

## Assembly

1. Attach a keyboard mount bar (2) to a bridge clip (4) using one 3/8-16 x 3/4" socket screw (5), one keyboard mount plate (3) and one 3/8-16 jam nut (6).
  - a. Tighten until the keyboard mount bar cannot rotate, then loosen the jam nut until the keyboard mount bar can be rotated, but still has enough friction to stay in place when positioned.
  - b. Repeat this step for the other keyboard mount bar assembly.
2. Apply two self-adhesive pads (1) to each keyboard mount bar as shown. Peel off the protective paper layer and press the pads onto the bar.

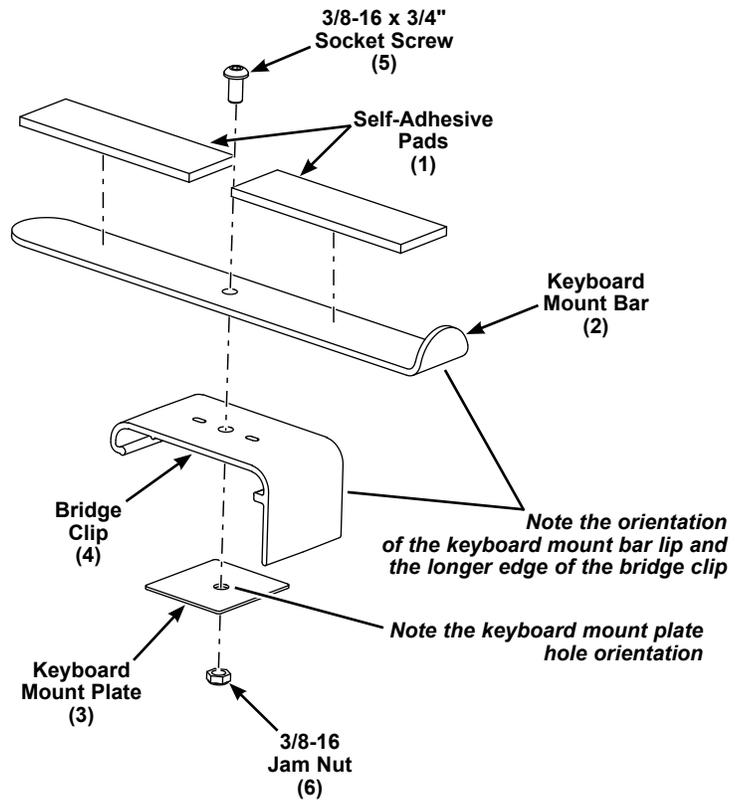

3. Attach the assembled keyboard mounts to the bridge extrusion by inserting the short sides of the bridge clips into the outside groove. Press down to snap the long sides of the bridge clips into place.
4. Place the keyboard on the mounts and rotate the support bars until they wedge against the keyboard to hold it in place.
5. To reposition or remove the keyboard mounts, release the bridge clips by pulling on the release handle (long side of the clip) and rotate forward.

