


**Island
Mounted Locker**

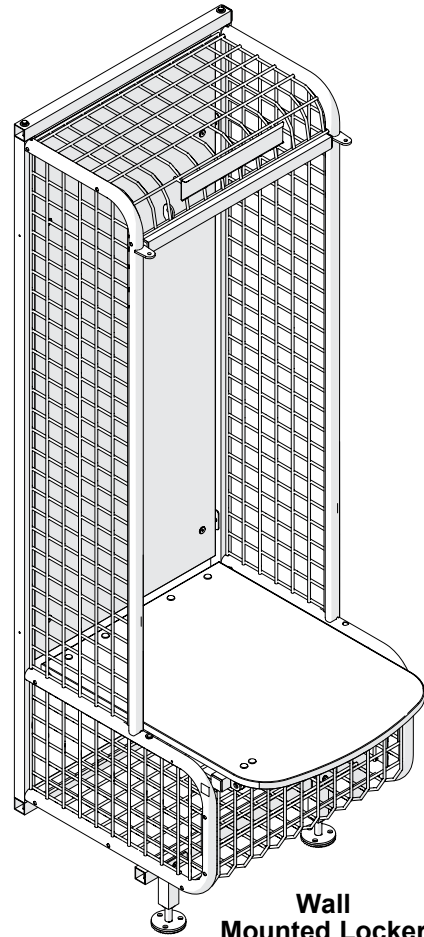

**Wall
Mounted Locker**

Contents

Before Installation	2	Island Mounted Locker Installation	3
Required Tools	2	Wall Mounted Locker Installation	4
Island Mounted Locker Fasteners	2		
Wall Mounted Locker Fasteners	2		



Visit the GearBoss web page at www.gearboss.com for detailed instructions and videos.

Note: Please read and understand the instructions before starting the assembly or installation.

Note: If you need additional information, contact Wenger Corporation using the information below.


Before Installation

The Back Panel Kit is only intended to be installed on GearBoss AirPro Lockers. A separate kit is available for either island mounted configurations or wall mounted configurations, these instructions detail both procedures. See the original instructions for additional locker information.


Required Tools

- Cordless Drill with Phillips and 5/32" Hex Bit
or
- Phillips Screwdriver and 5/32" Hex Wrench

Island Mounted Locker Fasteners

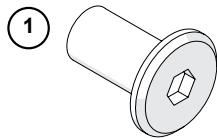


**1/4-20
Hex Cap Nut**

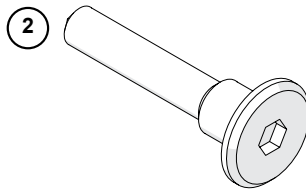


**1/4-20 x 1.575"
Machine Screw**

Wall Mounted Locker Fasteners

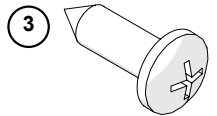

**#10-5/8"
Sheet Metal Screw**

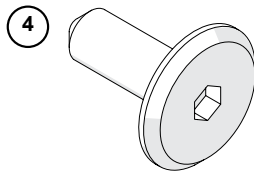


**1/4-20 x .708"
Machine Screw**

Island Mounted Locker Installation

**This is the procedure for installation on Island Mounted Lockers.
For installation on Wall Mounted Lockers, go to the next page.**

1. Remove any shelves and hooks from inside of the lockers.
2. Align both Back Panels through the inside rear of opposing lockers.
The pilot holes fit to the grid pattern as shown in the detail.
3. Connect the Back Panels together using one 1/4-20 Hex Cap Nut and one 1/4-20 x 1.575" Machine Screw in each corner.
4. Reattach any previously removed shelves and hooks.

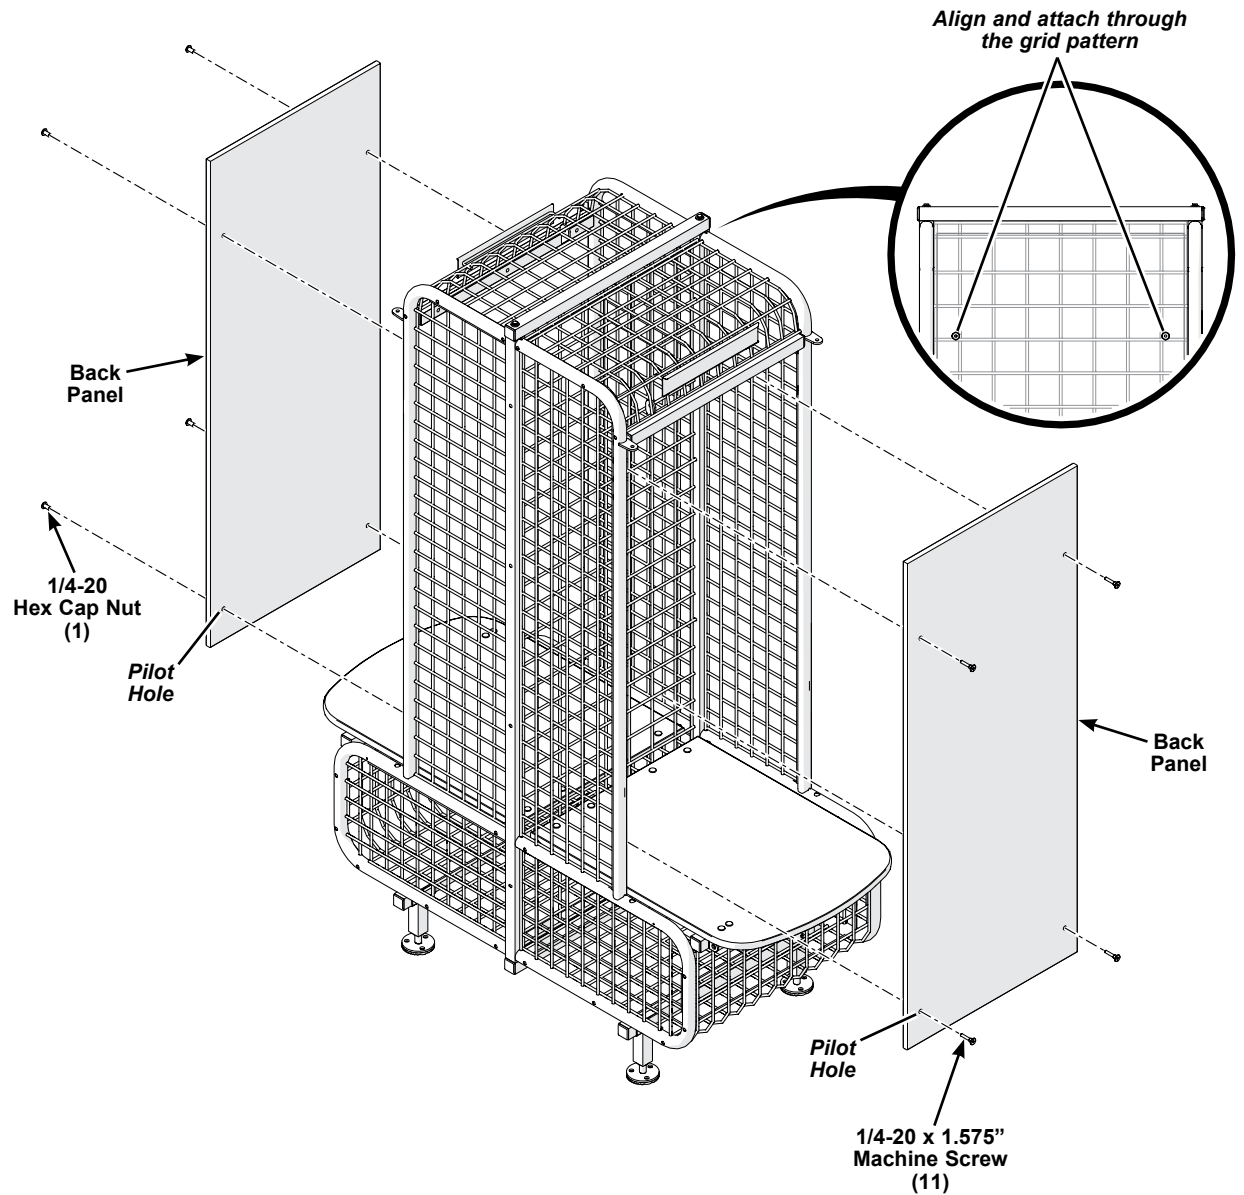

Wall Mounted Locker Installation

This is the procedure for installation on Wall Mounted Lockers.
For installation on Island Mounted Lockers, go to the previous page.

1. Remove any shelves and hooks from inside of the lockers.
2. Attach one Mounting Bracket to the existing hole at each inside corner of the locker frame using one #10-5/8" Sheet Metal Screw (3) as shown.
3. Fit the pilot holes in the Back Panel onto the Mounting Brackets and attach each corner using one 1/4-20 x .708" Machine Screw (4).
4. Reattach any previously removed shelves and hooks.

