



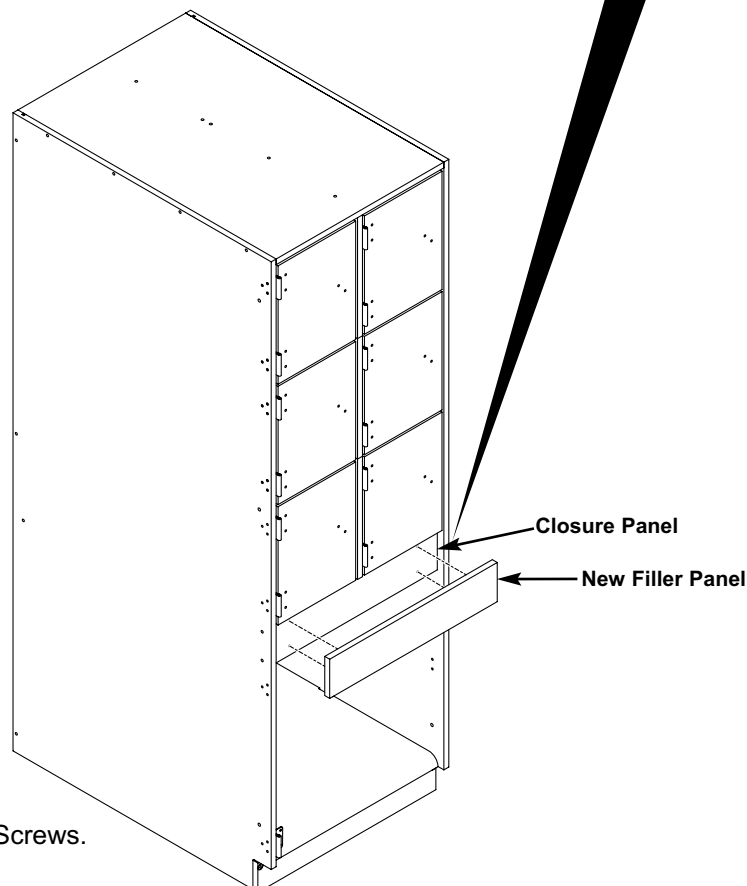

## Assembly Instructions Filler Panel (for retrofit of Cabinets 3, 6 and 7)

1. Drill 4 holes through the front of the closure panel using a 3/16" or 5 mm diameter drill. These holes should be located 3" in from the left and right ends of the closure panel and 1.5" from the top and the bottom of the closure panel.
2. To align the new filler panel (overlaps the existing closure panel), push the upper edge of the filler panel against the divider panels. Filler panel should be parallel to the bottom edge of the closure panel.
3. Clamp the filler panel securely to the closure panel using **padded clamps**.
4. Insert the 4 screws (included in the kit) from the back side of the closure panel (inside of the cabinet) until the heads of the screws are snug. **Do not overtighten.**
5. Remove the clamps.

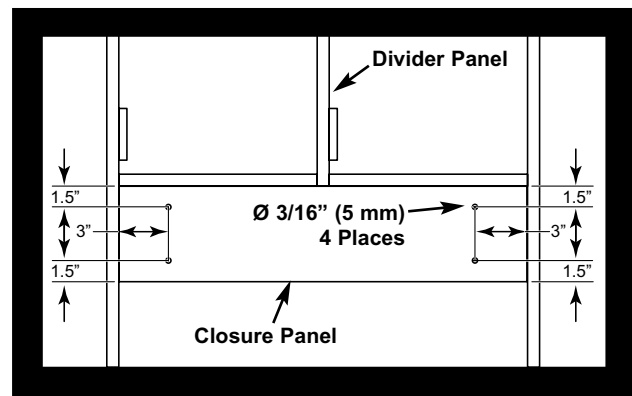

### Included in the kit:

- (1) filler panel
- (4) #8 x 1.25 PFH Wood Screws.