


**Basic Instructions only!**  
For Replacement Parts and more detailed product information,  
refer to the StageTek™ Owner's Manual 280A099.

**⚠ CAUTION**  
*Make sure anyone assembling  
or installing the StageTek  
component has read and  
understands the instructions.*

**⚠ CAUTION**  
*Always comply with Warnings  
or Cautions in the instructions  
or posted on the equipment.*

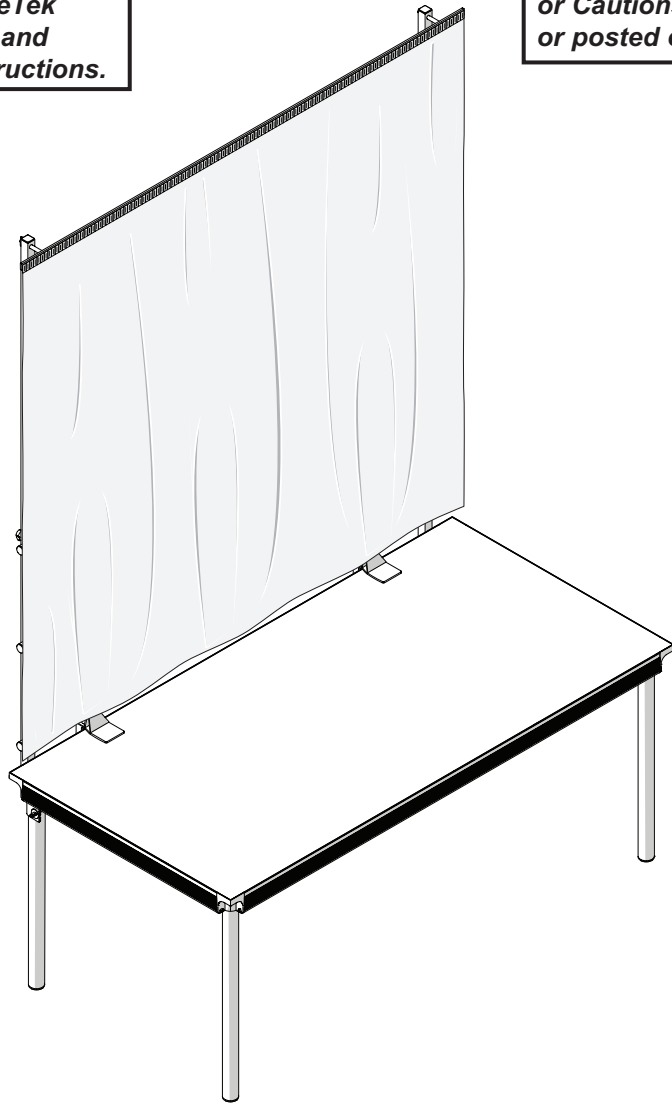

Visit the StageTek web page at [www.wengercorp.com](http://www.wengercorp.com) for detailed instructions and videos.

**Note:** Please read and understand the instructions before starting the assembly or installation.  
**Note:** If you need additional information, contact Wenger Corporation using the information below.


## GETTING STARTED

Before beginning the Backdrop Kit assembly, note the following considerations:


- The Backdrop Kit must be used along with the Guardrail Assy (not included).
- The Backdrop Kit is available in 3', 4', 6' and 8' standard widths and supports 8' tall drapery.
- Drapery is shipped separately from the supplier.
- A 9/16" Wrench is required for assembly.

## ASSEMBLY


1. Attach a Leg Clamp Assembly to both of the Uprights with one 3/8-16 x 4" Capscrew and 3/8-16 Lock Nut using a 9/16" Wrench as shown. Face both Leg Clamp Assemblies outward, creating a right-hand Upright and a left-hand Upright.
2. Screw a Knob into both of the Uprights as show. The Knob only needs to be screwed in far enough to hold it in place.

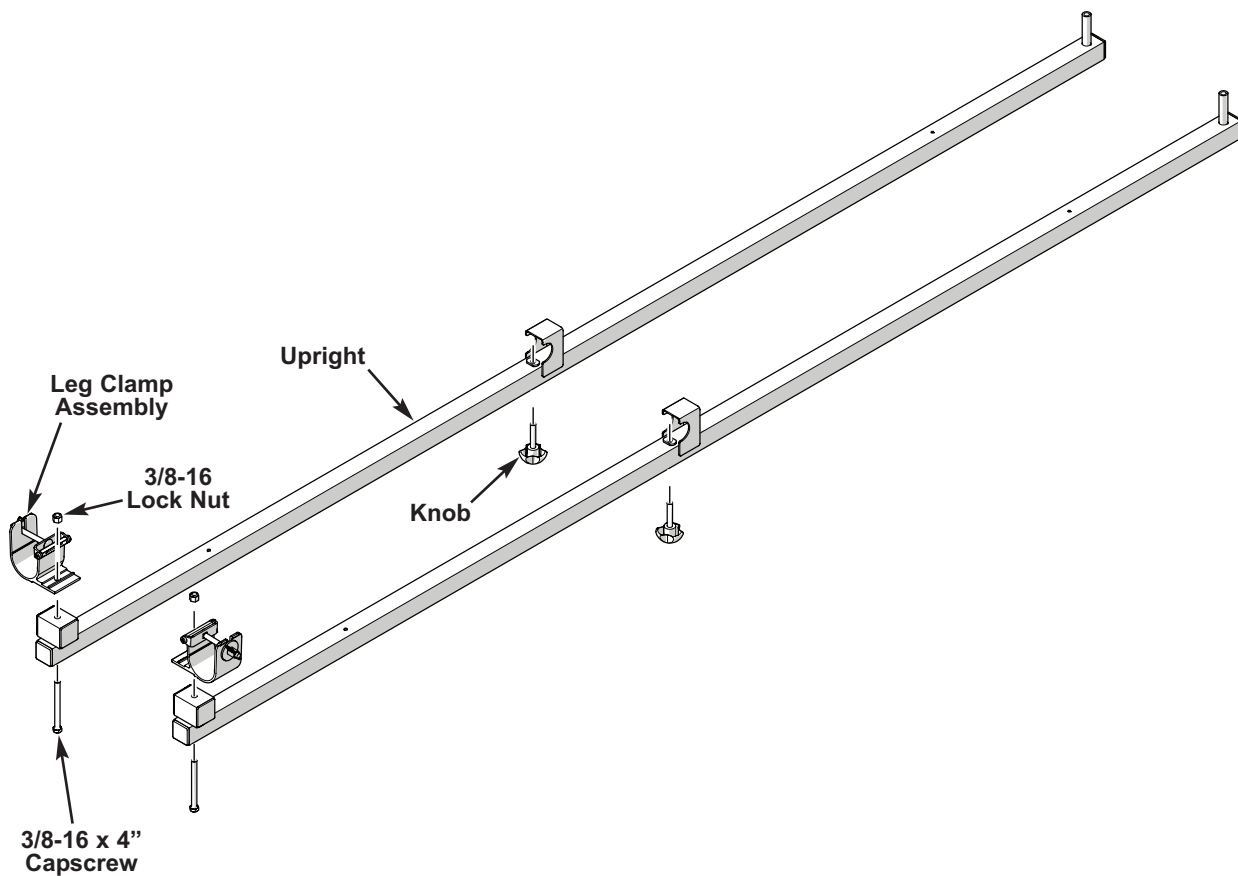

3. Attach both Uprights to the Guardrail Assembly and Platform Deck.
  - a. The Guardrail Assembly must be centered on the Platform Deck and properly attached.
  - b. With the Wing Nut on the Leg Clamp Assembly facing toward the outside, fit the cut-out Weldment of the Upright over the Top Rail and rotate it downward.
  - c. Secure the Leg Clamp Assembly to the Rear Leg of the Platform Deck.
  - d. Hand-tighten the Knob on the Upright to secure it to the Top Rail.

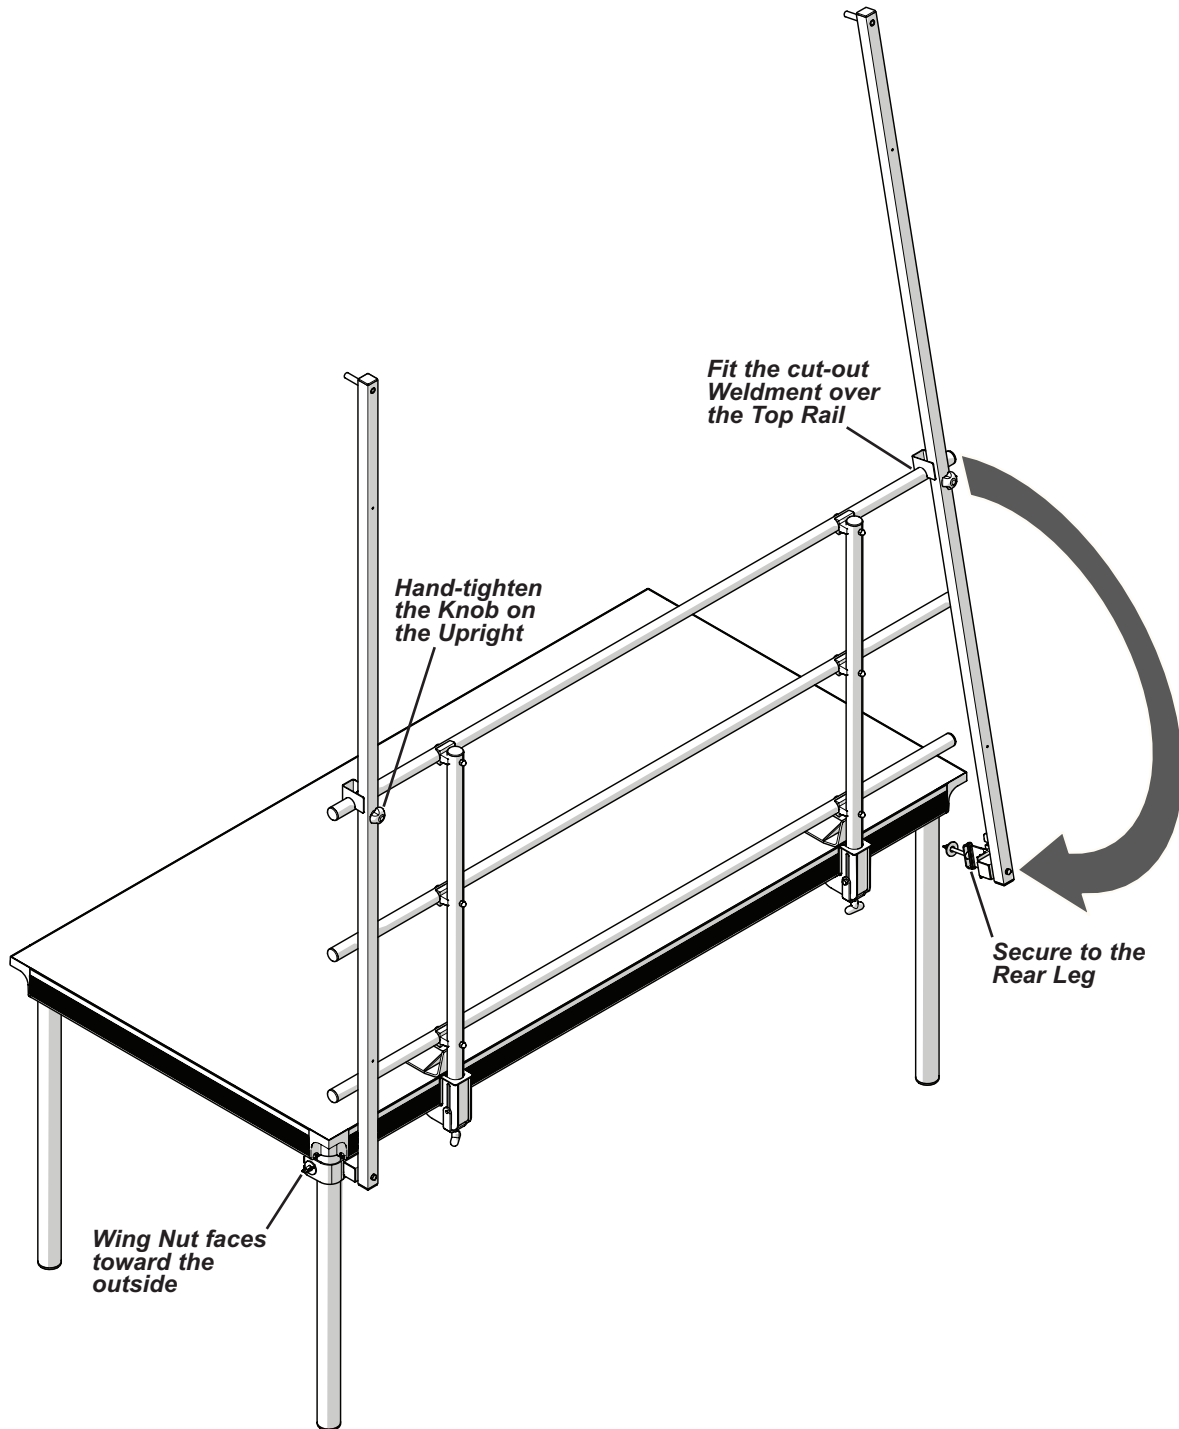

4. With the Velcro® surface facing the Platform Deck side, attach the Horizontal Bar to the top of both Uprights using two 3/8-16 x 5" Capscrews and 3/8-16 Wing Nuts.

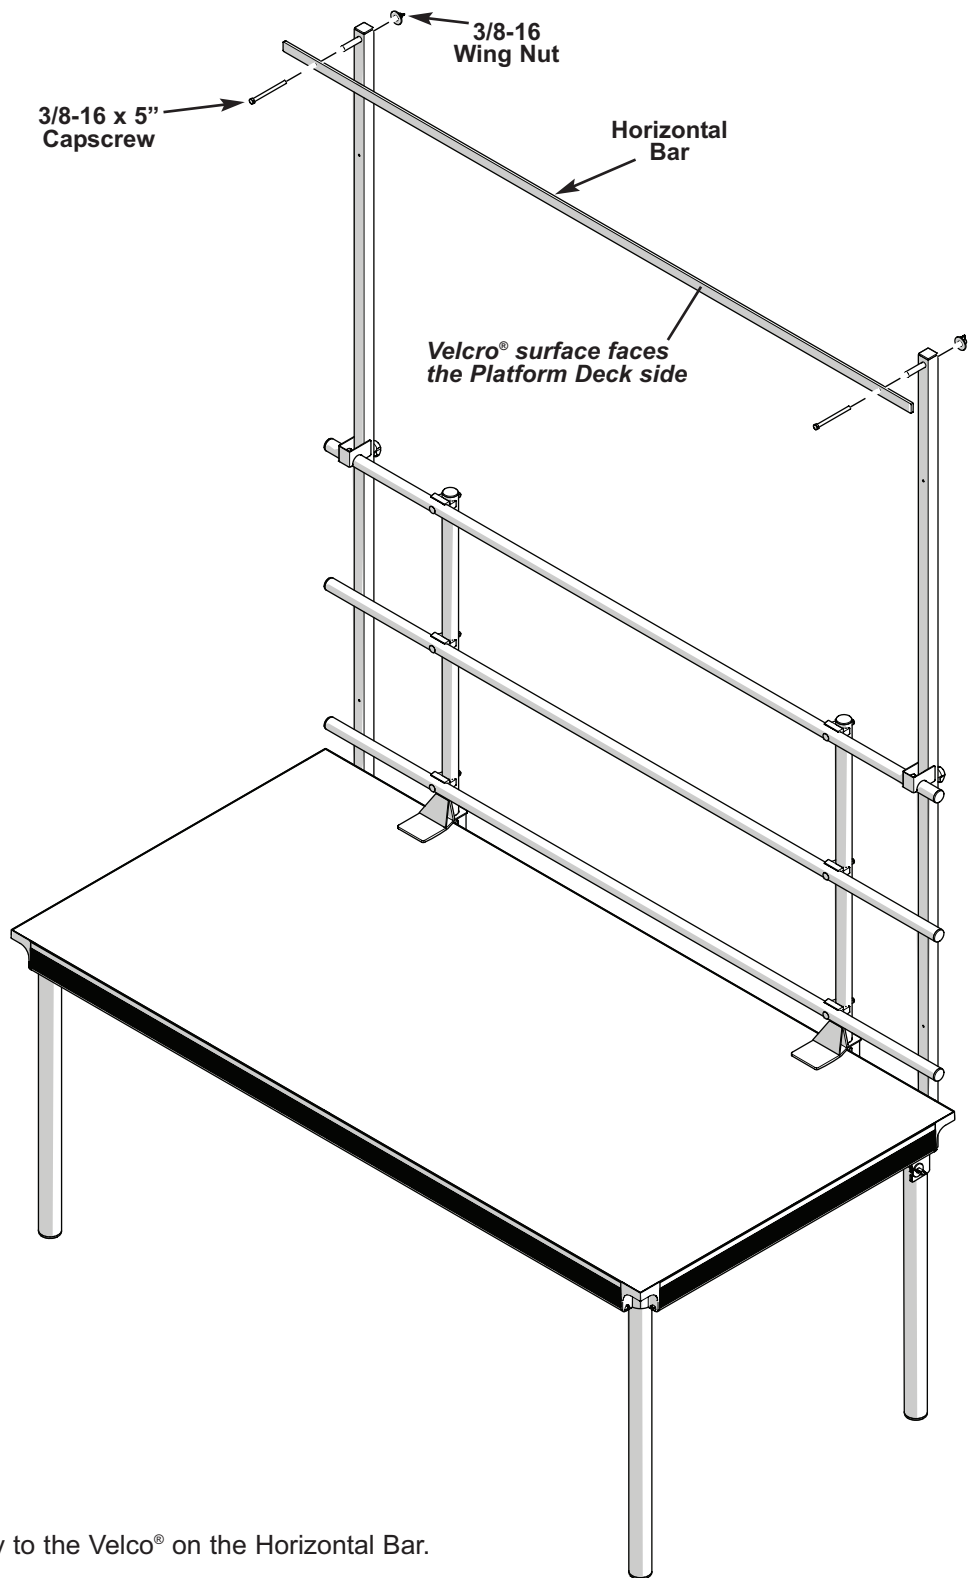

5. Attach the Drapery to the Velcro® on the Horizontal Bar.