


Assembly Instructions

Tourmaster Siderail Lockdown

ATTENTION: HOOKS HAVE OPPOSITE THREADS

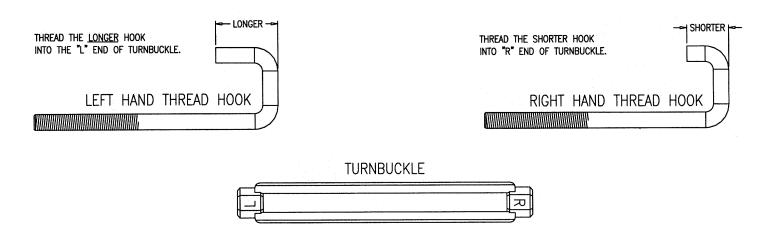

HOOKS MUST BE THREADED IN EQUALLY, APPROXIMATLY 1/4" INSIDE TURNBUCKLE

