



# Installation Instructions Connecting StageTek® ADA Ramp to Trouper® Staging

## Basic Instructions only!


For Replacement Parts and more detailed product information, refer to the original ADA Ramp Assembly Instructions 282A301 or Trouper Owner's Manual 176A700.

### **CAUTION**

*Make sure anyone assembling or installing these components has read and understands the instructions.*

### **CAUTION**

*Always comply with Warnings or Cautions in the instructions or posted on the equipment.*

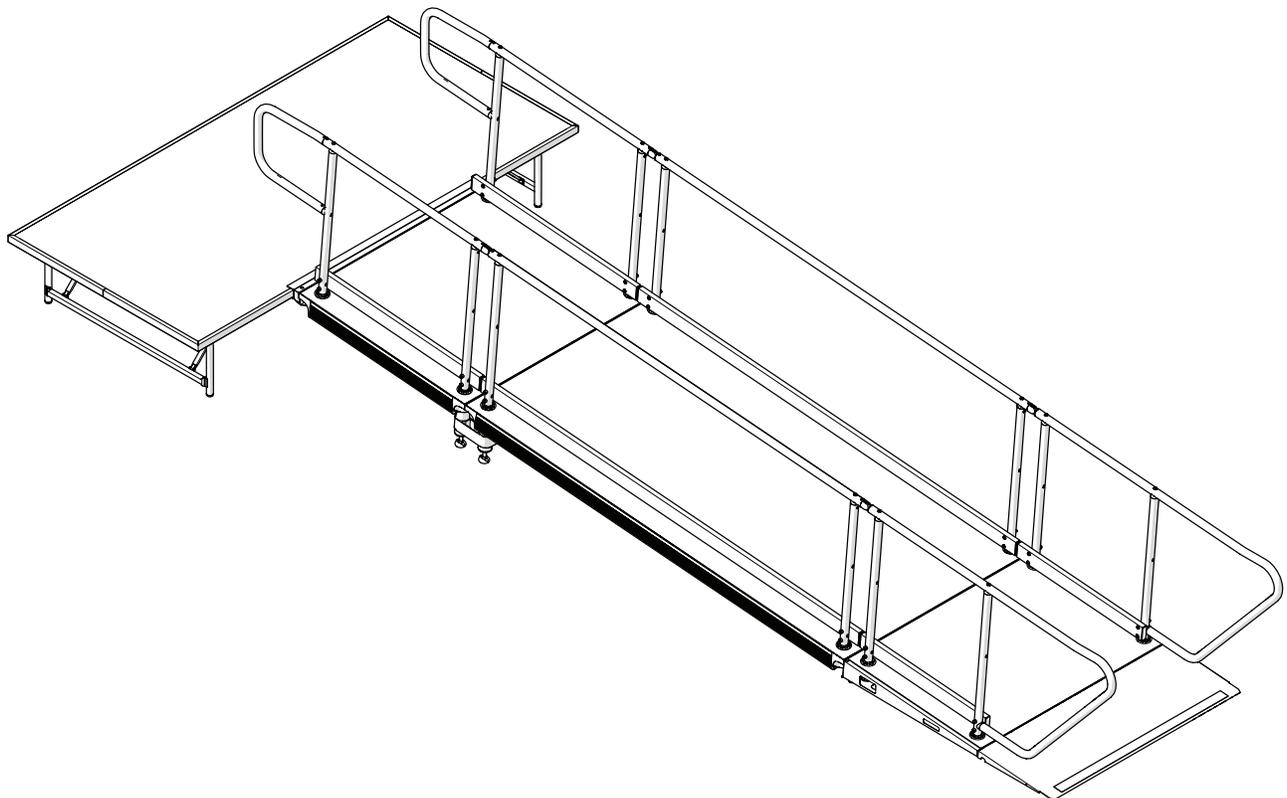

Visit the Staging & Platforms web page at [wengercorp.com](http://wengercorp.com) for detailed instructions and videos.

**Note:** Please read and understand these instructions before installing.


**Note:** If you need additional information, contact Wenger Corporation using the information below.

1. Attach the bridging bracket to the Trouper staging deck.

**Be sure that the existing stage is level and that the height is the same as the specified height of the ADA ramp. All railings should already be installed on the existing stage.**

**Be sure that the ramp surfaces are flush to avoid trip hazards.**

- a. Fit the bridging bracket onto the edge of the Trouper deck as shown.
- b. Secure the bracket to the underside of the deck by inserting and tightening the four knobs.

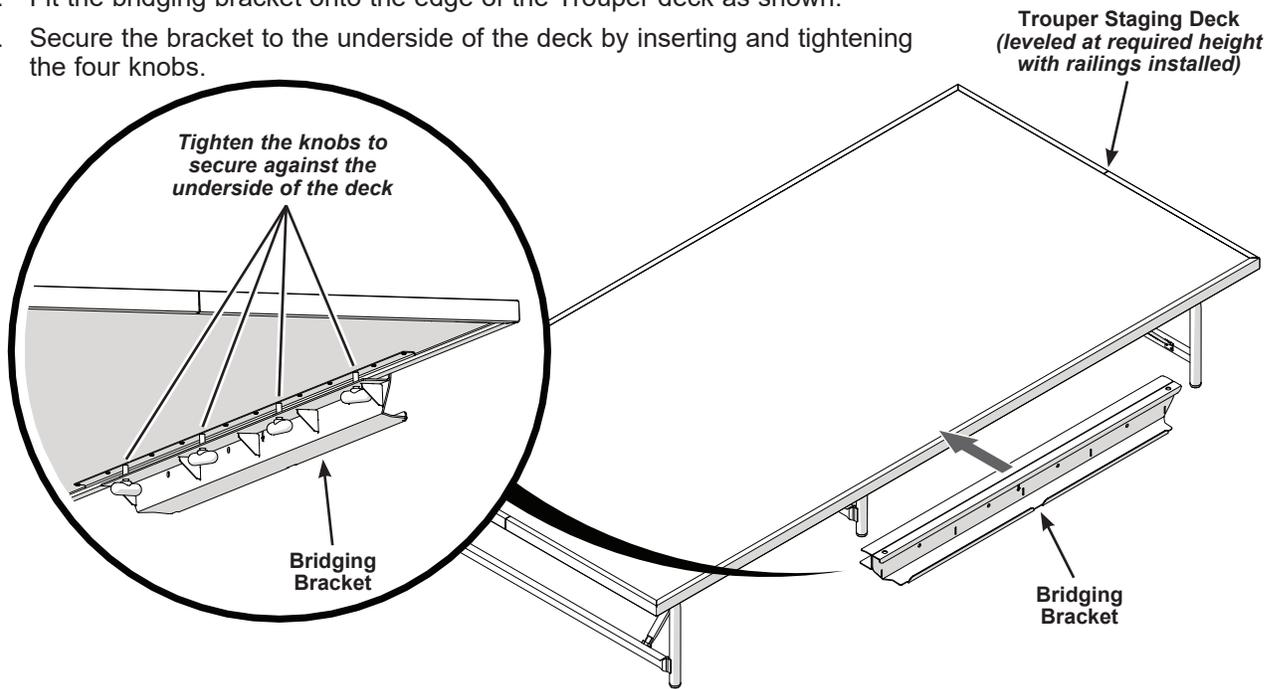

2. Lift the StageTek ADA Ramp to sit on the bridging bracket.

**⚠ WARNING**  
The ramp can be unstable if not connected to the stage properly.

**⚠ CAUTION**  
To avoid damage and injury, some ramps may require more than one person to lift.

