

### Contents

Important User Information .....	2	Assembly .....	3
Safety Precautions .....	2		



Visit the Active Acoustics web page at [wengercorp.com](http://wengercorp.com) for more information.

**Note:** Please read and understand these instructions before proceeding.  
**Note:** If you need additional information, contact Wenger Corporation using the information below.

# Important User Information

---

## General

Copyright © 2026 by Wenger Corporation

All rights reserved. No part of the contents of this manual may be reproduced, copied, or transmitted in any form or by any means including graphic, electronic, or mechanical methods or photocopying, recording, or information storage and retrieval systems without the written permission of the publisher, unless it is for the purchaser's personal use.

Printed and bound in the United States of America.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Wenger Corporation. Wenger Corporation does not assume any responsibility for any errors that may appear in these instructions.

In no event will Wenger Corporation be liable for technical or editorial omissions made herein, nor for direct, indirect, special, incidental, or consequential damages resulting from the use or defect of these instructions. The manufacturer reserves the right to change this product at any time.

The information in this document is not intended to cover all possible conditions and situations that might occur. The end user must exercise caution and common sense when assembling or installing Wenger Corporation products. If any questions or problems arise, call the Wenger Corporation at (800) 4WENGER (493-6437) or +1-507-455-4100 worldwide.

## Manufacturer

The Transcend® Stage Storage Cart is manufactured by:

Wenger Corporation  
555 Park Drive  
Owatonna, MN 55060  
(800) 4WENGER (493-6437) • +1 (507) 455-4100  
wengercorp.com

## Intended Use

- This product is intended for indoor use in normal ambient temperature and humidity conditions – it must not be exposed to prolonged outside weather conditions.
- This product is intended to be assembled, installed and used only as described in these instructions

## Warranty

Warranty information is available at [wengercorp.com](http://wengercorp.com).

# Safety Precautions

---

Throughout this document you may find cautions and warnings which are defined as follows:

- **WARNING:** Failure to follow the instruction could result in serious injury or damage to property.
- **CAUTION:** Failure to follow the instruction could result in minor injury or damage to property.

Read and understand all of these safety instructions before any assembly, installation or use.

### CAUTION


*Make sure anyone assembling, installing or using this product has read and understands these instructions.*

### CAUTION

*Failure to comply with Warnings and Cautions in this document or on the equipment can result in damage to property or serious injury.*

# Parts List

Item	Description	Item	Description	Item	Description
1	Caster Bracket	10	Bottom Mid Bracket	19	8-18 x 1/2" Self Drilling Screw
2	Pull Handle	11	Rubber Pad	20	3/8-16 x 2-1/2" Capscrew
3	45° Strap (not shown)	12	Angled Cradle	21	5/16-18 Lock Nut
4	Bottom Tube	13	Flat Cradle	22	Tube Plug
5	Hanger Tube	14	Tape	23	3/8-16 Lock Nut
6	Upright Tube	15	1/4" Flat Washer	24	5/16-18 x 3-1/4" Capscrew
7	Speaker Hanger Tube	16	5/16-18 x 2-1/4" Carriage Bolt	25	10-16 x 3/8" Sheet Metal Screw
8	Upright Bracket	17	6" Caster		
9	Top Support Bracket	18	5/16-18 x 1" Carriage Bolt		

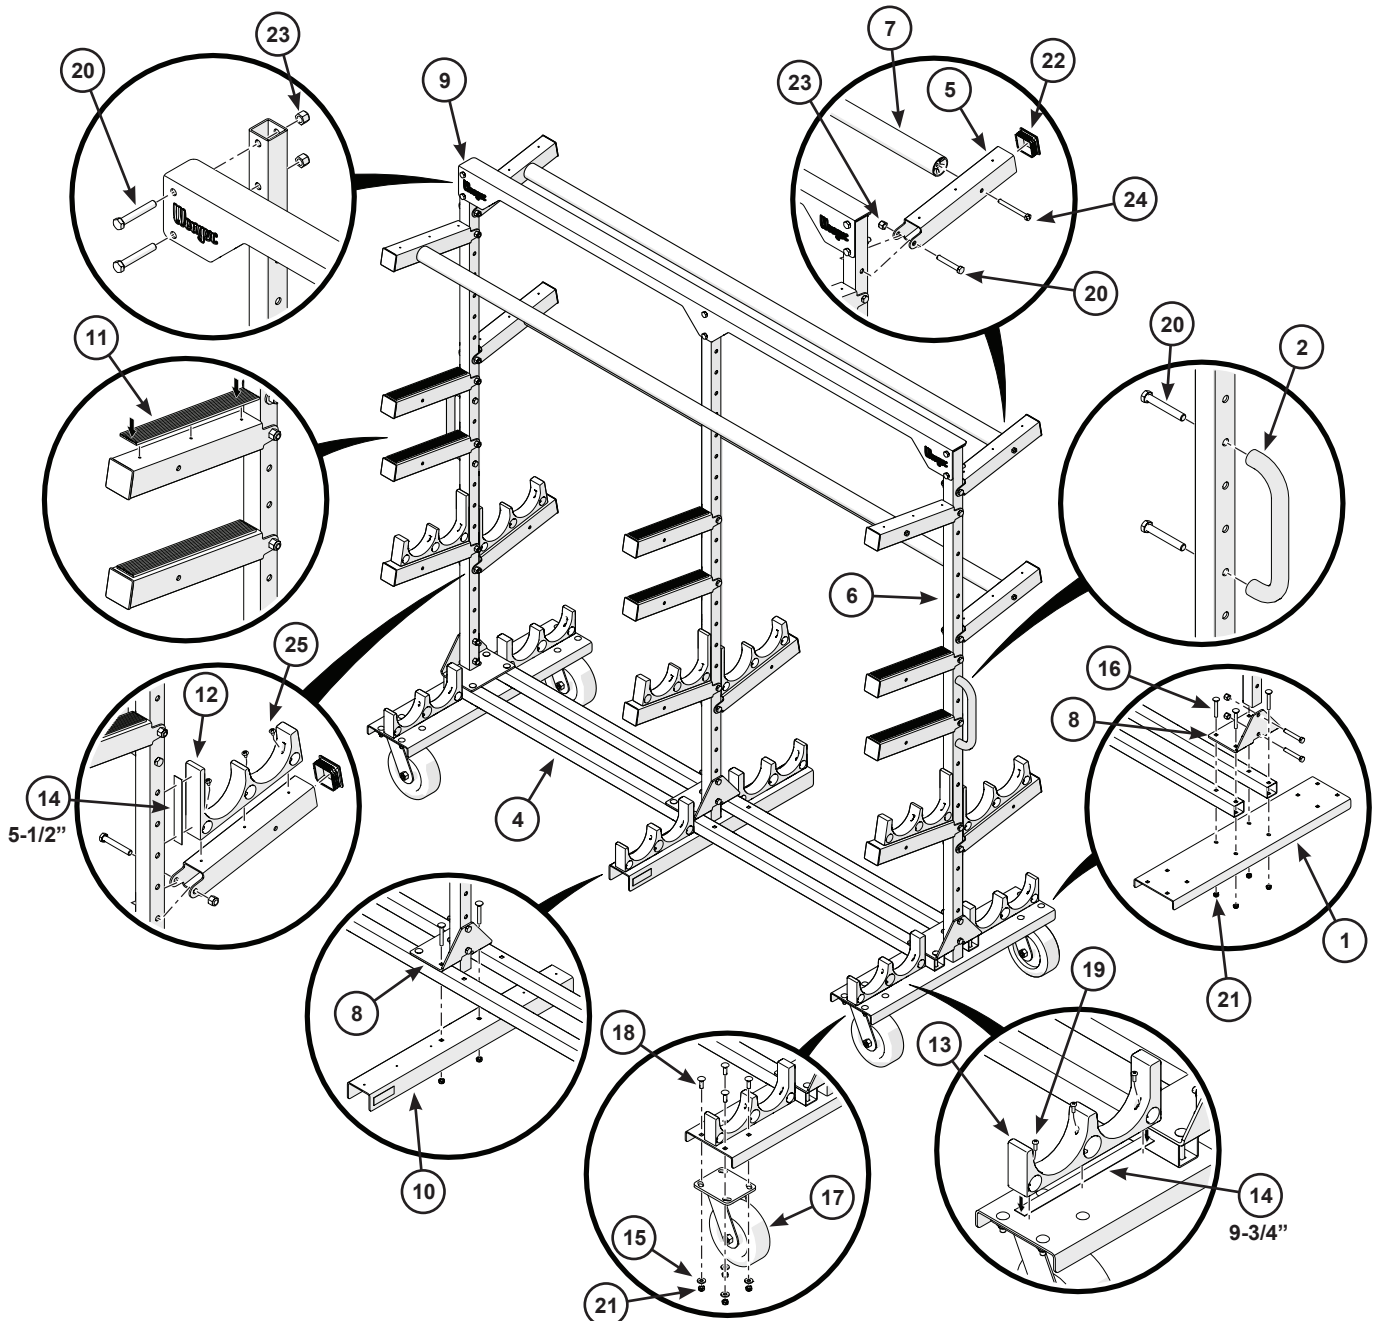

## ***Assembly***

---

Contact Wenger Corporation for the Transcend Stage Storage Cart assembly procedure.